



Quick guide

REPLACE THE RUBBER SEAL / SPEAKER FRONT GRILLE




D21x series

The D21x is for historical reasons available in different designs and with different front seals and loudspeaker front grilles . These instructions are valid for all existing models.

1.1 Remove the old rubber seal of the electrical main unit. Remaining adhesive residues do not have to be removed.




1.2 Depending on the model: Remove the overlapping adjusting gib on both sides of the speaker openings.

2 Place the grille on the speaker openings. The holes for light sensor, microphone and security screws should lie on top of each other.

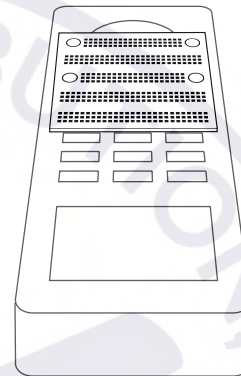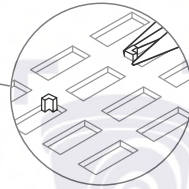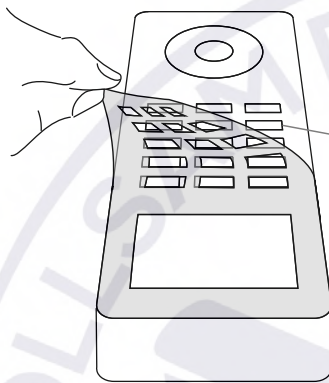

3 Pull off the carrier film of the new rubber seal and stick it on the electrical main unit.

4 DONE.

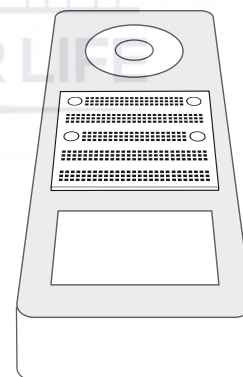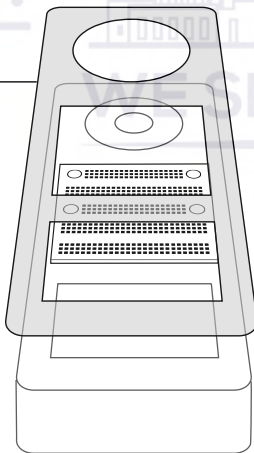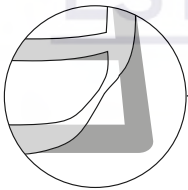

Distributed By

Collsam Distributions; Inc.

Sales: (951) 282-8707 sales@Collsam.com

Support: (213) 210-5744 support@Collsam.com

Website: www.Collsam.com

