
Digital Video Recorder

User's Manual

XVST MAGIC 04/08/08P/16P/16M
XVST NMS 04/08/16

Thank you for using our product.

1. This is user's manual for H.264 HD DVR (Digital Video Recorder).
2. This manual contains product specification and introduction, installation guide, operating guide and other necessary matters for easy understanding. Users should read this user's manual carefully for proper use.
3. Contents in this manual may be changed according to the specification change and feature improvement without any notification.
4. This user's manual shall never be copied without prior agreement and violating this may be a reason for legal punishment on piracy.
5. If there is any incorrect or insufficient content in this user's manual, notify it to Customer Support Center.



Contents

CH 1. Product Introduction`

1-1. Product Contents	5
1-2. Specifications	7
1-3. Product Characteristics	11
1-4. Name of Each Part	13

CH 2. Installation Guide and Cautions

2-1. Cautions	19
2-2. Product Installation	22
2-2-1. Power Connection	22
2-2-2. Connecting External Device	22

CH 3. How to Use

3-1. General Usage Information	26
3-2. Live Mode	27
3-2-1. Live mode control	27
3-2-2. Live mode feature	29
3-3. Search Mode	35
3-3-1. Search selection type	35
3-3-2. Play Mode	39
3-4. Setup Mode	40
3-4-1. Display	40
3-4-2. Record	45
3-4-3. Device	50
3-4-4. Network	65
3-4-5. System	72
3-5. Firmware Upgrade	78

Contents

Trouble Shooting	80
Warranty	81
Appendix A CMS(Client Management Software)	82
Appendix B Catcheye for Android mobile	120
Appendix C Catcheye for iPhone	126
Appendix D How to Connect xbox1	132

EST.


1998

WE SECURE YOUR LIFE

CH1. Product Introduction

1-1. Product Contents(MAGIC 04/08, NMS 04/08)

 After removing packing materials of this product, check whether all following contents are included.



Main Body (DVR):

This converts the analog video and audio signal to the digital signal and saves on HDD.



Adapter:

This 12V adapter supplies power to the product.



Power Cable:

This connect the adapter and the power source.



MOUSE:

This is an controller for convenience.



Program CD:

This contains the User's manual and Client Program for DVR.



Remote Controller:

This is an IR remote controller for convenience.



Battery:

These are 2(two) battery for the remote controller.

1-1. Product Contents(MAGIC 08P/16P/16M, NMS 16)

After removing packing materials of this product, check whether all following contents are included.



Main Body (DVR):

This converts the analog video and audio signal to the digital signal and saves on HDD.



Adapter:

This 12V adapter supplies power to the product.



Power Cable:

This connect the adapter and the power source.



MOUSE:

This is an controller for convenience.



Program CD:

This contains the User's manual and Client Program for DVR.



Remote Controller:

This is an IR remote controller for convenience.



Battery:

These are 2(two) battery for the remote controller.

1-2. Specifications(MAGIC)

Model		MAGIC Series					
		MAGIC 4	MAGIC 8	MAGIC 8P	MAGIC 16P	MAGIC 16M	
		Compact case		19" rack type			
Video	Camera input	4 BNC	8 BNC	8 BNC	16 BNC	16 BNC	
	Individual HD/Analog selectable	All Hybrid(Patent)					
	Available source	720p25,30,50,60/1080p25,30,50,60/1080i50,60/Composite/960H/Mixed					
	Output	1 HDMI+1 VGA (simultaneously) / 1 Programmable SPOT with OSD					
Audio	Audio input	4 RCA	8 RCA	8 RCA	16 RCA	16 RCA	
	Output	1 RCA					
	Sensor In	4 (NC/NO)	8 (NC/NO)	8 (NC/NO)	16(NC/NO)	16(NC/NO)	
	Alarm out	1 relay	6 TTL, 2 relay	6 TTL, 2 relay	14 TTL, 2 relay	14 TTL, 2 relay	
	Operating System	Embedded Linux OS					
Display	Speed	Real Time					
	Resolution (Pixel)	1280X1024, 1280X720, 1920X1080					
	Split screen	1,4	1,4,6,8,9	1,4,6,8,9	1,4,6,8,9,13,16	1,4,6,8,9,13,16	
Recording	CODEC	H.264 / JPEG for 3G, Dual CODEC					
	Resolution (Pixel)	720p, 1080p,1080i, 960H, 720H, Mixed					
	Picture quality	4 steps (Super, High, Medium, Low)					
	Speed	NTSC area PAL area	120fps@1080p 100fps@1080p	240fps@1080p 200fps@1080p	240fps@1080p 200fps@1080p	480fps@1080p 400fps@1080p	480fps@1080p 400fps@1080p
Playback	Display	1,4	1,4,8	1,4,8	1,4,6,8,9,13,16	1,4,6,8,9,13,16	
	Search mode	Calendar, Event ,POS , Panorama, Thumbnail					
	Speed	NTSC PAL	60fps@1080p 100fps@1080p	120fps@1080p 200fps@1080p	120fps@1080p 200fps@1080p	120fps@1080p 200fps@1080p	480fps@1080p 400fps@1080p
	Fast/Slow speed	Normal, REW & FF [recorded speed x2, x4, x8, x16,x32,x64,x1/2,x1/4], Frame to frame, Pause					

1-2. Specifications(MAGIC,continued)

Model		MAGIC Series				
		MAGIC 4	MAGIC 8	MAGIC 8P	MAGIC 16P	MAGIC 16M
		Compact case			19" rack type	
Network	Network Interface	Gigabit Ethernet				
	Speed	15fps@1080p	60fps@1080p		120fps@1080p	
	Protocol	TCP/IP, HTTP, DHCP				
	Application	Windows 2000 / XP / Vista / 7 / 8 (PC Client system& IE)/MAC				
	Web Browser	Internet Explorer, Safari, FireFox, Chrome				
	Smart phone App	CatchEye : Android, iPhone for live and search				
Backup	Interface	USB 2.0 X 2		USB 2.0 X 3		
	Backup device	External HDD, CD&DVD-RW, Network, Thumb Drive				
The number of HDD		2 SATA(No capacity limit ; 4TB of more)		4 SATA + 1 eSATA(upto 12 bays, No capacity limit ; 4TB or more)		
Function	•Full GUI with alpha blending					
	•Individual setting of resolution, frame rates and picture quality					
	•Instant Replay					
	•Digital Zoom					
	•Mouse Control					
	•Weekly scheduler with holiday by 10 minutes setting					
	•Covert, Disable and Private function of cameras					
	•Motion Detection with 352 area setting					
	•Relay alarm output					
	•PTZ control by RS-485					
	•Daylight Saving Time and Network Time Setting					
	•Multi User Authority up to 8 Users					
	•Deinterlacer upon live and playback					
	•22 languages with full graphic					
	•Individual Network port setting					
	•Auto Deletion					
	•Import and Export the configuration					
•Mirroring						
•POS Interface						
•Dual CODEC engine for independent video transmission						
•Interactive setup via network						
Others	Power Consumption	60W		150W		
	Operating Temperature	5 ~40°C(41~104F)				
	Relative Humidity	Maximum 80% non-condensing				
	Dimension	340(W)×250(D)×60(H) mm			430(W)×420(D)×88(H)	

1-2. Specifications(NMS)

Model		NMS			
		NMS 4	NMS 8	NMS 16R	
		Compact case		19" rack type	
Video	Camera input	4 BNC	8 BNC	16 BNC	
	Individual HD/Analog selectable	HD-SDI only			
	Available source	720p25,30,50,60/1080p25,30,50,60/1080i50,60/960H/Mixed			
	Output	1 HDMI+1 VGA (simultaneously) / 1 Programmable SPOT with OSD			
Audio	Audio input	4 RCA		16 RCA	
	Output	1 RCA			
	Sensor In	4 (NC/NO)		16(NC/NO)	
	Alarm out	1 relay		14 TTL, 2 relay	
	Operating System	Embedded Linux OS			
Display	Speed	Real Time			
	Resolution (Pixel)	1280X1024, 1280X720, 1920X1080			
	Split screen	1,4	1,4,6,8,9	1,4,6,8,9,13,16	
Recording	CODEC	H.264 / JPEG for 3G, Dual CODEC			
	Resolution (Pixel)	720p, 1080p,1080i, Mixed			
	Picture quality	4 steps (Super, High, Medium, Low)			
	Speed	NTSC area PAL area	120fps@1080p 100fps@1080p	240fps@1080p 200fps@1080p	480fps@1080p 400fps@1080p
Playback	Display	1,4		1,4,8	1,4,6,8,9,13,16
	Search mode	Calendar, Event ,POS , Panorama, Thumbnail			
	Speed	NTSC PAL	60fps@1080p 100fps@1080p	120fps@1080p 200fps@1080p	120fps@1080p 200fps@1080p
	Fast/Slow speed	Normal, REW & FF [recorded speed x2, x4, x8, x16,x32,x64,x1/2,x1/4], Frame to frame, Pause			

1-2. Specifications(NMS, continued)

Model		NMS		
		NMS 4	NMS 8	NMS 16R
		Compact case		19" rack type
Network	Network Interface	Gigabit Ethernet		
	Speed	15fps@1080p	60fps@1080p	120fps@1080p
	Protocol	TCP/IP, HTTP, DHCP		
	Application	Windows 2000 / XP / Vista / 7 / 8 (PC Client system& IE)/MAC		
	Web Browser	Internet Explorer, Safari, FireFox, Chrome		
	Smart phone App	CatchEye : Android, iPhone for live and search		
Backup	Interface	USB 2.0 X 2		USB 2.0 X 3
	Backup device	External HDD, CD&DVD-RW, Network, Thumb Drive		
The number of HDD		2 SATA(No capacity limit ; 4TB of more)		4 SATA + 1 eSATA (upto 12 bays, No capacity limit ; 4TB or more)
Function	•Full GUI with alpha blending			
	•Individual setting of resolution, frame rates and picture quality			
	•Instant Replay			
	•Digital Zoom			
	•Mouse Control			
	•Weekly scheduler with holiday by 10 minutes setting			
	•Covert, Disable and Private function of cameras			
	•Motion Detection with 352 area setting			
	•Relay alarm output			
	•PTZ control by RS-485			
	•Daylight Saving Time and Network Time Setting			
	•Multi User Authority up to 8 Users			
	•Deinterlacer upon live and playback			
	•22 languages with full graphic			
	•Individual Network port setting			
	Others	Power Consumption	60W	
Operating Temperature		5 ~40°C(41~104F)		
Relative Humidity		Maximum 80% non-condensing		
Dimension		340(W)×250(D)×60(H) mm		430(W)×420(D)×88(H)
•Auto Deletion				
•Import and Export the configuration				
•Mirroring				
•POS Interface				
•Dual CODEC engine for independent video transmission				
•Interactive setup via network				

1-3. Product Characteristics

1) Full HD real time and All Hybrid (Hybrid is MAGIC series only)

This DVR can record HD and Full HD video with extreme quality. Also it displays real HD(1920X1080) resolution, and therefore it provides the most clear image quality and the best security level. Furthermore, MAGIC series can mix any input such as analog, 960H and HD-SDI. All video input is detected automatically. (Patent)

2) High reliability

With Embedded hardware and software design, this maintains higher product reliability.

3) Simple usage

This allows users to use it conveniently by placing control buttons similar to existing ones on VCR, and users can easily learn the usage.

4) Pentaplex System

Pentaplex System allows live, recording, backup, networking and playback simultaneously.

5) Selectable recording setup

For recording methods, users can select the frame rate, resolution and video quality individually in order to be appropriate for user's environment.

6) Remote monitoring

With using exclusive line or Internet network, you can search or monitor recorded images remotely by installing exclusive client program on Windows PC or Mac.

7) Backup

You can backup with a versatile external USB devices.

8) Audio recording

You can record 4 sound inputs simultaneously. Moreover, you can listen to the sound in search and live monitoring and play mode.

9) Various recording methods

This provides convenient use with manual recording, recording by dates and days, hourly schedule recording, sensor and motion detection event recording and others to enable unmanned monitoring.

10) Various total monitoring features

You can cover any security scenario through various sensor inputs and contact output control.

11) Display information in easy-to-understand information method

This enhanced convenience of user by displaying information (date, time, recording method, recording frame number, HDD capacity and others) in monitoring, recording and playing mode in easy-to-understand way.

12) P/T/Z control

By built in RS485, various P/T/Z cameras can be used.

13) Dual CODEC for video transmission

DVR can send 120 fps (based on CIF) regardless of the local recording and viewing setup regardless with recording setup.

14) Web browser support

You can monitor and playback the video and control the PTZ camera by internet explorer.

15) Built in S.M.A.R.T.

You can automatically check the health of the hard disk drives.

16) Language pack

Basically DVR has multiple language set, furthermore you can choose the language set if you want.

17) Mirroring by internal HDD

If you install two HDDs, you can use the second HDD for backup for maximum fault tolerance.

18) Spot monitoring

Spot out can be enable to monitor sequentially in other place.

19) Touch LED Switch

You can operate with touch LED switch in front panel.

20) Text inserter(POS Interface)

You can operate with the POS and ATM.


21) HD Spot out

You can use one of VGA and HDMI to the HD spot.

1-4. Name of Each Part

[Front Panel]

<MAGIC 04/08, NMS 04/08>

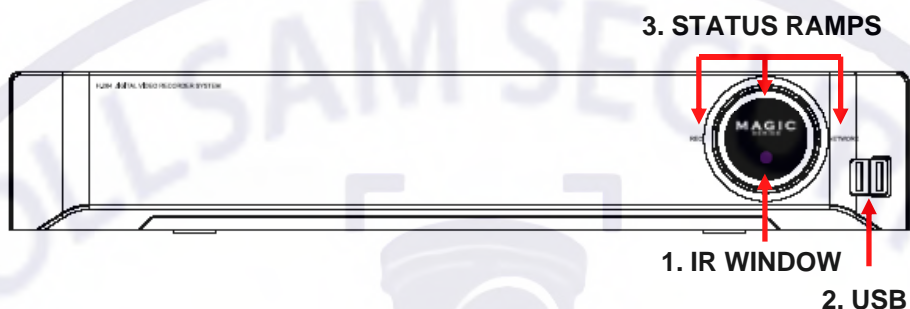

1. IR Window : the window for remote controller
2. USB ports : These USB ports are for mouse and USB devices. You should connect correctly the USB devices and mouse as picture directed.
3. Status lamps
POWER : Blue color back light. Power indicator.
RECORD : Red. Indicate the recording.
NETWORK : Green. Lit on connecting the network


EST.

1998

WE SECURE YOUR LIFE

[Front Panel]

<MAGIC 08P/16P/16M, NMS 16>

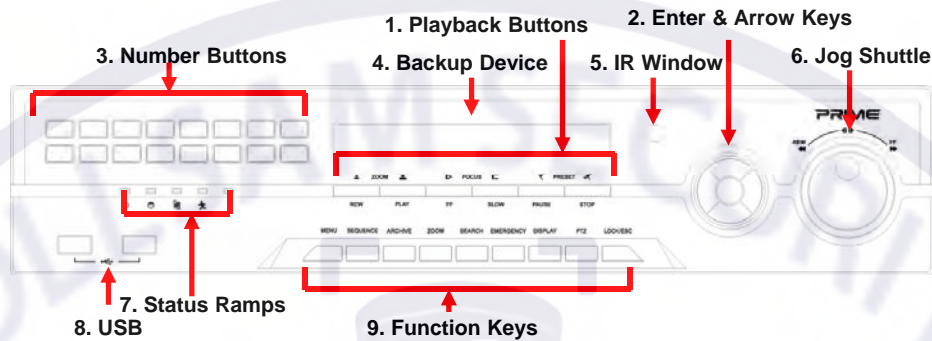

1. Playback buttons : It will be used on playback. If you press these buttons in live mode, it will be automatically changed to the Instant Play mode. ‘Stop’ button changes from the play mode to the live mode.

2. ARROW, ENTER : This button is used to change settings for the product in MENU Mode or used in Search Mode. Also right arrow button is used for ‘Hold’ while Jog Shuttle action.

3. Number buttons : If you press this button, it will be changed to full screen in live viewing or playback. If you want to go to 20ch, push the 10+ button twice. (* In menu and password setting, it is automatically converted to number buttons)

4. Backup device : You can use the versatile backup devices such as CD-RW and DVD-RW.

5. IR Window : the window for remote controller

6. Jog Shuttle : You can use this wheel for fast retrieving and playback back and pro. If you hold the shuttle, push the right arrow button while grabbing the shuttle.

7. Status lamps

POWER : Blue color back light. Power indicator.

RECORD : Red. Indicate the recording.

NETWORK : Green. Lit on connecting the network

ALARM : Red. It will be lit on when the events happen

8. USB ports : These USB ports are for mouse and USB devices.

9. Function keys

1) MENU : It will move to the setup screen from the live mode.

2) SEARCH : It will change to the playback mode from the live mode.

3) BACKUP : It will move to the backup screen from the live or play mode.

4) DISPLAY : It will change the screen splitting sequentially from 1 to 20. It can be adapted both live and play mode.


5) SWITCHING : It will change to switching mode except 20 splitting.

- 6) ZOOM : It will go to the digital zoom directly.
- 7) PTZ : It will change to the pan, tilt and zoom control mode from the live mode.
- 8) LOCK/EXIT : If you want move to the upper menu or exit without saving, press this button. On playback, it will disappear the search list for the better viewing. On live viewing, it performs the system lock.
- 9) PANIC : This button is used in emergency status. If you push this button, the DVR starts to record with maximum speed regardless of setting value.

※ For more details, refer to [CH 3. How to Use]

[Rear Panel]

<MAGIC 04, NMS 04>

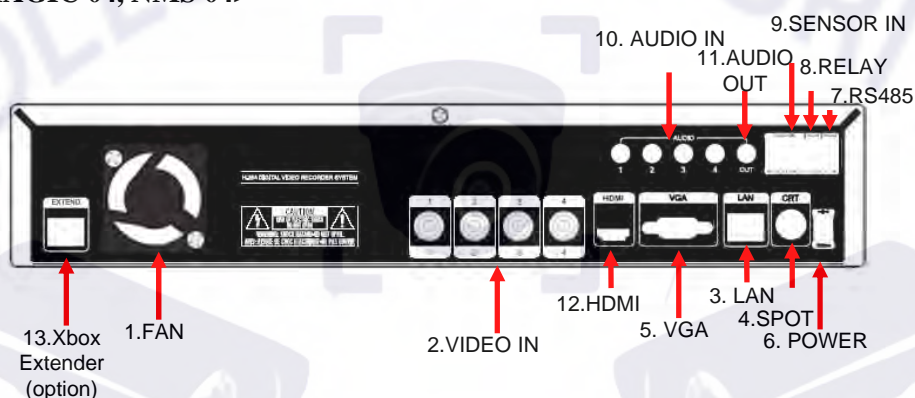


- 1. Cooling Fan
- 2. Video In: This receives images from SDI cameras(04) or any camera(08).
- 3. LAN Port: This is the Gigabit Ethernet LAN cable connection terminal.
- 4. SPOT Out : To CRT 4:3 monitor for spot video.
- 5. VGA port: video output for analog RGB display
- 6. DC Power : DC12V 4.16A or up
- 7. RS485 port : For control the pan and tile cameras. Make sure that the polarity.
- 8. Relay out : This terminal blocks connect external electric devices to the product (Warning Lamp and others).
- 9. Sensor In : This terminals can be connected to external sensors.
- 10. Audio In: RCA audio in terminals. You can record four channels at the same time.
- 11. Audio Out: RCA audio out terminal.
- 12. HDMI : HDMI output for HD monitor
- 13. VGA Extender (option) : Connect EXTEND FTP cable to Receiver

※ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<MAGIC 08, NMS 08>

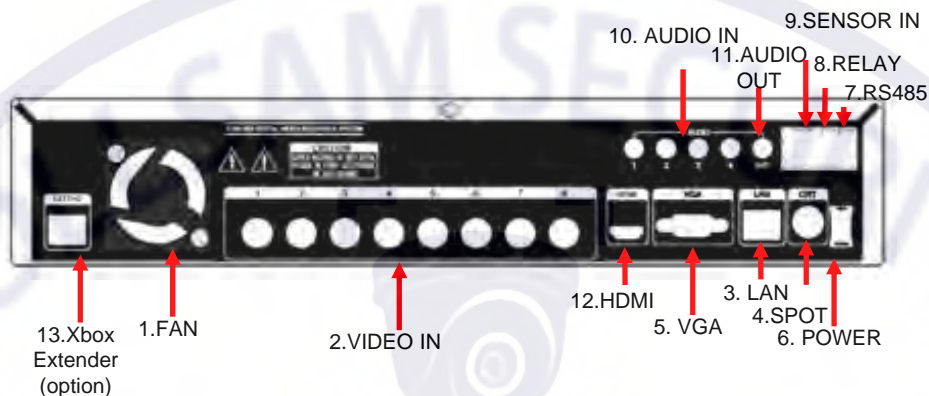


1. Cooling Fan
2. Video In: This receives images from analog/960H/SDI cameras.
3. LAN Port: This is the Gigabit Ethernet LAN cable connection terminal.
4. SPOT Out : To CRT 4:3 monitor for spot video.
5. VGA port: video output for analog RGB display
6. DC Power : DC12V 4.16A or up
7. RS485 port : For control the pan and tile cameras. Make sure that the polarity.
8. Relay out : This terminal blocks connect external electric devices to the product (Warning Lamp and others).
9. Sensor In : This terminals can be connected to external sensors.
10. Audio In: RCA audio in terminals. You can record four channels at the same time.
11. Audio Out: RCA audio out terminal.
12. HDMI : HDMI output for HD monitor
13. VGA Extender (option) : Connect EXTEND FTP cable to Receiver

※ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<MAGIC 08P>

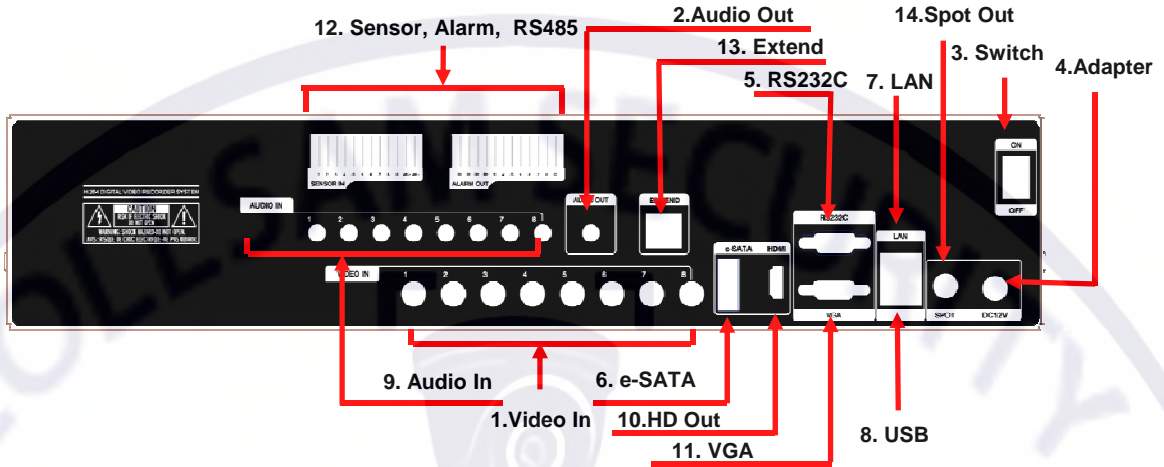


1. **Video In** : This receives images from cameras and sends them to monitors.
Loop Out : This sends the images from the cameras to the other devices.
2. **Audio Out** : RCA audio out terminal.
3. **Power Switch**
4. **Adapter** : Connect DC12V only.
5. **RS232C** : This is Serial communication(RS232C) cable connection terminal.
6. **e-SATA**
7. **LAN Port**: This is LAN cable connection terminal.
8. **USB ports** : This USB port is for mouse and USB devices.
9. **Audio In**: RCA audio in terminals. You can record 16 channels at the same time.
10. **HD Out** : Real HD(1920X1080) output for high resolution monitor
11. **VGA port**: video output for VGA display
12. **Sensor, Alarm, RS485** : For external sensor and external electric devices to these terminal block. There are 16 inputs, 2 relay output and 14 TTL output. For control the pan and tilt cameras. Make sure that the polarity.
13. **VGA Extend (option)** : Connect EXTEND FTP cable to Receiver
14. **Spot Out** : For spot CRT monitor, composite signal comes out.

※ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<MAGIC 16P/16M, NMS 16>

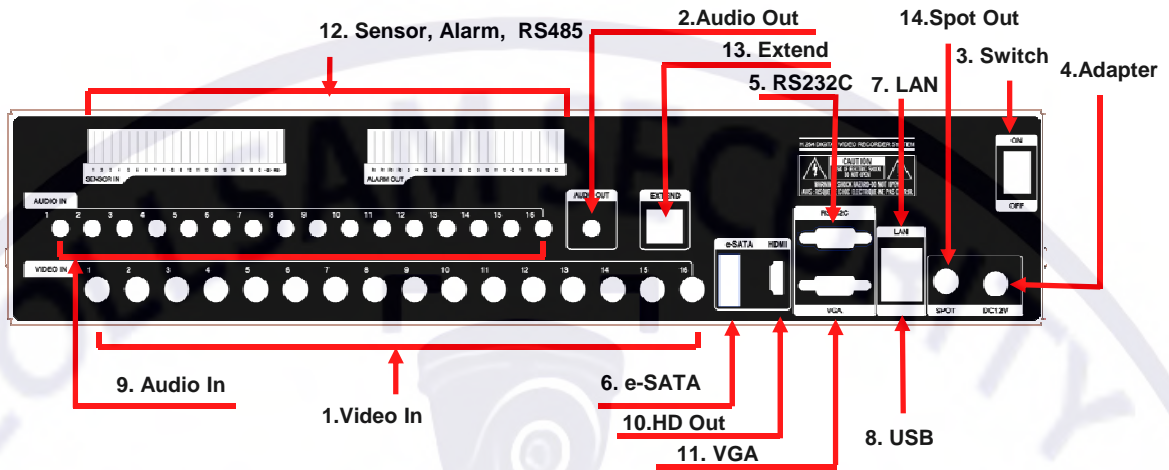


1. **Video In** : This receives images from cameras and sends them to monitors.
Loop Out : This sends the images from the cameras to the other devices.
2. **Audio Out** : RCA audio out terminal.
3. **Power Switch**
4. **Adapter** : Connect DC12V only.
5. **RS232C** : This is Serial communication(RS232C) cable connection terminal.
6. **e-SATA**
7. **LAN Port**: This is LAN cable connection terminal.
8. **USB ports** : This USB port is for mouse and USB devices.
9. **Audio In**: RCA audio in terminals. You can record 16 channels at the same time.
10. **HD Out** : Real HD(1920X1080) output for high resolution monitor
11. **VGA port**: video output for VGA display
12. **Sensor, Alarm, RS485** : For external sensor and external electric devices to these terminal block. There are 16 inputs, 2 relay output and 14 TTL output. For control the pan and tile cameras. Make sure that the polarity.
13. **VGA Extend (option)** : Connect EXTEND FTP cable to Receiver
14. **Spot Out** : For spot CRT monitor, composite signal comes out.

※ For more details, refer to [CH 2. Installation Method and Cautions].

CH2. Installation Method and Cautions

2-1. Cautions

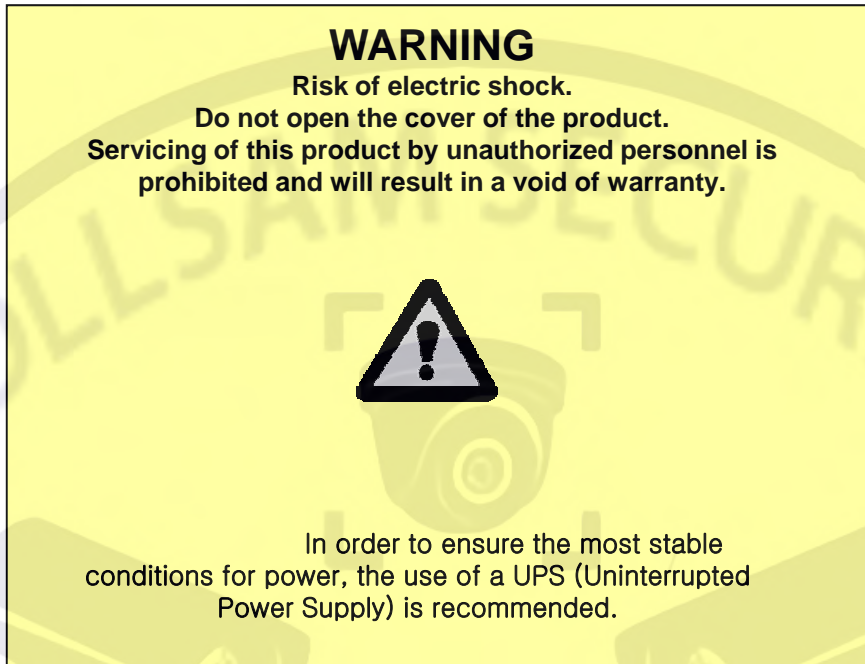

- Avoid installing the product where there are direct rays or it is hot by locating near from heat generator. (May cause fire)
- Do not put vase, flowerpot, cup, cosmetics, drug, and anything the contain water on product. (May cause fire or electric shock, and it may injure people by falling)
- Do not insert or drop any metal object (coin, hair pin) or flammable object (match, paper) into air hole. (May cause fire or electric shock)
- Do not put any heavy object on it. (May injure people by being fell or destroyed.)
- Put power plug surely not to be moved. (If not, this may cause fire.)
- Unplug power plug and antenna when there are thunders and lightening. (May cause fire.)
- For cleaning the product, wipe surface with dry towel. Using chemical agent or cleaner may change the color and unpeel paint. Do not put several plugs at same time. (May cause electric shock.) If there is smoke or strange smell, stop operation. In this case, turn the power off and unplug it, and then contact our service center. (If you keep using it, this may cause fire or electric shock.)
- Do not unplug by pulling cord. (If cord is damaged, it may cause fire or electric shock.)
- Do not plug or unplug with wet hands. (May cause electric shock.)

CH 2 Installation Method and Cautions

- Keep the power cord untwisted. (May cause fire or electric shock.)
- Use proper adapter. (Using too much electric power may cause fire or electric shock.)
- Do not install it at where exposed to rain and wind and water drop. (May cause fire, electric shock and transformation.)
- Keep away from fire. (May cause fire.)
- Do not disassemble or remodel on your own. (May cause malfunction or electric shock.)
- Do not put next to flammable materials like flammable spray. (May cause fire.)
- Do not install it at a place with too much dirt. (May cause fire.)
- Do not install it on unstable places like shaking table and inclined place or shaking place. (May injure users by falling down or being upside down.)
- Do not put an heavy object on power cord or avoid it from being pressed by the device. (May cause fire or electric shock.)
- In case of using extension cord, do not use several devices at same time. (May cause fire with abnormal heating of extension.)
- When there are dirt on power plug pin or power outlet, clean it nicely. (May cause fire.)
- Do not damage on power cord or plug, and bend or twist or pull too much, and put it between other objects or heat. If power outlet insertion part is not tight, do not use it. (May cause fire or electric shock.)
- Do not drop or give a shock to the product. (May injure people or cause malfunction.)
- Do not touch power adaptor or signal controller. (May cause electric shock.)
- Do not put any object too close to block cooling fan. (May cause fire.)
- In case of exchanging batteries with improper type, there might be danger of explosion.
- For used batteries, throw away separately from other garbage.
- When you take out batteries, avoid children from eating them by mistake. Keep them away from children. (If a child ate them, contact a doctor right away.)

Note :

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.


This device complies with the part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

FCC Warning :

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

CE Warning : This is a Class A product. In a domestic environment this may cause radio interference in which case the user may be required to take adequate measures.

This product has obtained EMI registration.

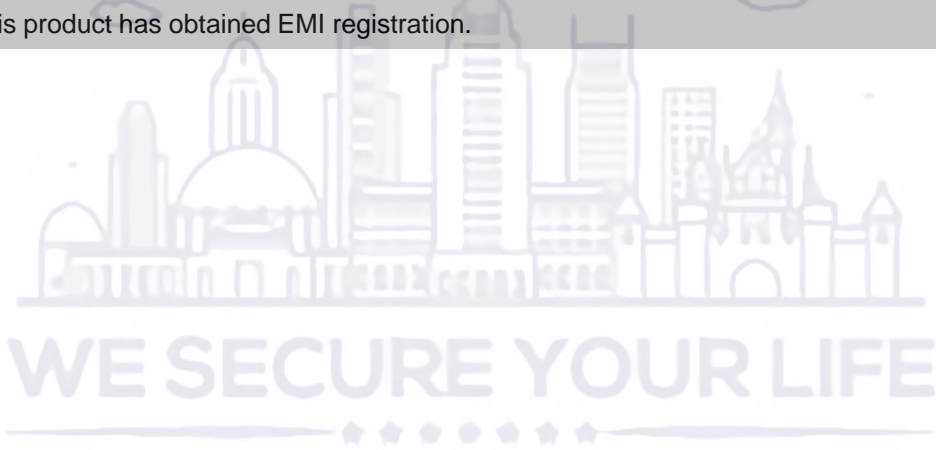

2-2 Product Installation

This product may be composed of camera and monitor in default, and additionally the sensor, microphone, speaker and PC for network can be connected if necessary.

2-2-1. Power Connection


- 1) Connect adapter cable to power connection terminal at rear side.
- 2) Input AC power to the adapter. (free voltage from 100V to 240V, 50/60Hz)

※ You must operate it at the rated voltage instructed on the user's manual. In case power higher than the rated voltage is supplied, it may cause damages on product.

2-2-2. Connecting External Device

- ※ Connect it when power of the product is off.
- ※ Read through user's manual for the device you are connecting carefully.

1) How to Connect External Video/Audio Device

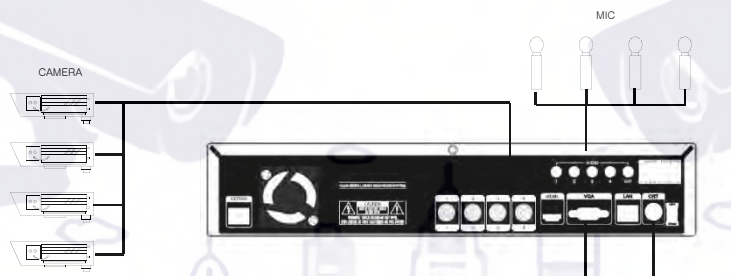


- Connect cameras to VIDEO IN by channels.
- Connect microphone (AMP) to AUDIO IN by channels.
- Connect VIDEO OUT to VIDEO IN of monitor.
- Connect HD output to HD Monitor.
- Connect AUDIO OUT to AUDIO IN of monitor (or speaker).
- Connect Spot output to Composite Monitor.

❖ Read this notice before connecting HD-SDI cameras.

You cannot mix NTSC and PAL cameras with DVR products.

1. Please check the type(NTSC or PAL) of cameras.
NTSC : 30fps, 60fps
PAL : 25fps, 50fps
- You can see the cameras connected with DVR on Device menu.

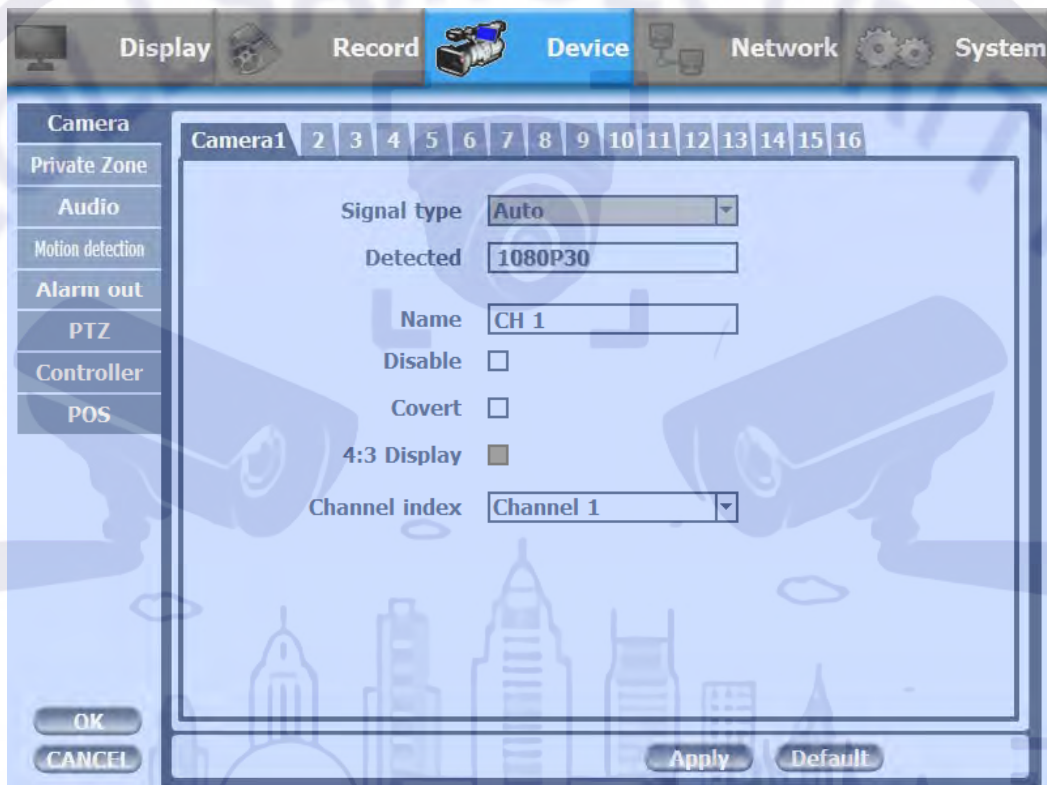


* The figure above shows that the camera is 1080P 30fps (NTSC).

2. Change camera type that you want to use on your camera.
- You can choose the type from setting fps on HD-SDI cameras.
(This DVR does not support setting manual fps.)
 - For more details, refer to user's manual of the related HD-SDI Camera.

2) How to connect external sensor

Sensor terminal is composed of 1 input channel and 1 output channel. Sensor out terminal is relay output with 1A, 24V or 0.5A,125V.

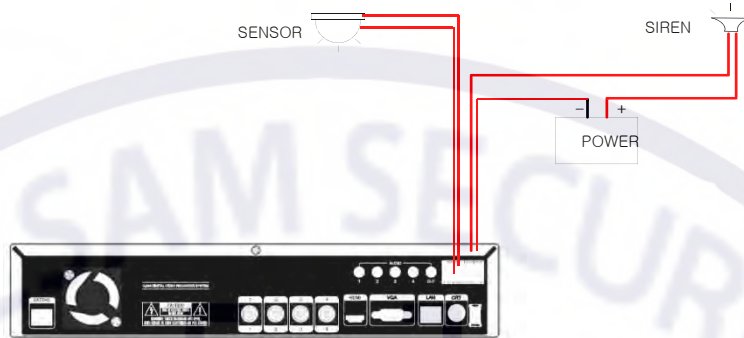

Sensor In : Connect the sensors. The sensor are composed of both signal and ground terminals, with a voltage difference of 5V. In the case that the sensor used for input is of the N/O (Normal Open) type, when the voltage difference between the signal and ground falls to 0V (short), the DVR can use this as a trigger to start alarm/sensor based recording.

Sensor Out : Connecting external electrical devices


The relay output terminal does not provide power, and functions only on an ON/OFF basis via a relay. Normally, the signal and ground should be on an OPEN basis, and the DVR will complete the relay connection.

3) Connecting with PC using LAN cable

If you want to connect DVR to PC directly, use LAN cable, and if you want to use HUB, connect cable via hub.


*Hub : This is a device connecting one office to devices located near with using cable when you organize LAN

*Cable : This is standard UTP cable used for communication among devices through Hub and others when you organize LAN

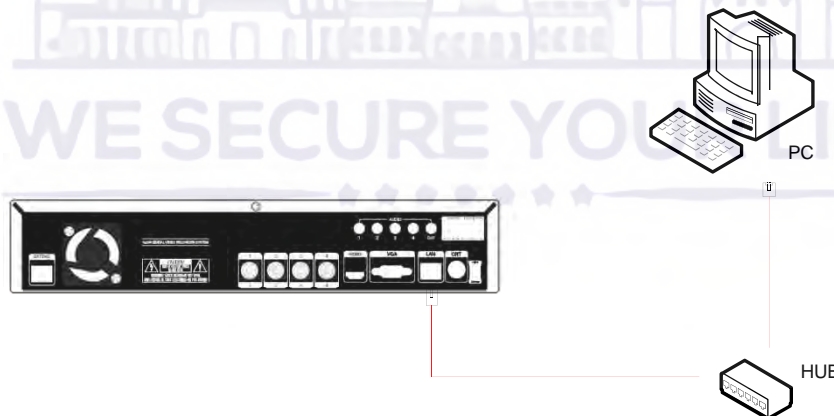

4) Connection Using PTZ camera

In case of using pan and tilt cameras, connect PAN/TILT DRIVE to product as shown at following figure.

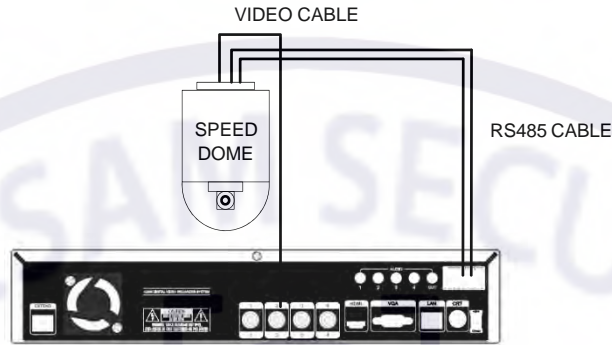

5) Installing Hard disk drive

In case of installing the hard disk drive, open the upper case and install the hard disk drive on the hard bracket. Remember that the main power should be off to install the hard disk drive. If you have any trouble, please contact the technical support.



CH3. How to Use

3-1. General Usage Information

The MAGIC series and NMS DVR can be operated with a mouse or remote controller under the four main modes listed below:

Live Mode – This is the “main or default” mode. From this mode you can view in real time all currently operating cameras, information regarding camera status, and have access to Pan/Tilt camera controls. In addition, system status information will be shown during live mode, and other modes can be entered from Live mode.


Setup Mode – The user will be able to customize settings for Live viewing, Recording, Backup, and Camera related devices under the Setup Mode.

Search Mode – In Search Mode, the user will be able to review all recorded footage in the case that an event must be reviewed using a calendar or event based search.

Backup Mode – In Backup Mode, the user will be able to archive the desired data to the preferred supported media of their choice (ex. CD, DVD, USB Backup, Remote Client Software, etc.)

Password Protection – The DVR system will utilize a user ID and password system to prevent unauthorized usage of this product. Control of the system will only be possible after entering a proper ID and password as illustrated below. (Factory Default settings are blank for these fields).

IDs and passwords should be managed by a system administrator, as different users may be given different levels of access to the DVR.

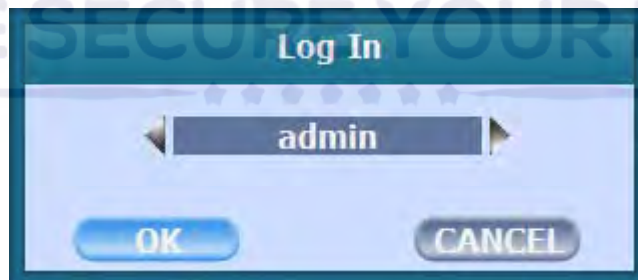

3-2. LIVE Mode

 


 
 
In this section you will know how to split the video mode into 1, 4, 6, 8, 9, 12, 16, as well as auto sequencing, PTZ Control, Mouse control, Setup configurations, Backup



3-2-1. LIVE Mode Control

1) Live View Status










You may use the Live Menu Bar located at the bottom for quick shortcuts and view status of certain items.

	Recording indicator
	Event recording indicator
	Motion detection indicator
	Sensor activation indicator
	POS indicator

2) Live Menu Bar


You may use the Live Menu Bar located at the bottom for quick shortcuts and view status of certain items.



	Date
	Time
	Screen Split mode change
	Sequence activation
	Hard drive usage
	Lock/ Unlock indicator
	Scheduler activation indicator
	Network connection indicator
	Audio out channel indicator

3) Live Popup Menu

By Right-Clicking anywhere on Live Screen, you may view the Live Popup Menu. By using the Live Popup Menu, you can quickly jump to the necessary configuration and settings.

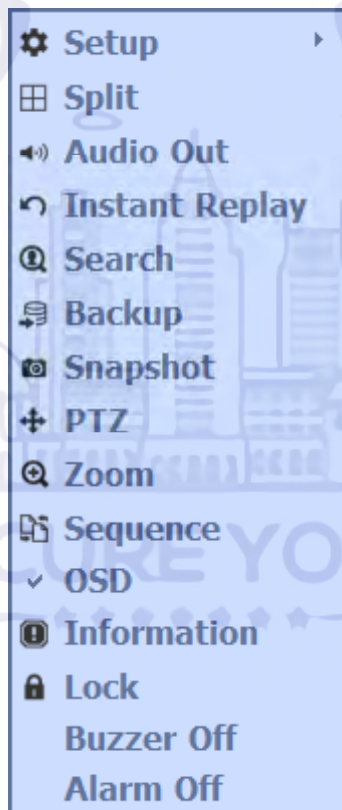


3-2-2. LIVE Mode Feature

1) Setup : refer to 3-4


2) Split

 Change video split mode for Live View.



3) Audio Out

 You can choose the audio out from this menu.



4) Instant Replay

This is very convenient function to catch the abrupt accident. During live viewing, you can go directly to the playback screen.

If you choose the 'Instant Replay', the DVR goes to the 'PLAY' with the present time screen. And you can use the functions related playback.



5) Search : refer to 3-3


6) Backup

There are two ways to enter the backup. The first one is that right click on the live screen, and the second one is that enter directly from 'Search' upon playback. If you choose the 'backup' from the live menu, below backup screen appears.


- You can set the backup device, time and channel from the backup screen.



- After that, if you push the 'Estimation' button, it will show the estimated backup file size.

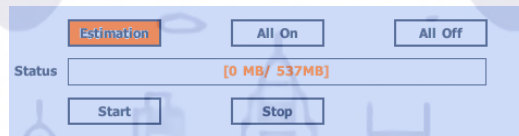

- Then click the 'Start' button.

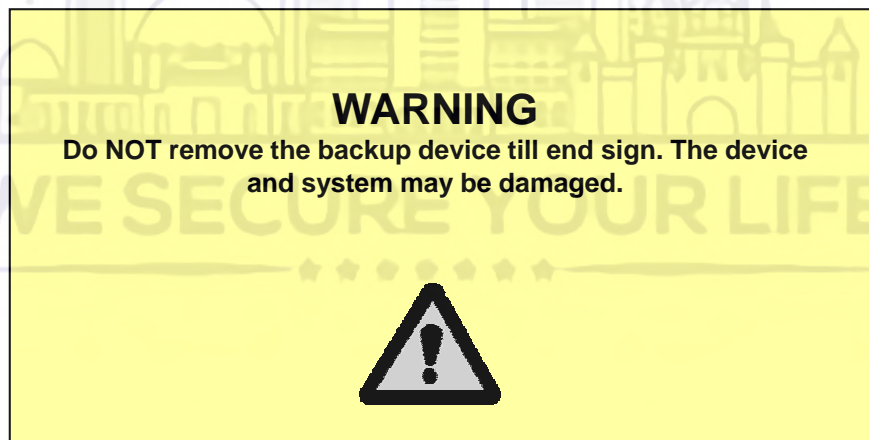

7) Snapshot

You can save the live snapshot by this menu. All channel will be saved individually to the USB memory by JPG format . You should put in USB memory before saving.

8) PTZ (Pan, Tilt and Zoom)


It is possible to control the pan and tilt camera by itself. Press the 'PTZ' button to enter the PTZ mode. For Menu setting, you can set it by pressing button as displayed at bottom of window.



Preset[Enter]	Preset setup
Zoom +/-	You can zoom in/out with mouse or play /backward buttons on the remote controller.
Focus +/-	You can adjust the focus with mouse or slow buttons on the remote controller.
IRIS +/-	You can adjust the iris with mouse or ff/rew buttons on the remote controller.

❖ For more details, refer to [CH 2-2. Connection Using PTZ camera] and [CH 3-4-3. Device].

- Preset : You can enter the preset number using the keypad appearing the preset button or 'Enter' button on the remote controller.

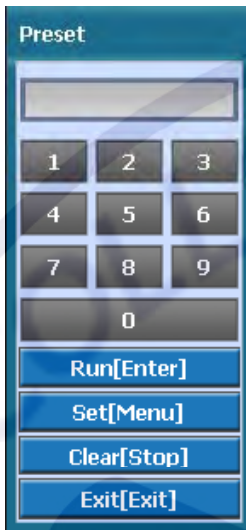


Run[Enter]	Move to preset number
Set[Menu]	Set a position and name of a preset number
Clear[Stop]	Clear a preset set
Exit[Exit]	Exit preset mode

❖ How to use Preset

1. Make sure that PTZ camera is connected to DVR.
2. Click the right mouse button and choose PTZ from a live pop-up menu.
3. After you move the screen, click the set button and set the position and name.

- ※ If you choose not a specified preset, UNDEFINED is displayed on the screen.
- ※ You can set up to 32. If you choose out of valid range, there is no action.

- [Menu] : Set the preset mode from the menu at the bottom of the screen. You can set PTZ speeds, preset dwell time, name and tour of 32 presets.

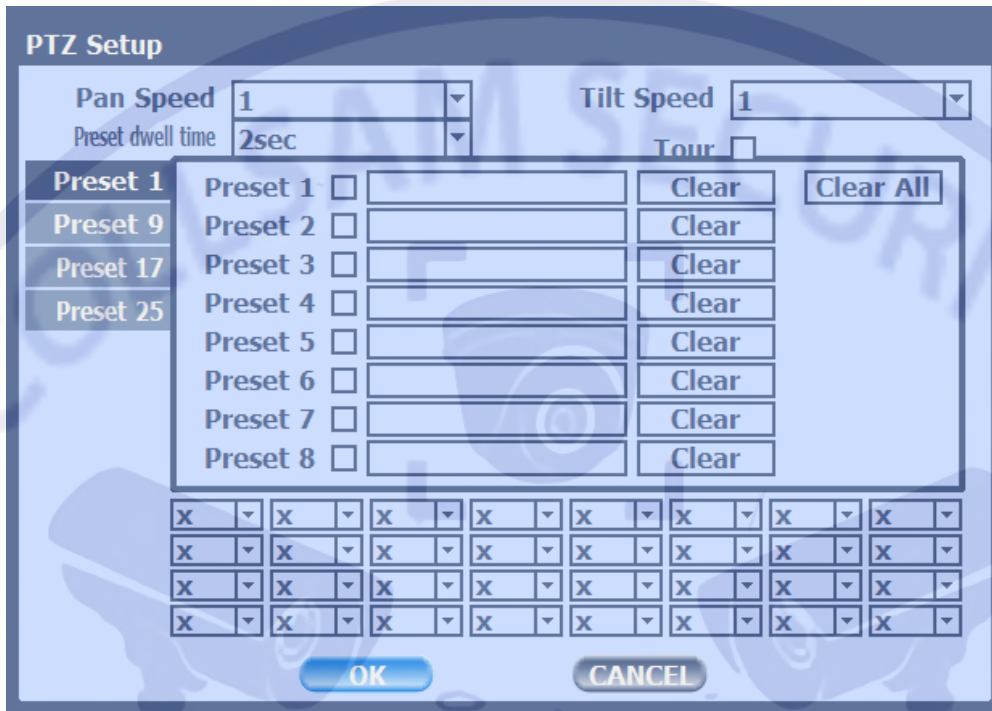

Pan Speed	Set pan speed 1~7
Tilt Speed	Set tilt speed 1~7
Preset dwell time	Set preset dwell time 2~6 sec
Tour	When you check the tour box, the preset tour starts in the order specified by the user.

❖ How to use Tour
Choose a preset from upper left to right.

※ If you use not specified presets, it automatically skip the tour.

9) Zoom

Digital zoom of live screen for selected channel. It can be 8x zoom and also control the position by mouse dragging.



10) Sequence

Sequence Mode On /Off: Switches screens as set on Dwell time under Screen Setup

11) OSD

This feature shows current settings of product through GUI (Graphic User Interface) and INFO button at front side is used for this feature. When you turn on power, this will show current date and time, System Lock Setting, HDD usage, Video Loss Check, Sensor ON/OFF, Motion Detection Check, Recording Status and Schedule Feature Usage. As you press INFO button once more, GUI disappear->OSD disappear->GUI appear->OSD appear will happen sequentially.

- ❖ GUI (Graphic User Interface): displaying current status on monitor as images
- ❖ OSD (On Screen Display): displaying current status on monitor as character

12) Lock/Log In

Logs off current user and locks DVR from any further configuration and screen setup until next Administrator logs in.

13) Buzzer off


Turn off buzzer when it sounds.

14) Alarm off

Turn off Alarm when it occurs.

3-3. Search Mode

Search mode consists of two different modes of searching. The video data can be selected by 5 modes.

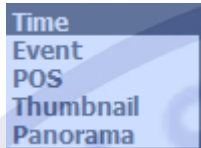

- Time : Search by Month / Day / Time selection.
- Event : Select from Event Log
- POS : Search by POS transaction data
- Thumbnail : Play the specific channel by user defined interval
- Panorama : Play the specific channel continuously

3-3-1. Search Selection Type

1) Time Based search selection




- Select the Date you wish to view by selecting a Date from Calendar
- Select time you wish to view by selecting a time from Time Line
- You may click on Refresh, Option, Backup, Import, Exit , Full Screen for additional features and options

2) Event Based Search Selection



- Select search date from calendar
- Event log will be displayed according to the chosen date
- Preview pane above the Event Log will show preview of currently selected video

3) POS Search

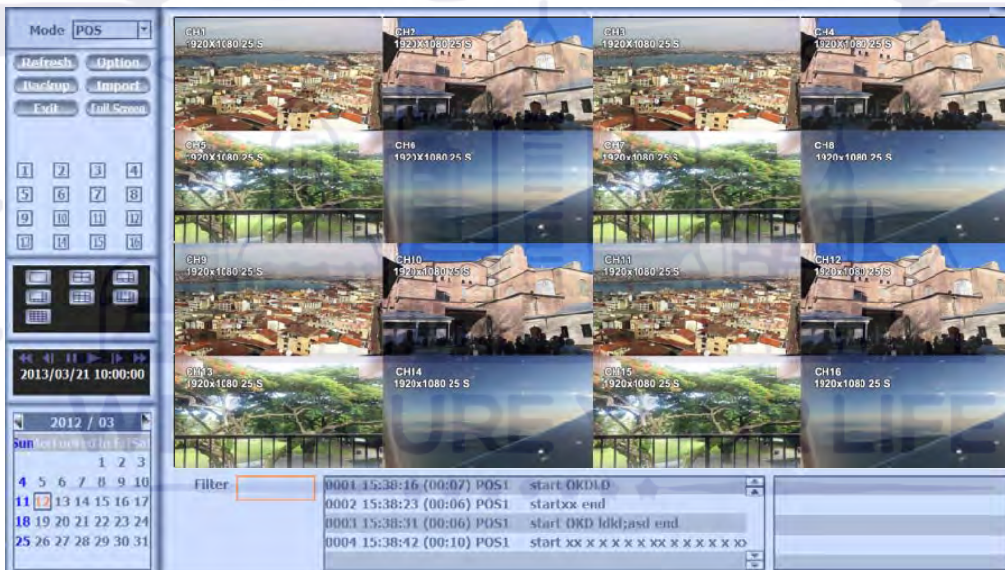

- Select search date from calendar
- POS transaction data will be displayed according to the chosen date
- You can search detail by filter.

4) Thumbnail Search



- Select search date from calendar
- Choose the channel and interval, then select the time from bar or typing
- The selected channel will be played individually by interval time difference


5) Panorama Search



- Select search date from calendar
- Choose the channel and time from bar or typing
- The selected channel will be played continuously. If you want to play faster, use the FF button.


6) Search Related buttons

- You may click on Refresh, Option, Backup, Import, Exit , Full Screen for additional features and options

Refresh	Reload all data list.
Option	Search option. 
Backup	Backup recorded data to external USB device.
Import	Playback recorded data from external USB device.
Exit	Move to Live video mode.
Full Screen	Load playback data to full screen mode.

3-3-2. Play Mode

If you choose 'Full Screen', the full screen appear. You can control the play speed in here.

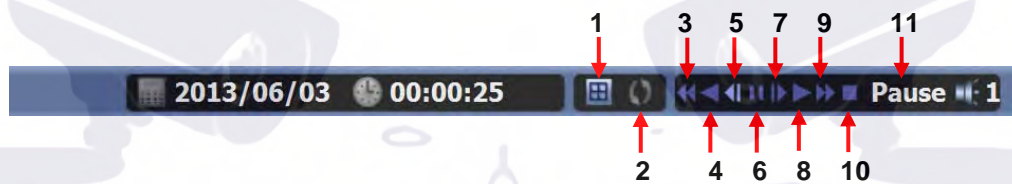

► Play Screen GUI

1. Split Screen
2. Sequence
3. FB (Fast Backward): FB×2, 4, 8, 16, 32, 64 times faster
4. Playback : Backward normal speed
5. SB (Slow Backward):SBx1/2, SBx1/4
6. STILL (Pause) / Frame advance
7. SF (Slow Forward):SFx1/2, SFx1/4
8. Play : Forward normal speed
9. FF (Fast Forward): FF×2, 4, 8, 16, 32, 64 times faster
10. STOP : Stops playing and returns to LIVE Screen.
11. Status information

3-4. SETUP Mode


Access Setup menu from Right Clicking mouse button to Popup Menu.
 Configure Display, Record, Device, Network, System which is navigated by clicking on corresponding tab menu at the top of the screen.

Apply	Apply changes
Default	Return to factory default settings.

3-4-1. Display

Configure OSD, Main Display, Color Control setting.


1) OSD

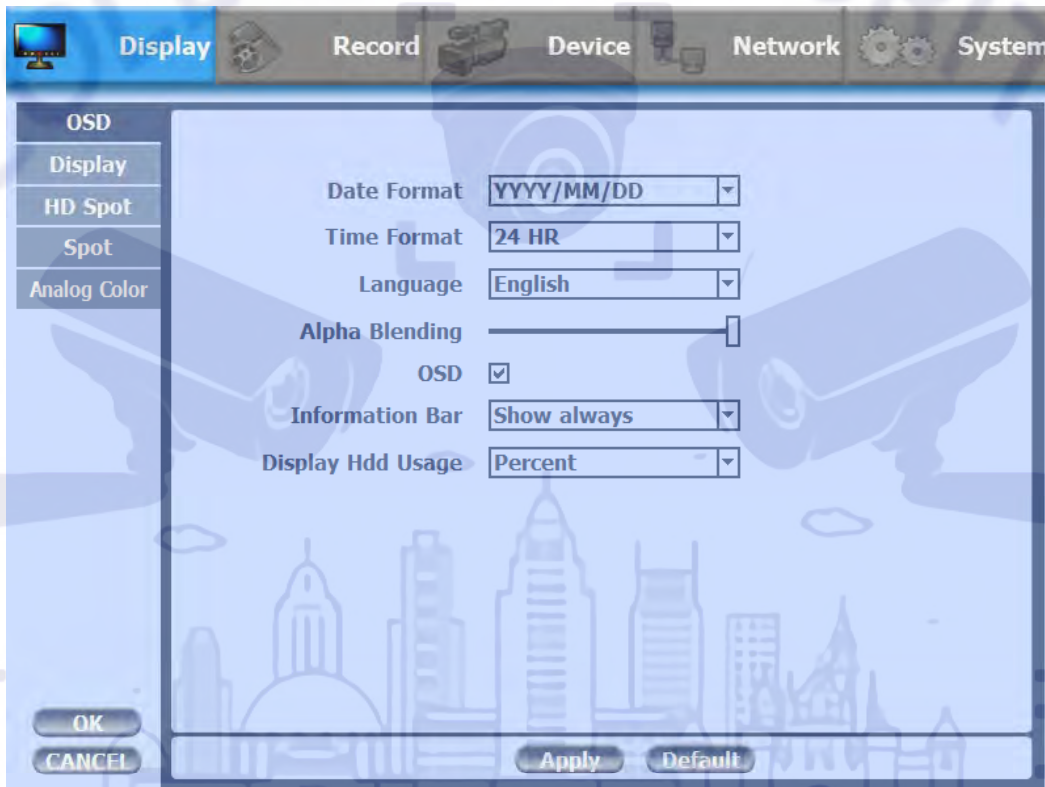

Date Format	YYYY/MM/DD, MM/DD/YYYY, DD/MM/YYYY
Time Format	24HR, 12H(AM/PM)
Language	Select system language.
Alpha Blending	Adjust transparency of System Menus.
OSD	OSD On/Off
Information Bar	Information Menu Bar Hide/Auto hide/ Show always
Display HDD Usage	Percent/Oldest Date

2) Display


- You can use dual monitors that show same image by setting VGA+HDMI.
- Configure and view Resolution, Sequence Dwell Time and Display control settings.

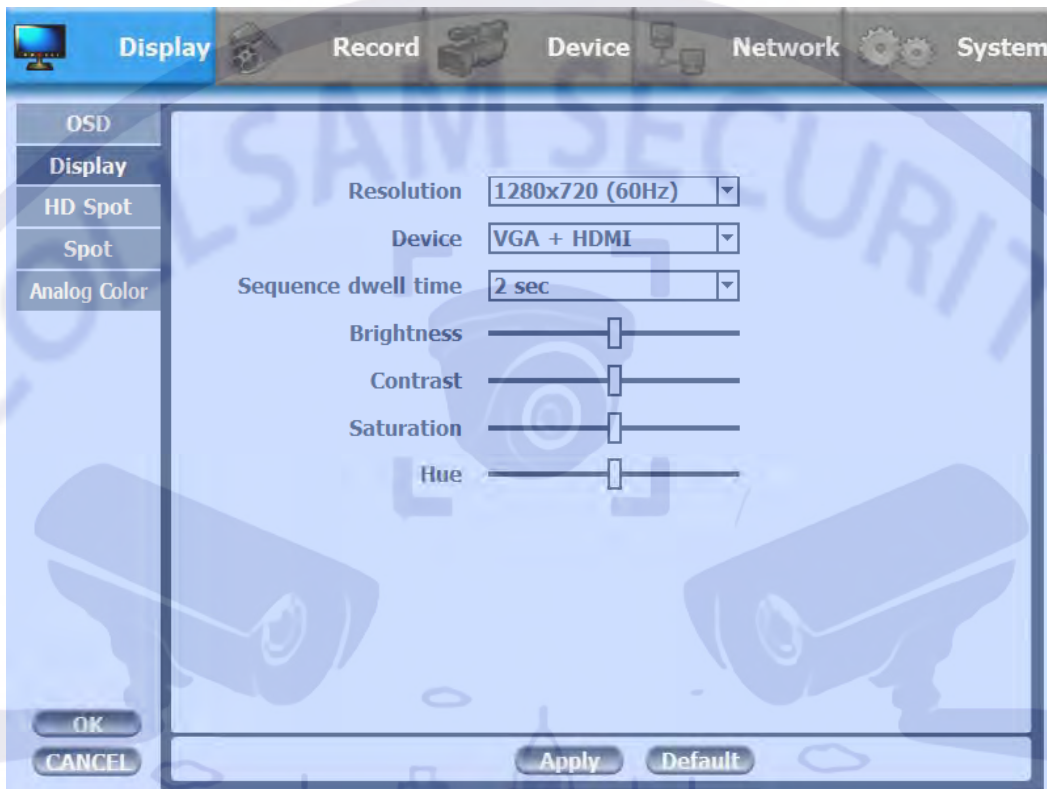

Resolution	1280x720(60Hz), 1280x720(50Hz), 1280x1024(60Hz),1920x1080(60Hz), 1920x1080(50Hz)
Device	VGA+HDMI, VGA, HDMI
Sequence dwell time	1 sec ~ 60 sec
Brightness	Adjust brightness
Contrast	Adjust contrast
Saturation	Adjust saturation
Hue	Adjust hue

3) HD Spot


- If you are not using VGA+HDMI for display, you can use HD Spot.

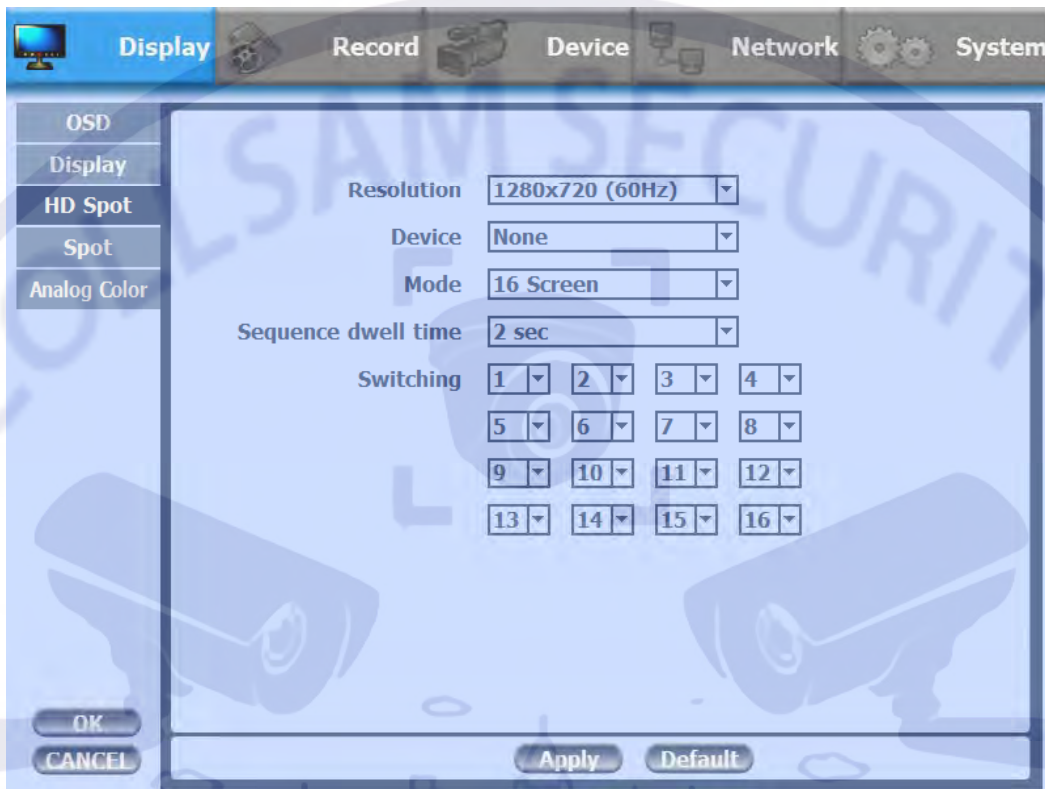

Resolution	1280x720(60Hz), 1280x720(50Hz), 1280x1024(60Hz),1920x1080(60Hz), 1920x1080(50Hz)
Device	VGA, HDMI, None
Mode (Split Screen)	1, 4, 9, 16 Screen
Sequence dwell time	1 ~ 60 sec
Switching	You can program the sequence time. If you want to just see ch1, you set all box to '1'. You can make any useful sequence by this map.

4) SPOT Control

- Set the SPOT output .

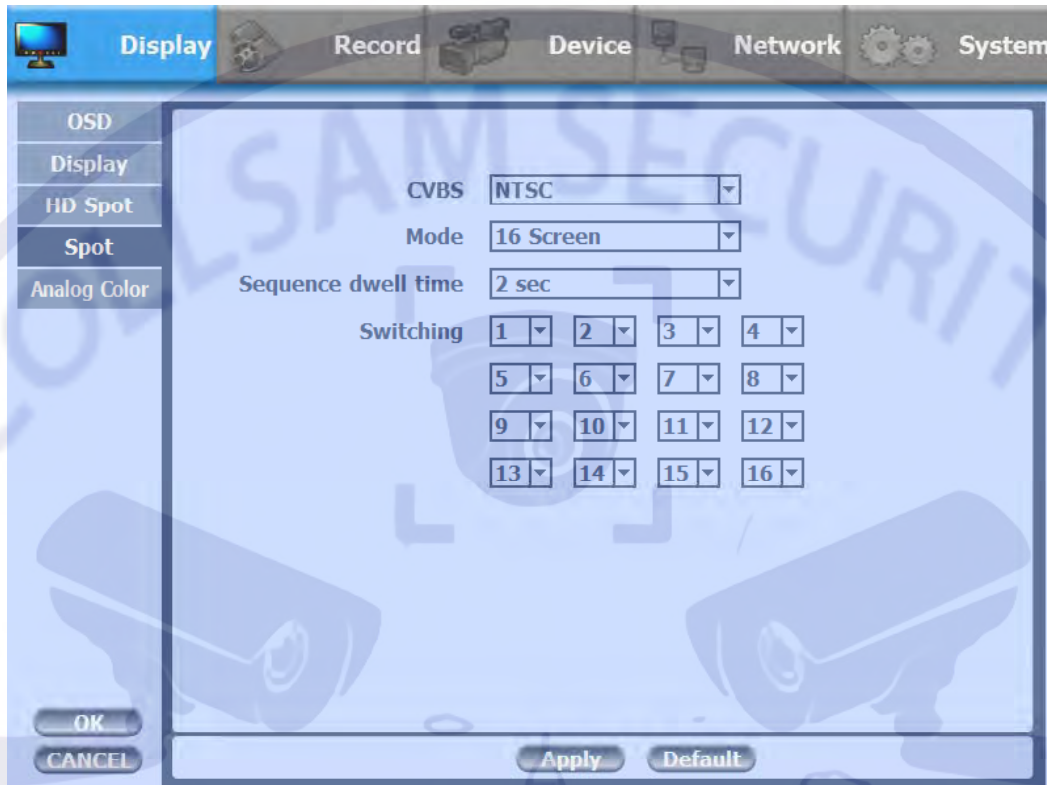

CVBS	Choose NTSC or PAL
Mode	1, 4, 9, 16 Screen
Sequence dwell time	1 ~ 60 sec
Switching	You can program the sequence time. If you want to just see ch1, you set all box to '1'. You can make any useful sequence by this map.

5) Analog Color

- Adjust color of analog cameras.




Brightness	Adjust brightness
Contrast	Adjust contrast
Saturation	Adjust saturation
Hue	Adjust hue
Default	Return to factory default settings.
Apply All	Apply changes to all channels.

3-4-2. Record

Configure and view Event In, Record, Group, Holiday settings

1) Record

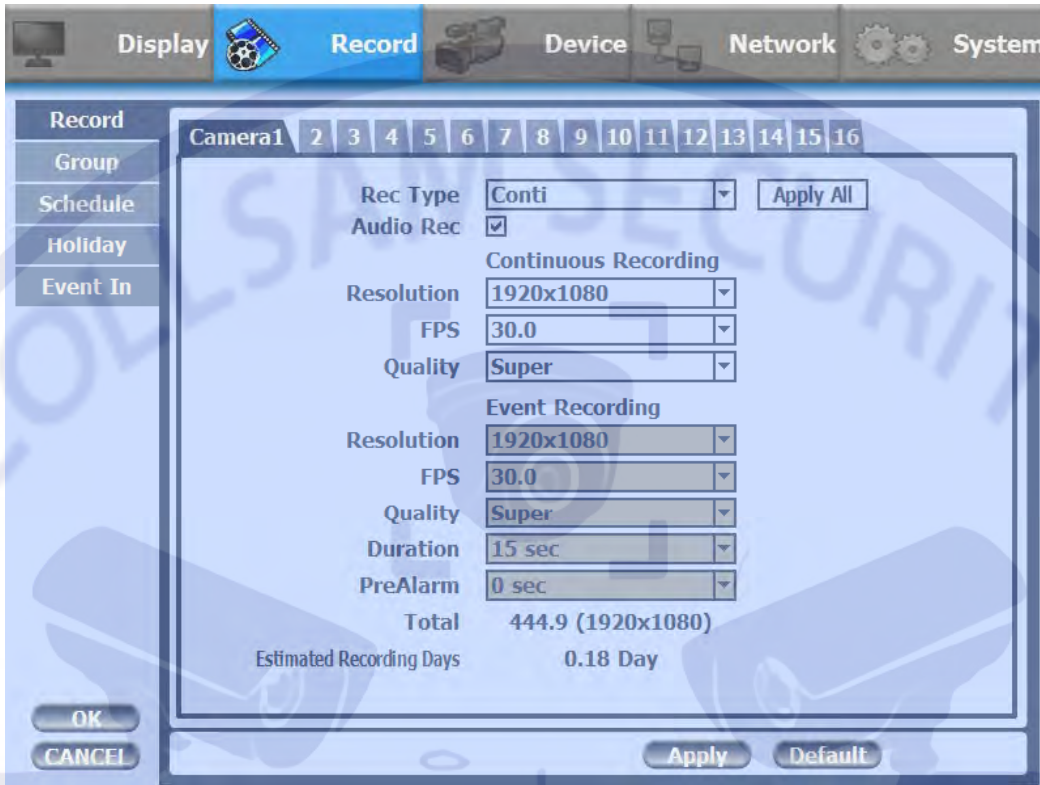


Rec type	None, Conti, Event, C/E	
Audio Rec	To select audio recording or not.	
❖ ALL Apply	Apply the setting to whole channel.	
Continuous	Resolution	1920x1080, 1280x720, 960x540
	FPS	30, 15, 10, 7, 6, 5, 4, 3, 2, 1 fps
	Quality	Super, High, Med, Low
❖ Event	Resolution	1920x1080, 1280x720, 960x540
	FPS	30, 15, 10, 7, 6, 5, 4, 3, 2, 1 fps
	Quality	Super, High, Med, Low
	❖ Duration	5 ~ 60 sec
	❖ PreAlarm	0 ~ 4 sec
❖ Total	It shows the total fps.	
❖ Estimated Recording Days	This is an automatic calculator of the recoding days.	

- ❖ Event recording has priority in recording. In C/E recording, the recording will follow conti recording setup in normal condition while it would follow event recording setup in event generation.
- ❖ For convenience, you can use the ‘Apply All’ menu to change with the same preference. You don’t have to setup each channel if you using the ‘Apply All’ function.
- ❖ Duration is to set post event recording time.
- ❖ Pre alarm is to set pre event recording time.
- ❖ Total shows total fps of all channels. If total fps is more than supported, it turns red. If it turns red, you need to set a lower resolution or FPS.
- ❖ Event recording has priority in recording. In C/E recording, the recording will follow conti recording setup in normal condition while it would follow event recording setup in event generation.

2) Group

- With this menu, you can set the group using the scheduler. If you choose ‘Group’ tab, you can see the similar screen with ‘Record’. The setting is similar

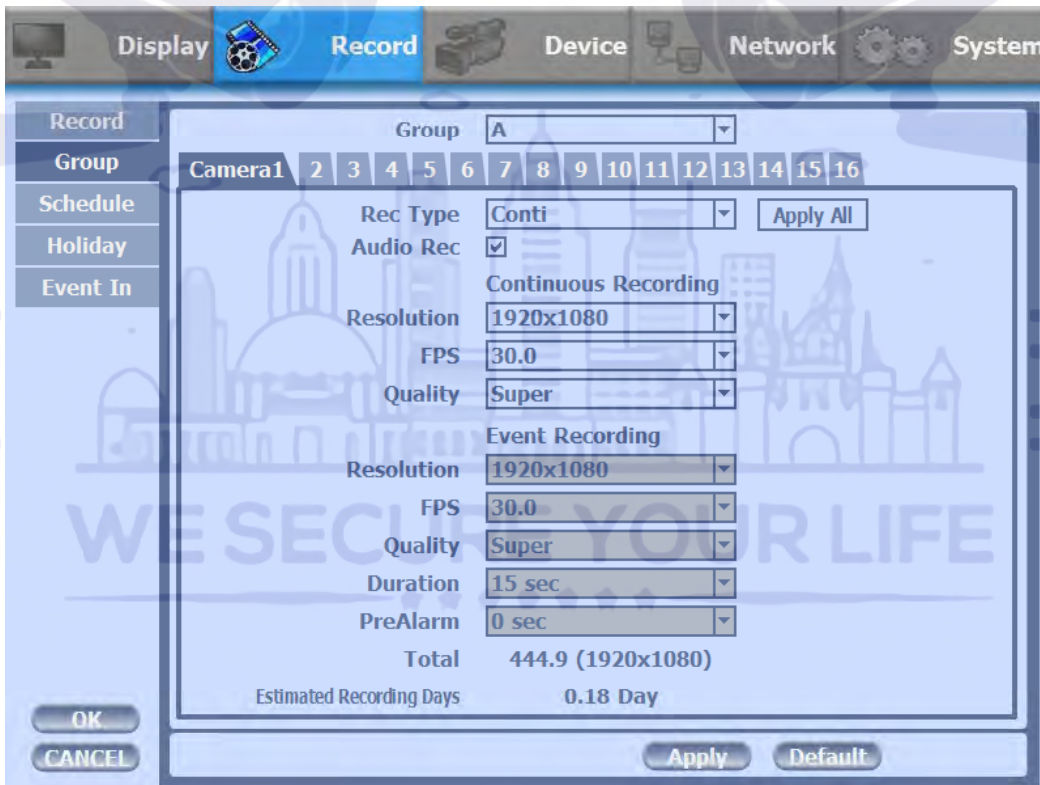


3) Schedule

- In recording, Schedule recording setting is most preferred. So if you activate the weekly scheduler, you cannot record manually.
- Schedule On : The weekly scheduler is activated.
- Holiday On : The holiday that set by user is activated.
- Since you can set recording weekly, you can reduce recording of unnecessary time period. In Scheduler window, days and channels are displayed, and recording information for each channel is displayed at bottom of window.

❖ How to set the weekly scheduler

1. Choose 'Scheduler' to 'On'.
2. Choose group and drag to wanted time.
3. Press the time bar , if you want to set the detailed time.
4. Press 'Enter' button to change the group of the selected area.
5. If you activate 'Holiday' scheduler, choose 'holiday'.

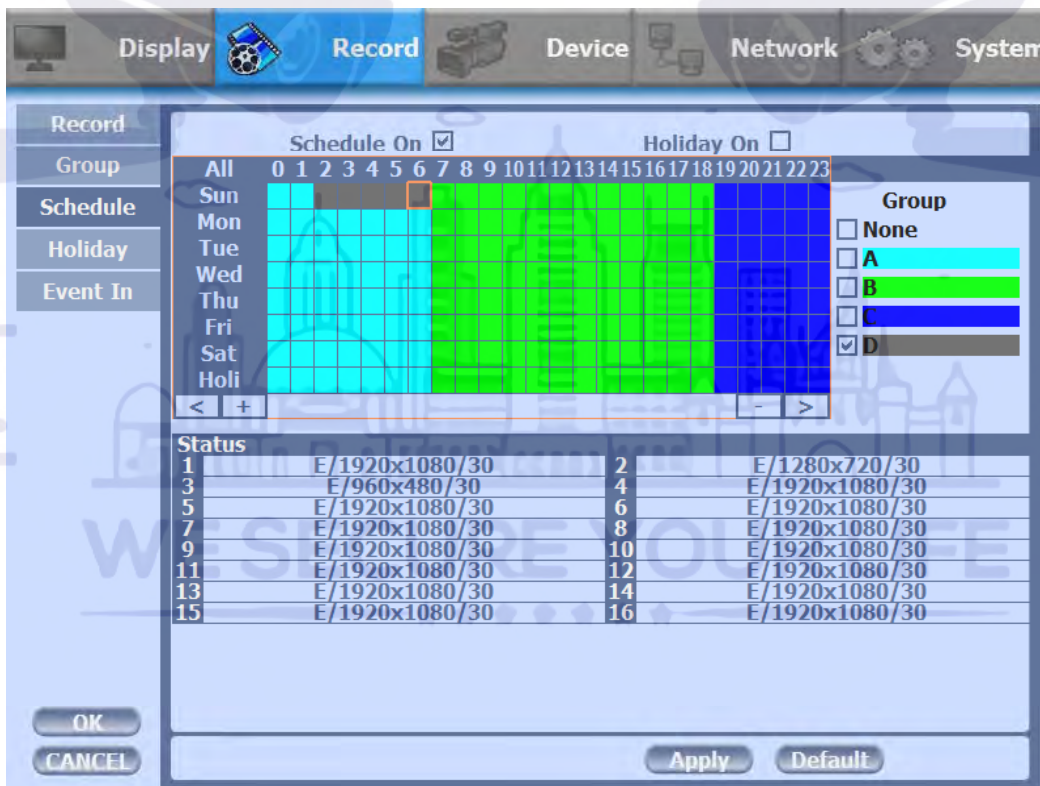

4) Holiday

With this menu, you can add the holidays. Use the 'Add' button for adding the holiday and use the 'Delete' or 'Delete All' buttons for removing the existing holidays.



EST.

1998


WE SECURE YOUR LIFE

5) Event In

- With this menu, you can set sensor input, motion detection setup. You can also set each channel individually.
- Although you set Motion Detection and Sensor Setting to On in Event menu, if Event Input in Rec Menu is set to None, it only detects and does not record.

❖ Summary regarding as Event Recording

Event In	OSD	Sensor	Motion Detection	POS
Sensor	<input checked="" type="checkbox"/>	ON	OFF	OFF
Motion Detection	<input checked="" type="checkbox"/>	OFF	ON	OFF
POS	<input checked="" type="checkbox"/>	OFF	OFF	ON
All Event	<input checked="" type="checkbox"/>	ON	ON	ON
None		OFF	OFF	OFF

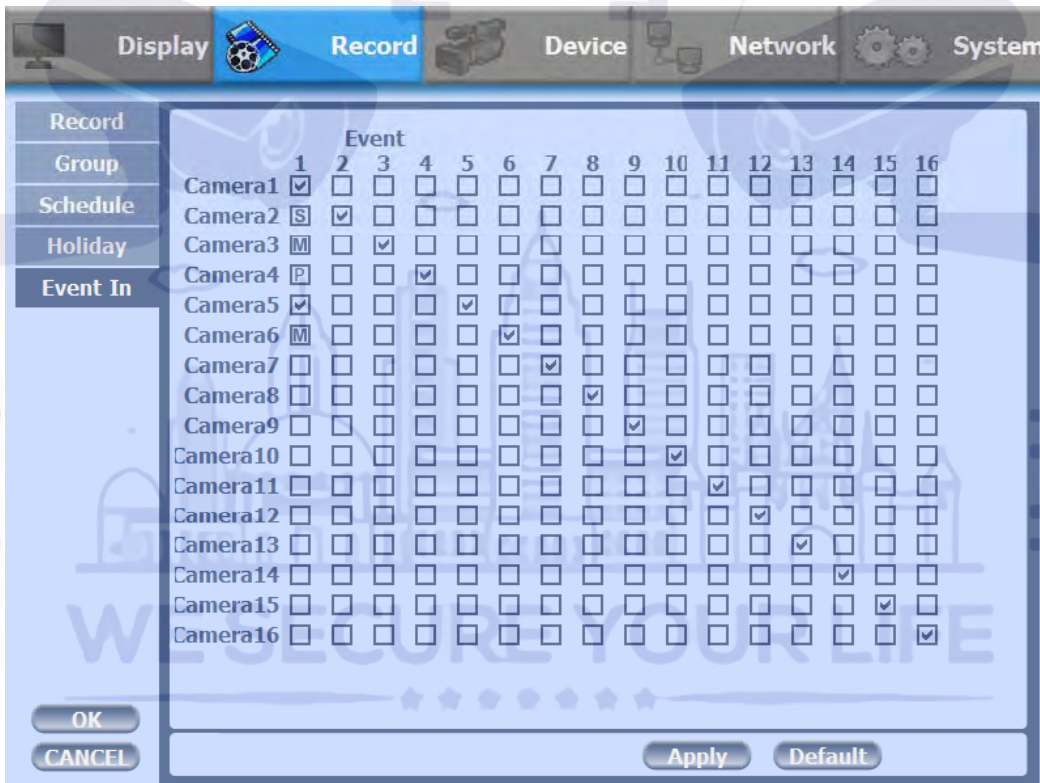

3-4-3. Device

- Configure and view Camera, Private Zone, Audio, Motion Detection, Alarm Out, PTZ settings and Controller.


1) Camera



Signal type	All video input is detected automatically/
Detected	Detected camera video type
Name	You can set the camera name.
Disable	Disable current camera. It is useful when the signal is bad.
Covert	Hide current camera from Live view but Record for future searching option.
4:3 Display	4:3 display of analog camera
Channel index	Channel index of camera

2) Private Zone

If you want to hide some part of the picture for privacy, you can choose the area by dragging the mouse. The selected area will be changed to black screen.

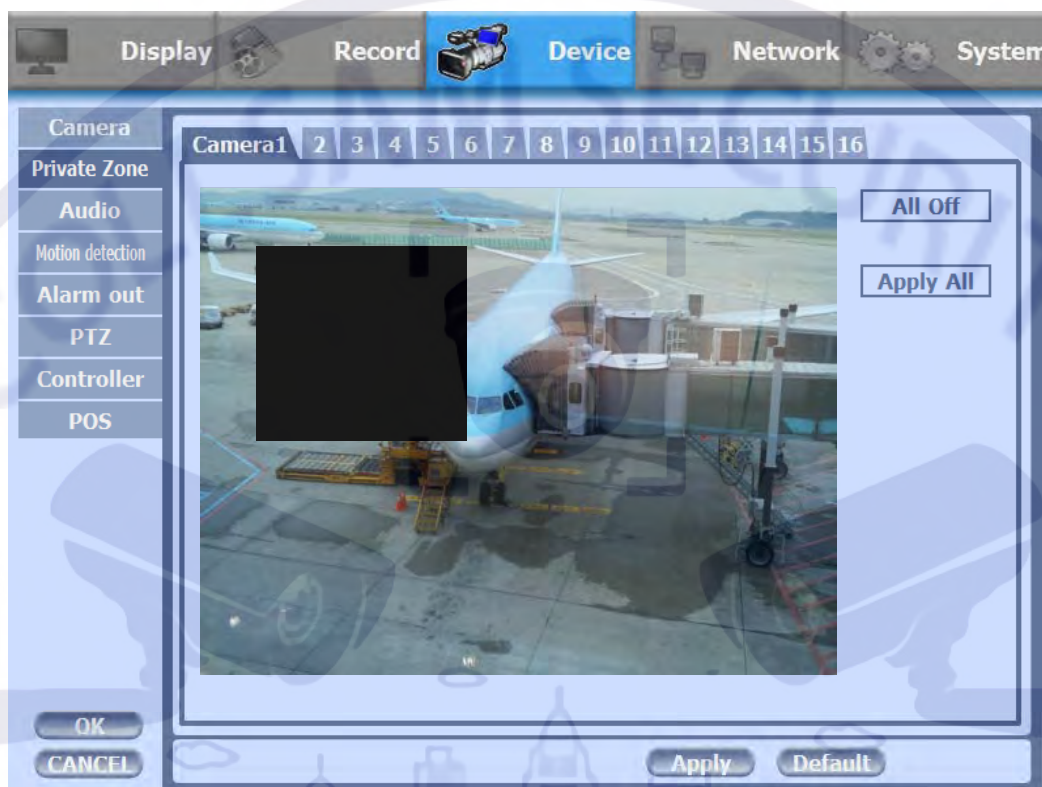

All Off	All off the private zone
Apply All	Apply the setting to whole channel


3) Audio



MAGIC 04/08 NMS 04/08	Audio 1~4	
MAGIC 08P	Audio 1~8	Assign audio input to a video channel.
MAGIC 16P/16M NMS 16	Audio 1~16	
All Series	Audio Out	Select which channel will be heard during Live View.

4) Motion Detection


- Change settings for Motion Grid selection and Sensitivity Level. You can set multiple area.

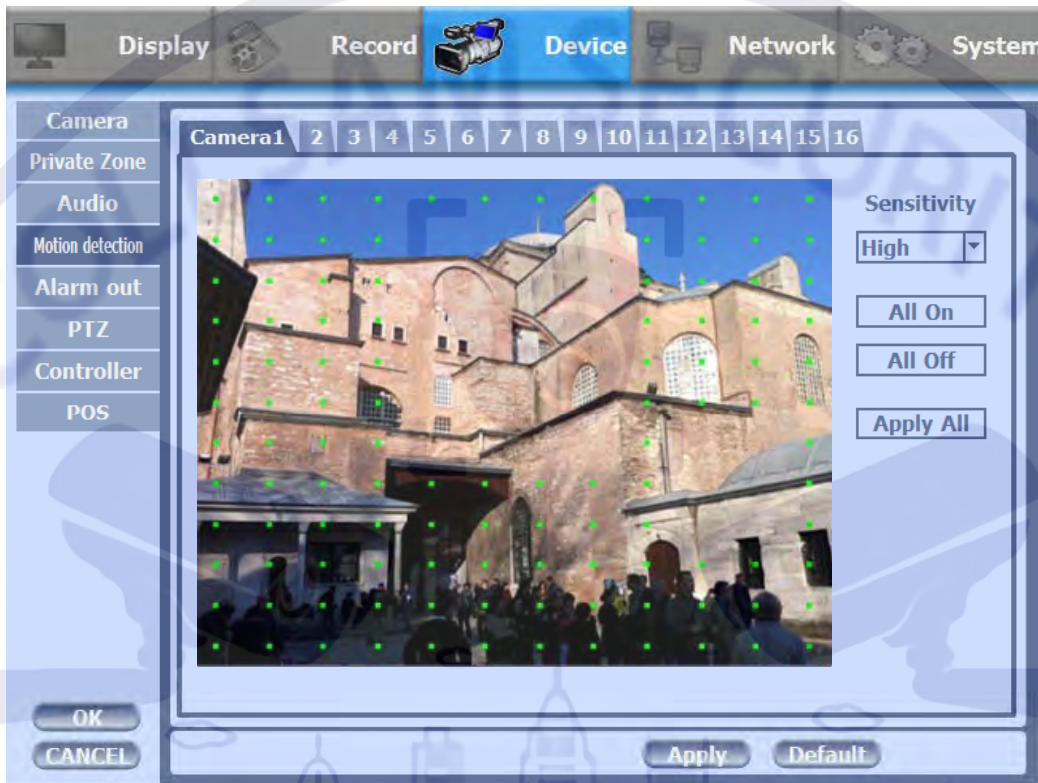

Sensitivity	Low, Mid, High
All On	This will activate the motion detection of the all area.
All Off	This will deactivate the motion detection of the all area.
Apply All	Apply the setting to whole channel

5) Alarm Out

- There are 4 types trigger such as sensor input, motion detection, POS and video loss. This setting is related that which trigger will be activate the action such as Relay, Popup, and Buzzer Alarm Out. Each type can have separate Duration value and also linked to selected camera.

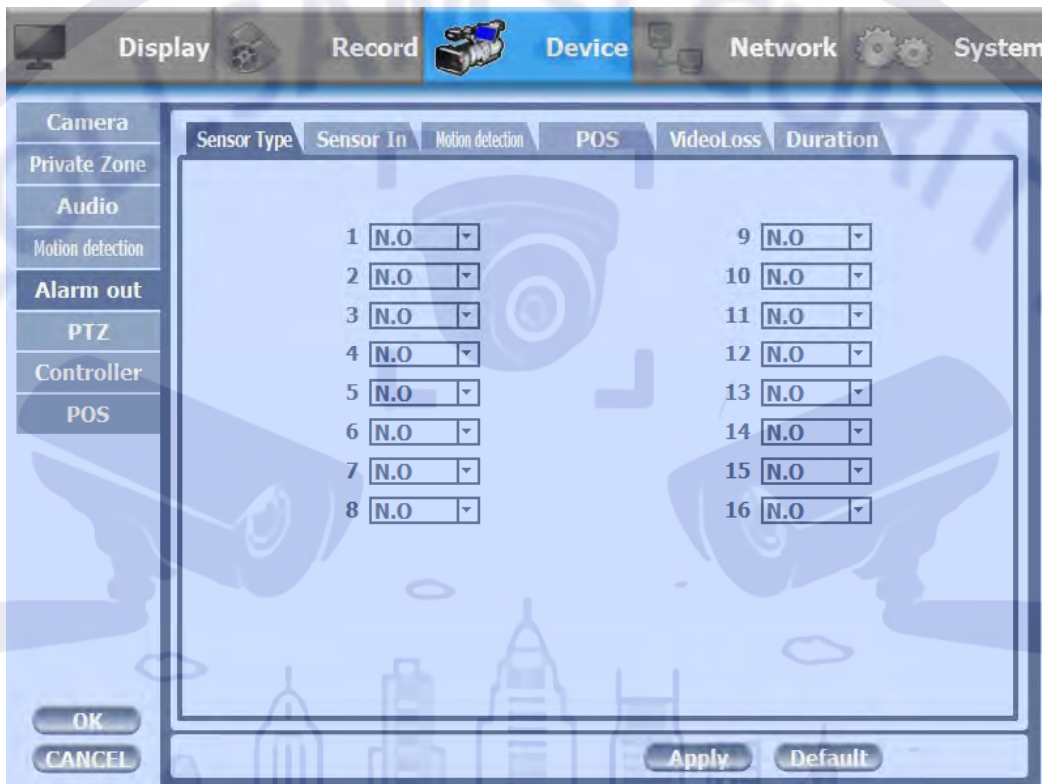

5-1) Sensor Type


Selectable option is N.O. (Normally Open) / N.C. (Normally Close)

MAGIC 04/08 NMS 04/08	1~4	N.O(Normal Open) / N.C(Normal Close)
MAGIC 08P	1~8	
MAGIC 16P/16M NMS 16	1~16	


❖ For more details, refer to [CH 2. Installation Method and Cautions].

5-2) Sensor In

- You can choose the action after sensor in between relay, buzzer sound, pop up, spot pop up and HD spot pop up. Also you can choose more than one action.

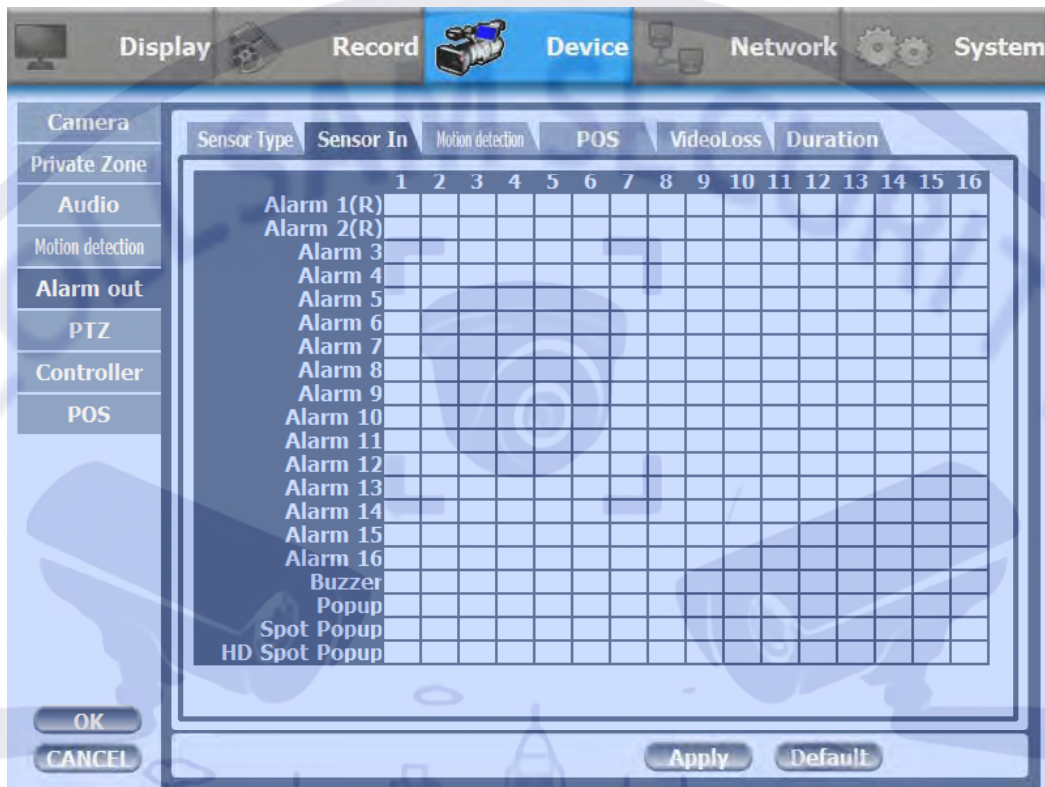


- Choose a sensor connected to a channel.
- If a sensor does not work, please check again the sensor type.
- Alarm 1 and 2 are relay out.
- Alarm 3 ~ 16 are TTL out(High, Low).

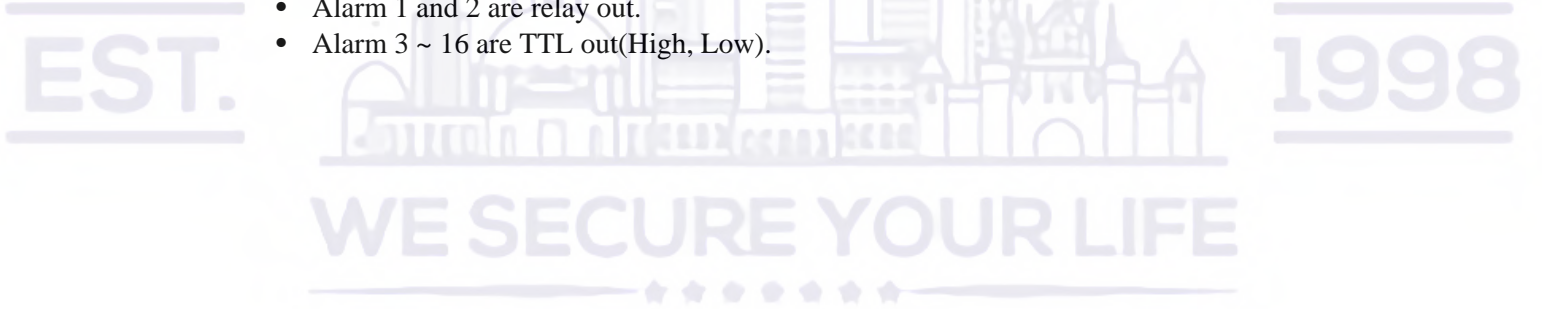

5-3) Motion Detection

- You can choose the action after motion detection between relay, buzzer sound, pop up, spot pop up, and HD spot pop up.

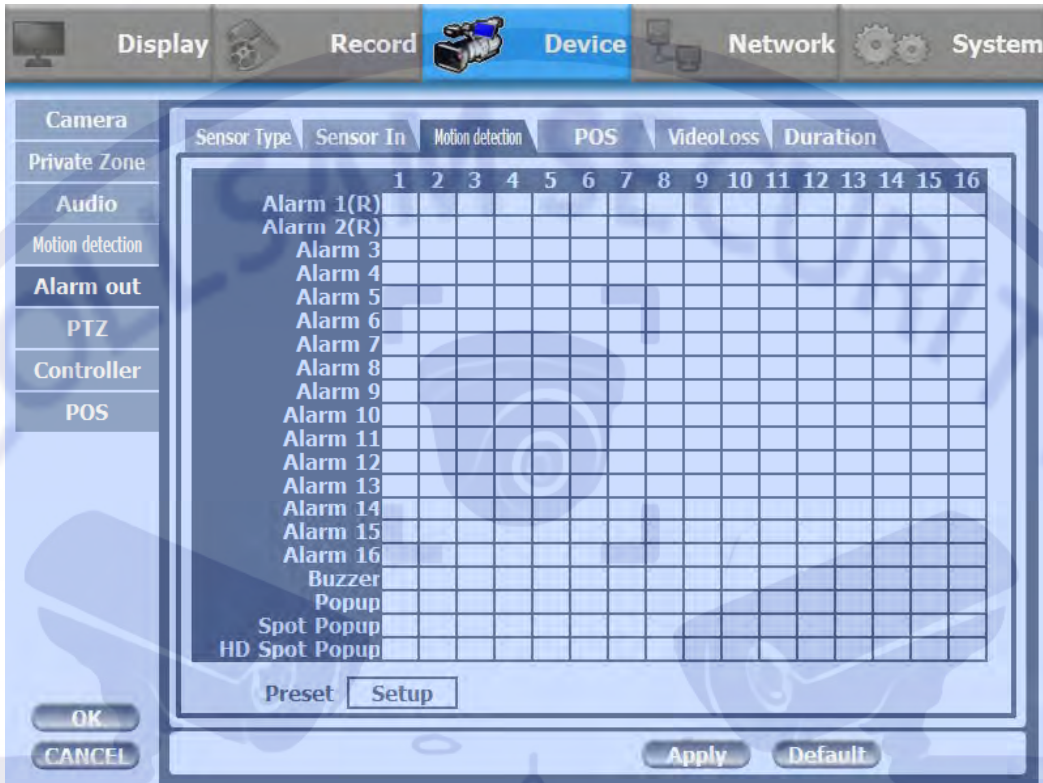

- Also you can choose more than one action. Furthermore you can set the preset position number by motion detection. If you push the 'setup' you can see the preset screen.



- You can assign the preset position individually by specific motion.

5-4) POS

- You can choose the action after POS transaction or video loss between relay, buzzer sound, pop up, spot pop up and HD spot pop up.



- Also you can choose more than one action.



5-5) Video Loss

- You can choose the action after motion detection between relay, buzzer sound, pop up, spot pop up, and HD spot pop up.




- Also you can choose more than one action.



5-6) Duration

- You can choose the duration time from 5 to 60 seconds after motion detection between relay, buzzer sound, pop up, spot pop up, HD spot pop up, and preset.

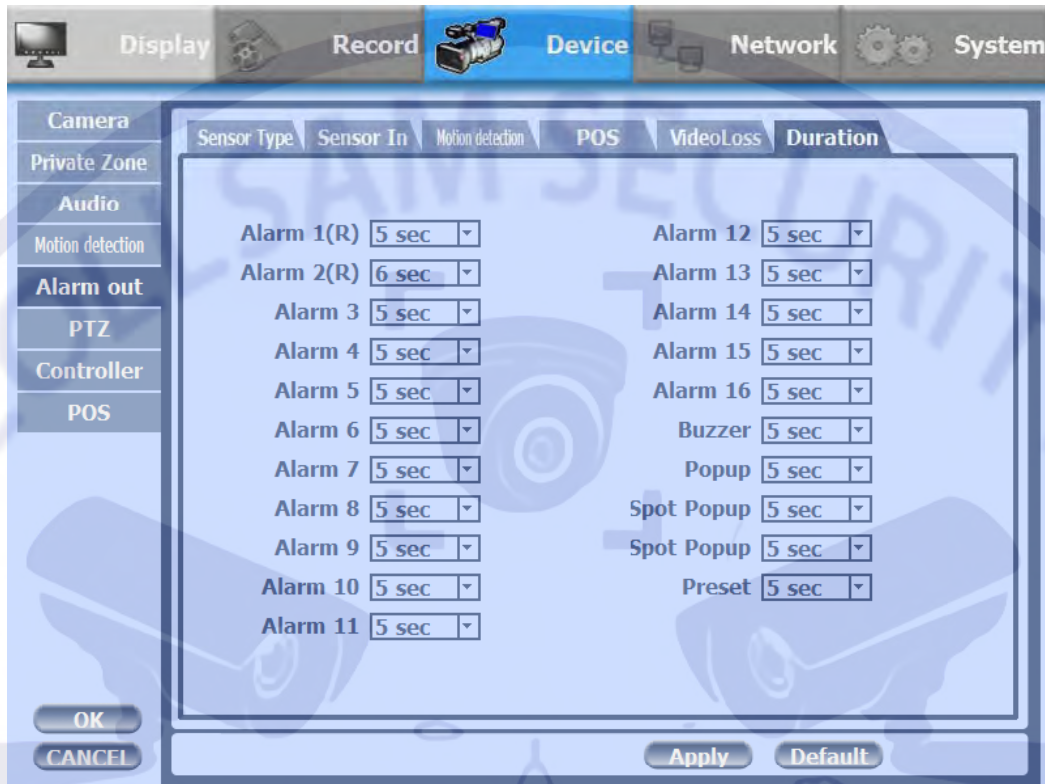

6) PTZ

Configure Pan/Tilt/Zoom camera for control via DVR System and Remote client.




Driver	Choose Driver to be suitable for PAN/TILT Camera manufacturer.
Address	Choose address to be suitable for PAN/TILT Camera manufacturer.
Baudrate	Choose baudrate to be suitable for PAN/TILT Camera manufacturer.

- You have to set Comport value according to the connected camera.
- ❖ For connection of PAN/TILT Camera Receiver part, refer to user's manual of the related PAN/TILT Camera.

- ❖ There are more kinds of camera which can be supported. Please contact the tech support to want to know the other cameras.

Driver	Baudrate
PELCO D type	2400~9600
PELCO P type	2400
PANASONIC	2400~19200
ORIENTAL	2400(Fixed)
LPT-A100L	9600(Fixed)
LG-SD110	2400~19200

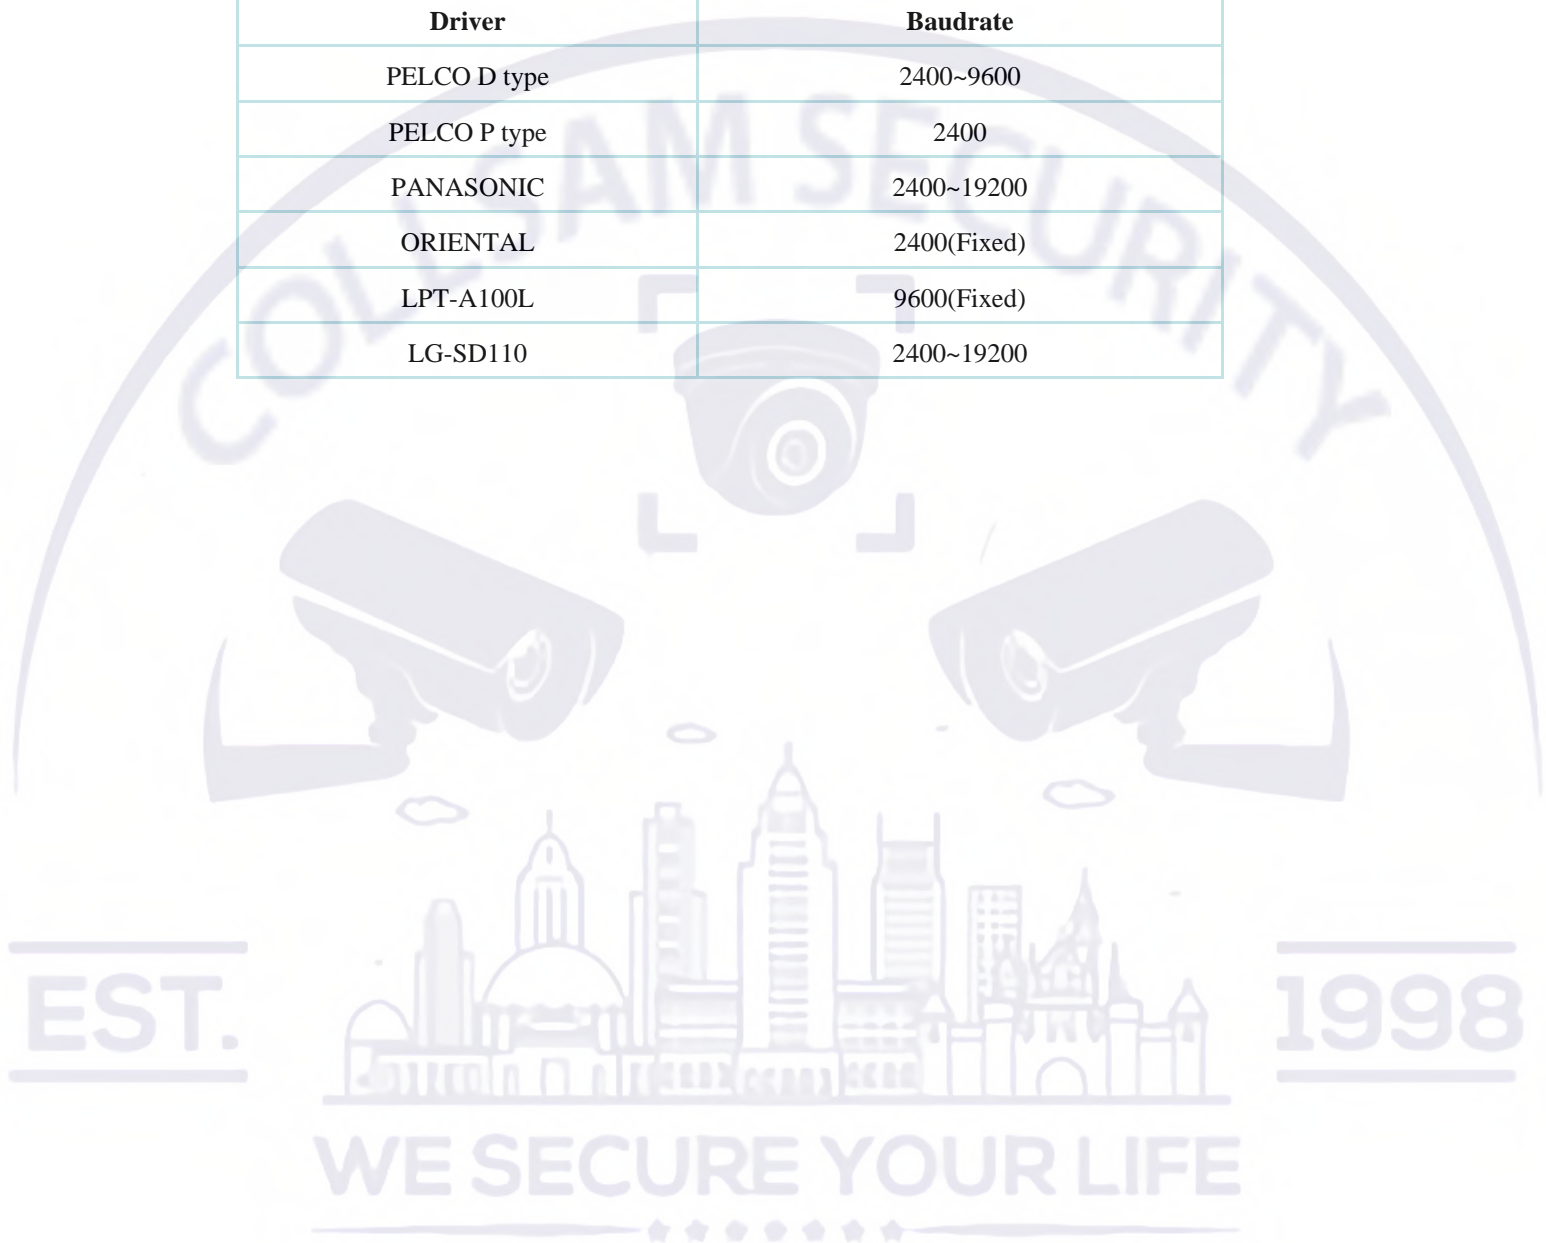

7) Controller

This sets the ID of remote control. If you have many DVRs in the same place, you can control separately the DVR by different remote control ID.

❖ Remote controller ID setup

Use the ID setup and number key to set the ID of remote control on the remote controller. You may check the ID by pressing the remote control key. The ID should be the same between the DVR and remote control.

And you can turn it on/off the key sound.




Remote Controller ID	All, 00 ~99
Key Buzzer	ON / OFF

8) POS

This sets the POS interface(text inserter) with the DVR and cash register.

- ※ If you are using a USB hub, you can use up to 4 USB POS.
- ※ MAGIC 8P/16P/16M and NMS 16 have a 1 serial port.

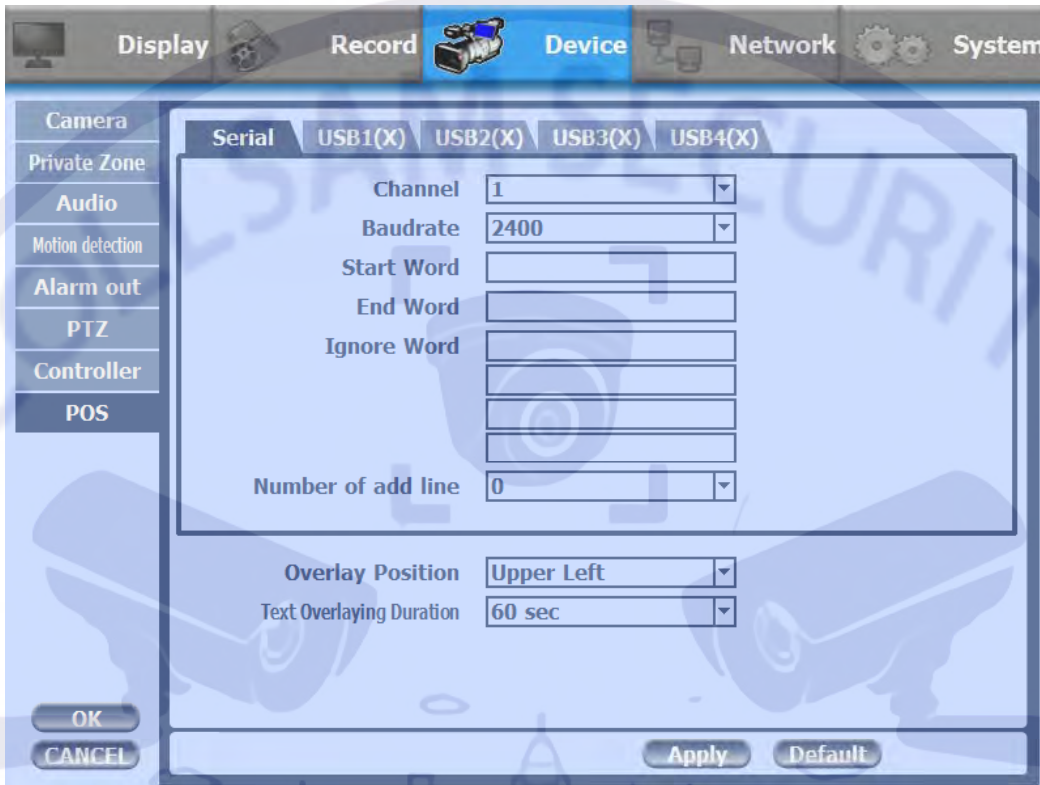

Channel	Select a Channel of POS
Baudrate	Select a baudrate of POS
Start Word	Type a start word of transaction
End Word	Type a end word of transaction. Text will be embedded into the picture between start word and end word.
Ignore Word	Type a word which you want ignore during text insertion.
Number of add line	This will determine the adding line after end word. (0~4)
Overlay Position	This will determine the text position.
Text Overlaying Duration	This will determine how long display the text up to 120 seconds. (60~120 sec)

❖ How to Connect POS

1. Connect the USB between POS and DVR.



*POS

USB

*DVR


USB

2. To set manually, at first you should know the setting values of the POS. You can get the information from the POS setting screen.

Register	Info	Condition	Setting				ETC
Counter	POS	Place	Receipt				
Setting	Setting	Setting	Setting				

Device Setup				
Device	Use	Part	Port	Protocol
Barcode Scanner	No			
Receipt Printer	Yes	PR4RT	COM1	4800,8,n,1
Cashbox	No			
Information	No			
Printer1	No			
Printer2	No			
Printer3	No			
Printer4	No			
Barcode Printer	No			
Terminal1	No			
Terminal2	No			
Terminal3	No			
Terminal4	No			
Telephone	No			
Save		Close		

3. If your setting is correct, you can see the below DVR screen on transaction. (This is the popup screen. You can set popup in the 'Event In' setup.)

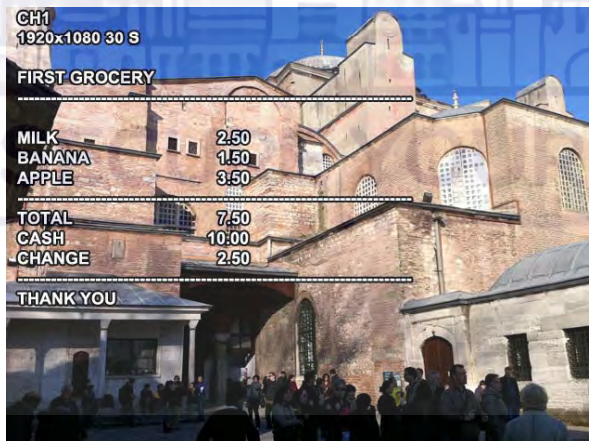


3-4-4. NETWORK

Configure and view Address, Port, DDNS, E-mail, Control and Status settings.

1) Address

Configure Network information for Remote client connection.

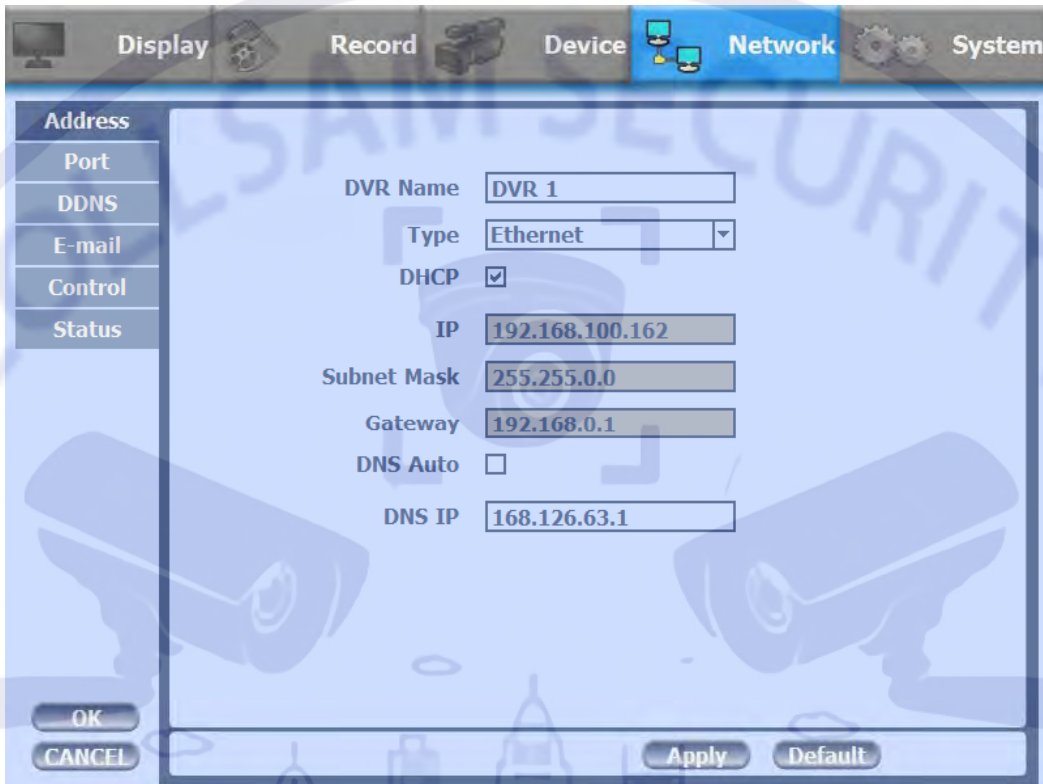

DVR Name	Type the URL of DVR using virtual keyboard.
Type	It can be supported only Ethernet.
DHCP (Dynamic Host Configuration Protocol)	Set whether you want to use DHCP or not (On/Off). If you connect LAN after setting it to On, IP is allocated automatically. If you set it to Off, you have to input IP. DHCP is a protocol that allows managers to manage and allocate IP address centrally.
IP	Type the IP address.
Subnet Mask	Type the subnet mask.
Gateway	Type a gateway.
DNS Auto	If you connect LAN after setting it to On, DNS IP is allocated automatically. If you set it to Off, you have to input DNS IP.
DNS IP	Type the DNS IP.

2) Port

There are 4 kinds of ports for the case such as watch, search, setup and web. You can individually set the port number of the DVR. The default is 8000. You can choose from 8000 to 9999.

If you activate 'uPNP (Universal plug and play)' box, DVR connects the router automatically with these port number. You don't have to setup the router.

Watch	Type the port. (8000~9999)
Search	Type the port. (8000~9999)
Setup	Type the port. (8000~9999)
Web	Type the port. (8000~9999)
uPNP	ON / OFF
uPNP Test	Test uPNP
Status	It shows the test result of uPNP.

3) DDNS

This is the function to automatically change the IP of DVR to URL. This product supports the automatic DDNS service using manufacture's internal server. Also you can choose DynDNS.

- ❖ If you choose 3R DDNS, the domain name is `http://xxxxxx.3-global.com`.
- ※ xxxxxx is Mac address of DVR.


4) E-mail

You can send the event with snapshot by email. Fill all the information correctly and push the 'Email Test'. Also you can select each event individually by 'Event Set'.

Receptor	Type the email address of the receptor.
Sender	Type the name of the sender.
SMTP Server	Type the SMTP server of the email account.
Port	Type the port of the email account.
Authentication	Set whether you want to use authentication or not (On/Off).
SSL	Set whether you want to use SSL or not (On/Off).
Account	Type the email account of the sender.
Password	Type the password of the send's email account.
Duration	Set the duration time to send continuous mails.
E-mail Test	Test the email account.
❖ Event Set	Set events

❖ **Event Set**

Set events to send the email.

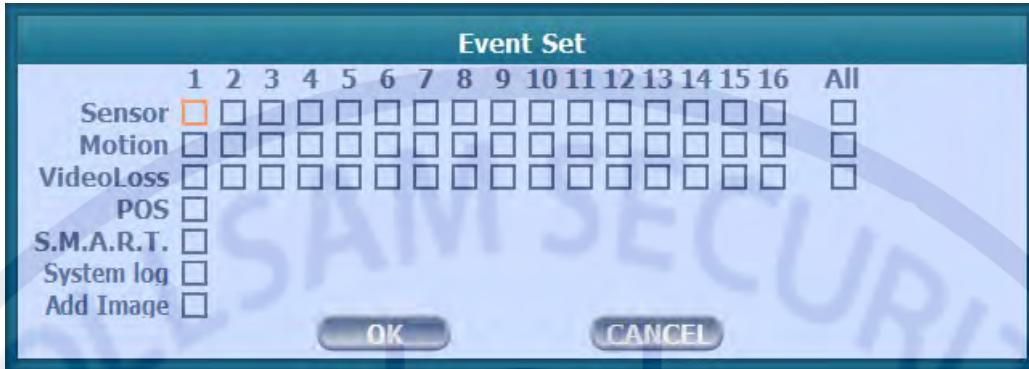

Sensor	Detect a sensor input.
Motion	Detect a motion detection.
Video Loss	Detect a video loss.
POS	Send inserted text of POS to the email.
S.M.A.R.T.	Send checked HDD S.M.A.R.T result to the email.
System log	Send system log to the email.
Add Image	Send a snapshot of events to the email.


EST.



1998

5) Control


CMS will use the ‘High resolution’ setting in the case of full screen or quad screen, and will use the ‘Low resolution’ setting in the case of more than 4 split. You can adjust the number of split to switch from High to Low resolution.

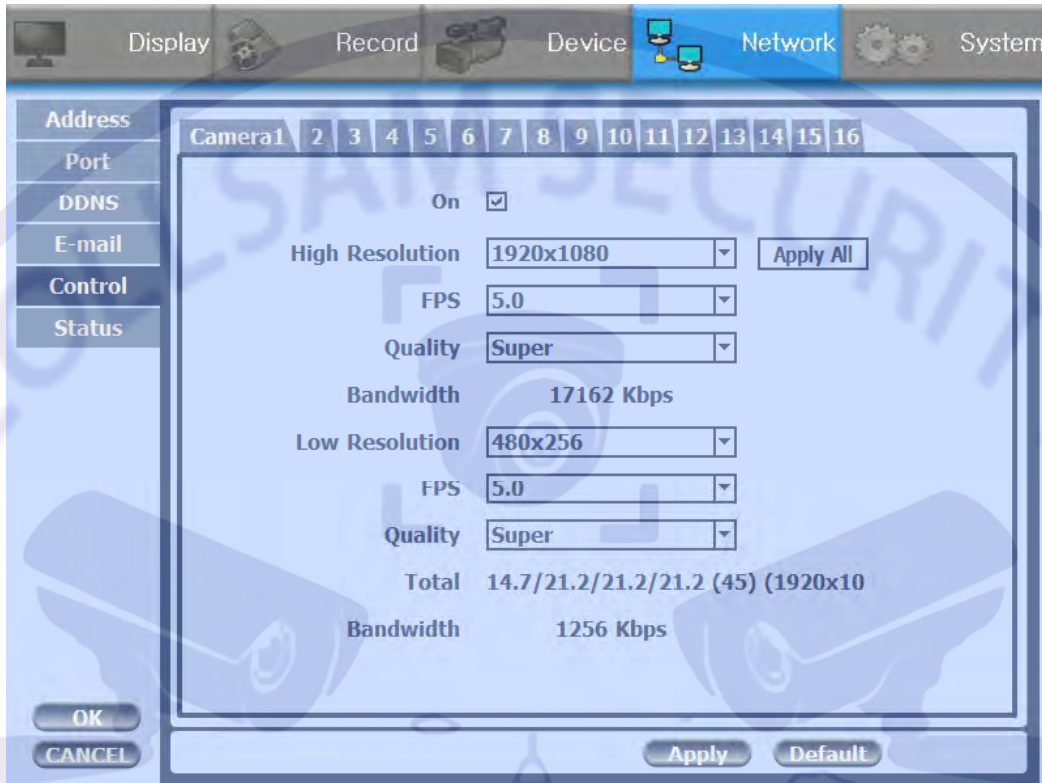

On	Set whether you want to use the channel on CMS or not (On/Off).
High Resolution	You can choose the resolution of transmission. (1920x1080, 1280x720, 960x540)
FPS	You can adjust the frame rate.(1~30 fps)
Quality	Set picture quality.(Super, High, Med, Low)
Bandwidth	It shows the video transmission of the high resolution.
Low Resolution	It is using the fixed resolution of transmission.(480x256)
FPS	You can adjust the frame rate.(1~30 fps)
Quality	Set picture quality.(Super, High, Med, Low)
Bandwidth	It shows the video transmission of the low resolution.
Total	Total shows total fps of all channels. If total fps is more than supported, it turns red. If it turns red, you need to set a lower resolution or FPS.

6) Status

This shows the information how many connections and what is the action of each connection.

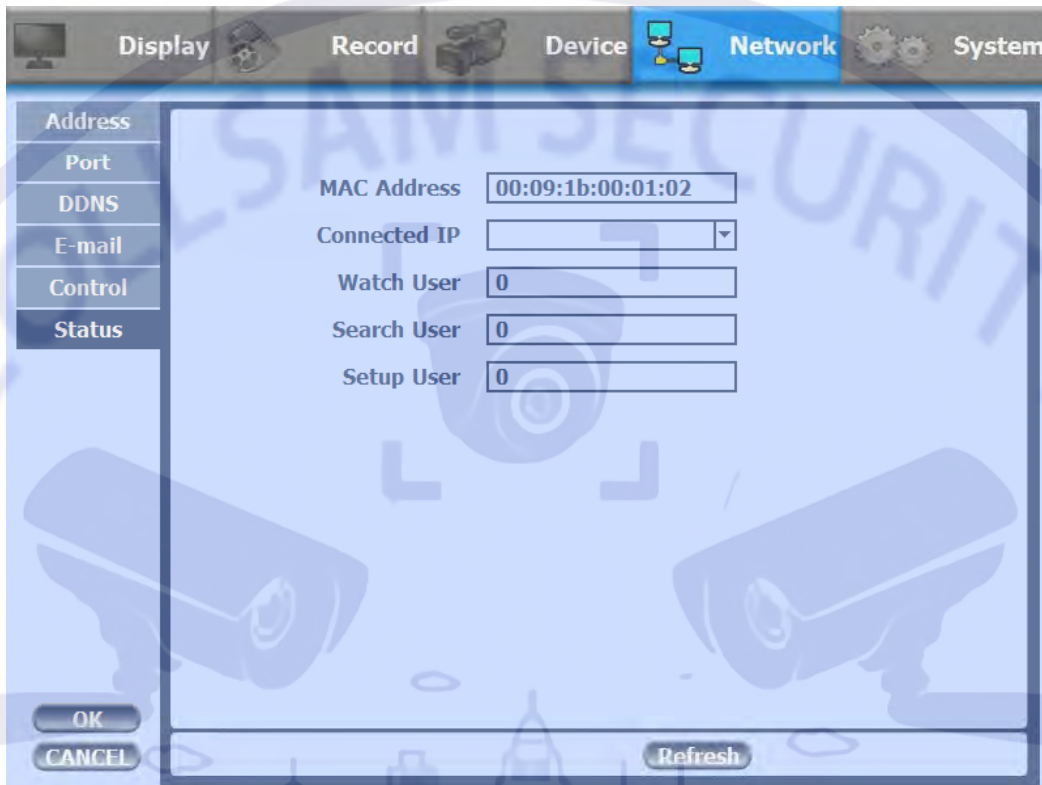

MAC Address	This displays MAC address of DVR.
Connected IP	This displays all the connected IP.
Watch User	This displays how many connection for live viewing.
Search User	This displays how many connection for playback.
Setup User	This displays how many connection for DVR setting.

3-4-5. SYSTEM

Configure and view system Date/Time, User Authority, Storage, System Log and Configuration settings

1) Date/Time



Timezone	Choose the time zone of your site. If you using the NTP function, it must be set correctly to your zone.
Daylight Saving Time	It enables to adapt the day light saving time automatically.
Date / Time	This sets product time. Input time by pressing number buttons after moving cursor with direction buttons. Be careful to move to backward. The overlapped data will be deleted with warning message.
NTP (Network Time Protocol) Server	This function is to change the time of DVR automatically via network. Press the 'Enter' button and using the virtual keyboard, type the address of NTP server.
NTP Check	choose the time sync frequency.
Sync	Sync the time and NTP.

2) User Authority

This sets User authority individually. You can give to each users the authorities such as setup, search, backup, PTZ, network and camera control.



ID	Type an ID.
Password	Type a password.
Setup	Authorizes the setting of the system.
Search	Authorizing the search of the system.
Backup	Authorizing backup of the system.
PTZ	Authorizing PTZ of the system.
Network	Authorizing network of the system.
Lock	select the auto-lock time.(Off, 1~10 min)

3) Storage


Display the information and usage of the hard disk drives.

MAGIC 04/08, NMS 04/08	You can install 2 Hard disk drives.
MAGIC 08P/16P/16M, NMS 16	You can install 4 Hard disk drives and 1 eSATA

Total	Display all the HDD usage being used for the product. If you press the 'Enter' button on here, all the hard disk drives will be formatted.
HDD Check	Check all the HDD.
HDD Overwrite	Determine whether you want to continue recording if there is no spare saving space at hard disk drives.
Mirroring	If you install two hard disk drives, you can set the second drive as a backup drive by mirroring. The mirrored disk size will be the same or greater than master HDD.
Auto Deletion	You can select the holding period of the data. If you choose 'OFF', the DVR keep the maximum data regarding the HDD capacity.
Alarm Check HDD	There is an alarm if there is no HDD or no format. It is useful to check the HDD absence.
Alarm Check HDD (eSATA)	There is an alarm if there is no eSATA or no format. It is useful to check the eSATA absence.
Alarm out	You can choose Buzzer or Relay.

4) S.M.A.R.T :Self-Monitoring Analysis and Reporting Technology


This function lets you probe the hard disk drives and investigate the status of the drivers automatically.

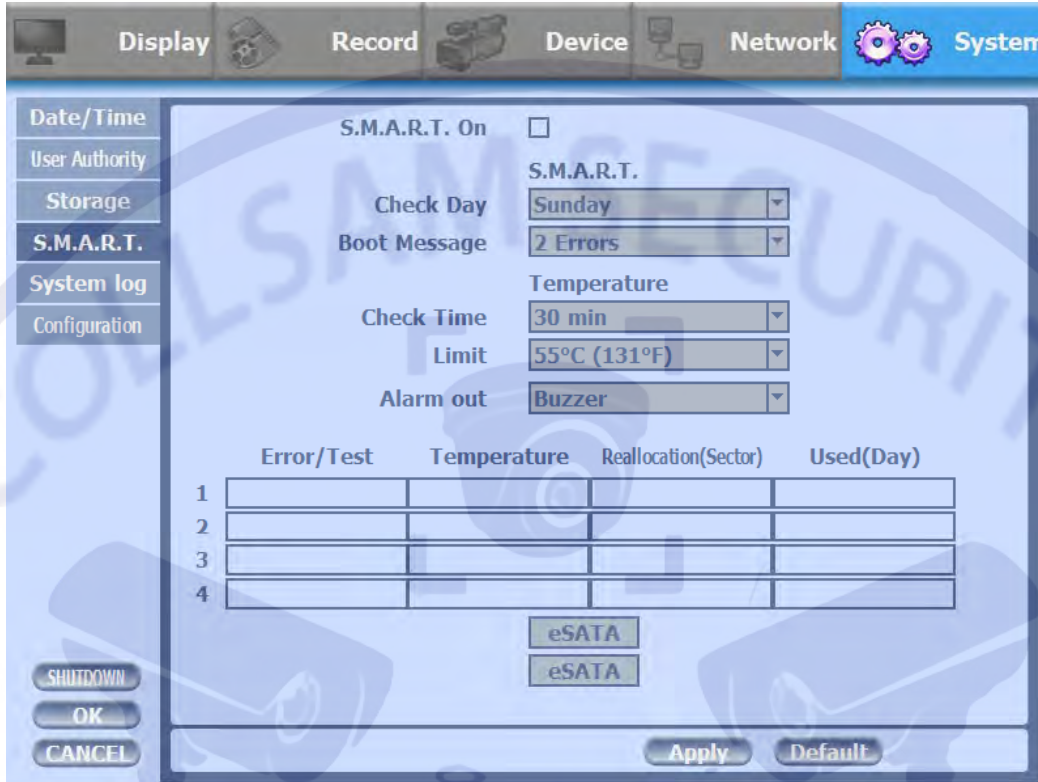

S.M.A.R.T.	
S.M.A.R.T. On	Set whether you want to use S.M.A.R.T. or not (On/Off).
Check Day	Determine the date to perform the S.M.A.R.T.
Boot Message	The number of message of showing the errors.
	Temperature
Check Time	Temperature check period.
Limit	The upper tolerance of the hard disk drive temperature.
Alarm out	You can choose Buzzer or Relay
eSATA	Check eSATA HDD.

5) System Log


You may view all System administration log from Setup → System → System Log. Also you can export the system log and easily send it to technical support for trouble shooting.

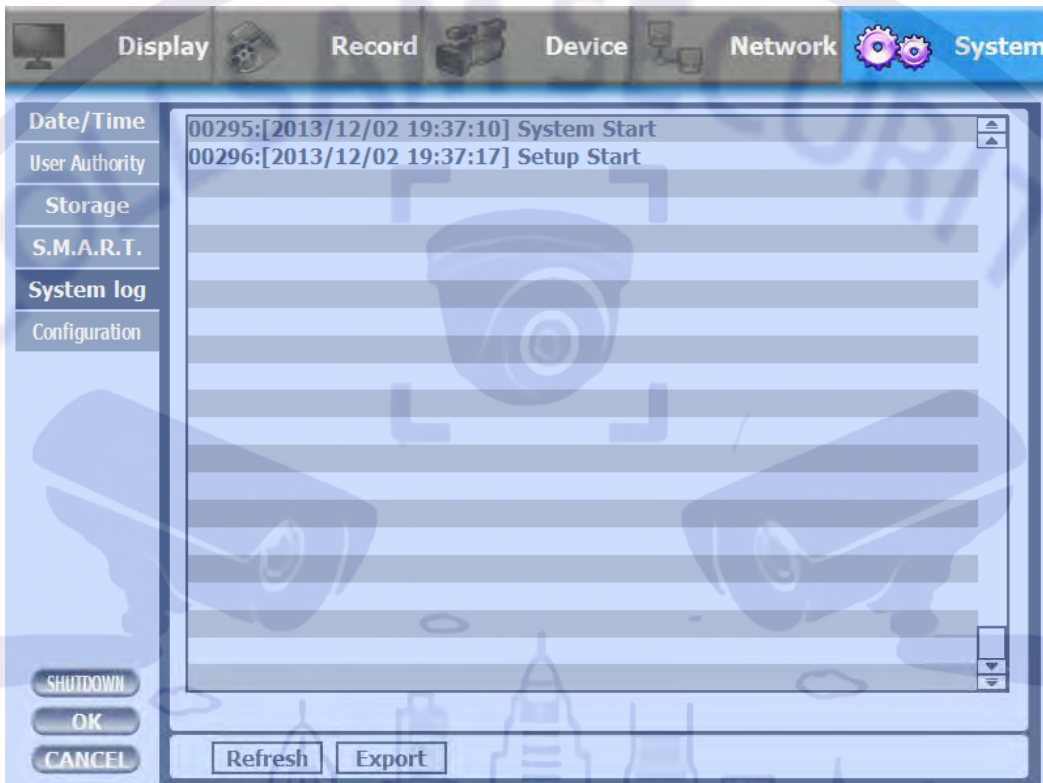

Refresh	Refresh the system log.
Export	Export the system log.

6) Configuration

Shown at the following screen, from Setup → System → Firmware, you may view the current firmware version as well as Upgrade the firmware and additionally, Export, Import, and Default DVR Configuration.

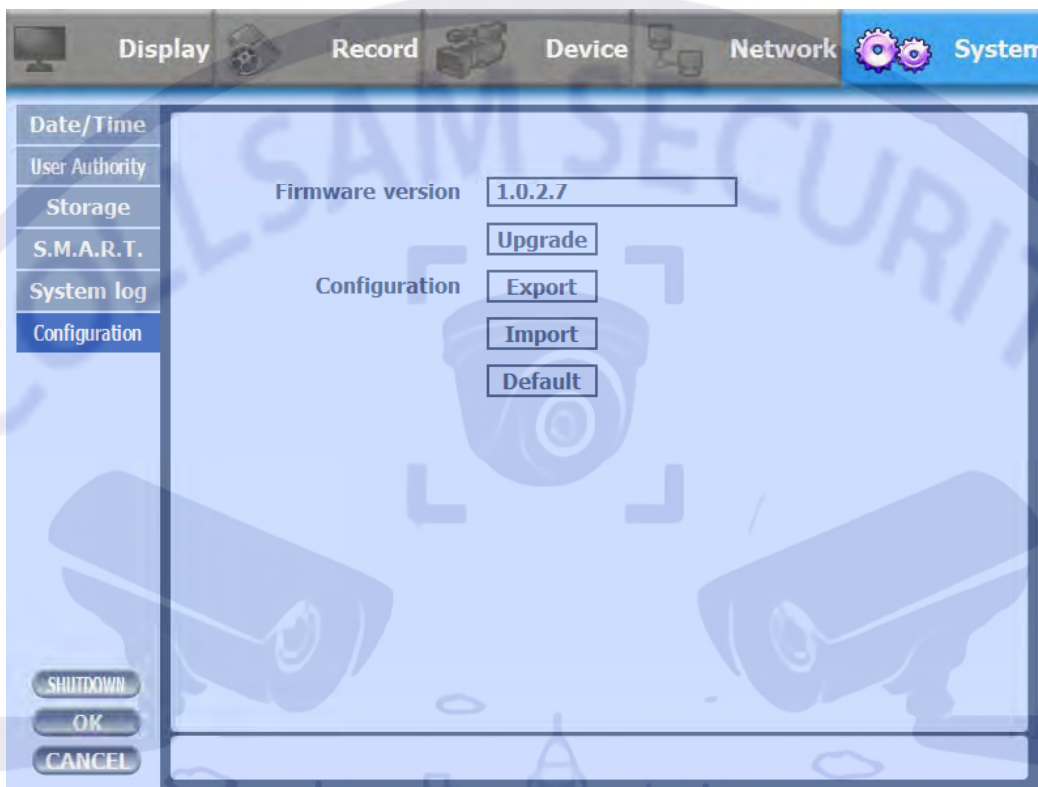


Firmware version	Show the firmware version.
Upgrade	Upgrade the firmware.
Export	Export system settings.
Import	Import system settings.
Default	Return to factory default settings.

You should connect correctly the USB devices, before you use firmware upgrade, export and import.


3-5. Firmware Upgrade

If you want to upgrade, please follow that;

1. Download the latest firmware to USB memory root directory.
2. Put this memory to USB slot.
3. Choose 'Upgrade' button in MENU->SYSTEM->Configuration.
4. You can see the below screen will appear.
5. **DOUBLE CLICK** the desired file with mouse, and it will automatically proceed

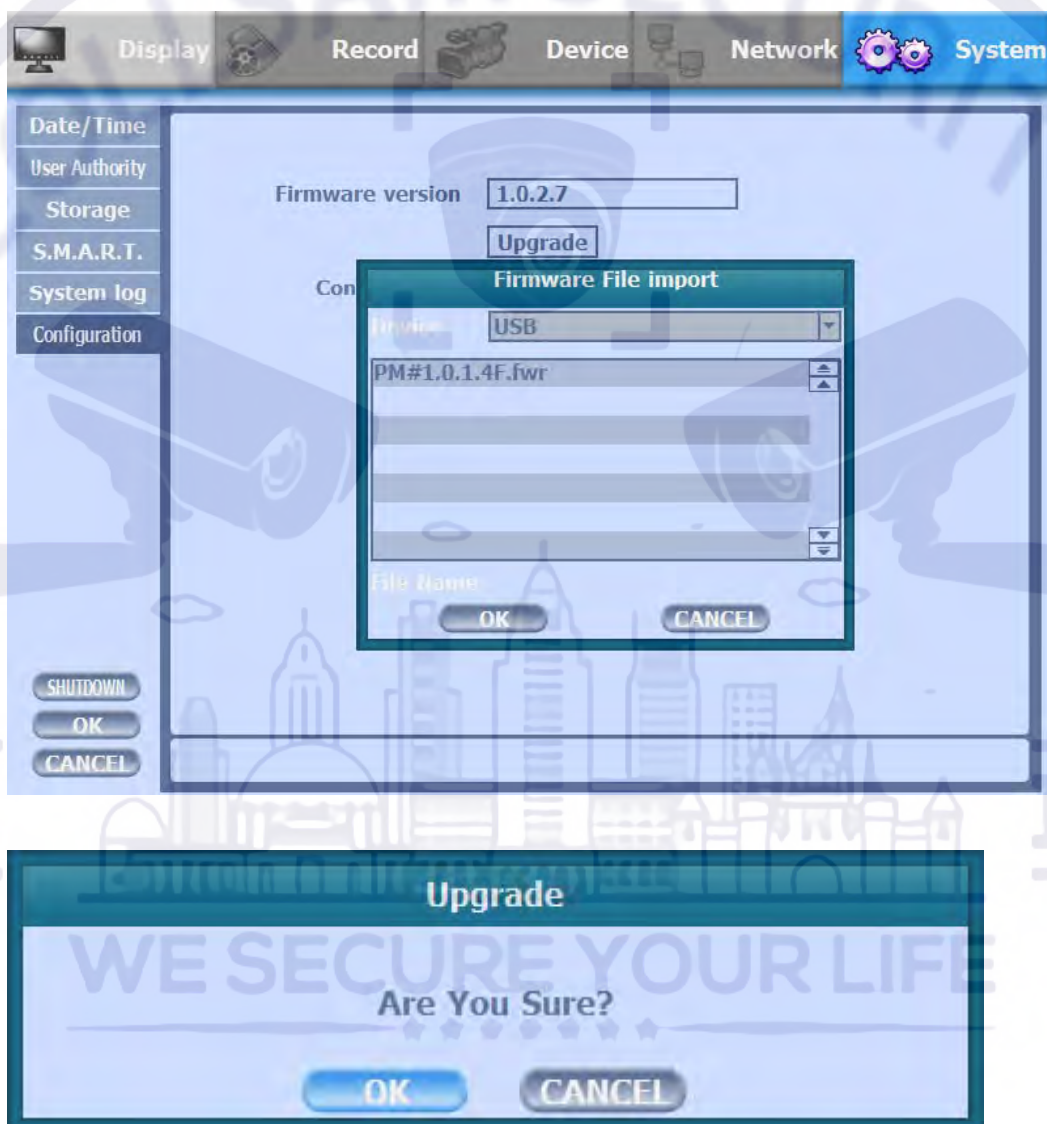

If you choose OK, you can see the below download window on the DVR screen.

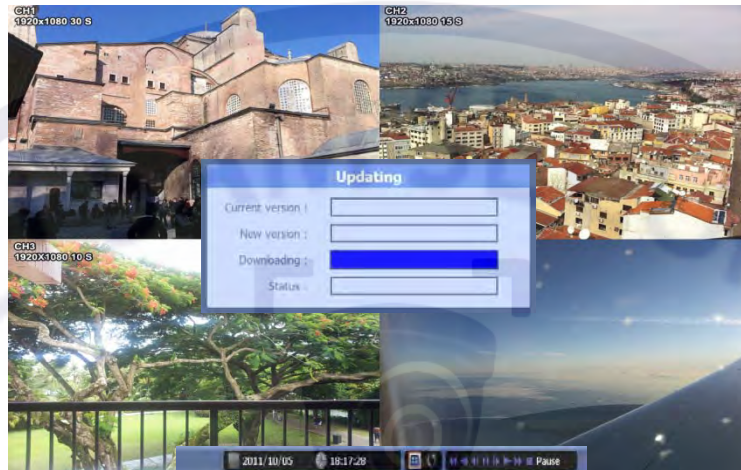

WARNING!!!

Do not turn off the power during download procedure. If you power off manually, all memory will be deleted !

※ After upgrading, DVR will reboot automatically. Before rebooting, do not operate manually !

Trouble Shooting

Symptom	Checkpoint	Countermeasure
<ul style="list-style-type: none"> ● Can't turn on power ● There is no image on monitor ● Only INFO OSD is on monitor and no image ● There is Video Loss message. ● Can't search with Client Program. ● Motion Detection doesn't work well ● There are differences between Live screen and actual condition during remote monitoring ● Live doesn't work well in remote monitoring 	<ul style="list-style-type: none"> ● Is DVR connected to power supply cable? ● Are DVR and monitor turned on? ● Are cables of DVR connected?. ● Is camera turned on? ● Are cables of DVR and monitor connected? ● Is NTSC/PAL setting normal? ● Is connection between DVR and camera normal? ● Isn't another user using same IP? ● Isn't it too bright or too dark? ● Isn't camera installed too far away? ● Is it set to True Color? ● Are PC specifications and VGA Card specifications are appropriate? 	<ul style="list-style-type: none"> ● Connect power cable ● Turn on power. ● Connect DVR cable. ● Turn on camera. ● Connect cables of DVR and monitor. ● Check whether NTSC/PAL setting is SETUP properly ● Check whether DVR and camera are connected properly ● Use it after another use finishes using it. If another user is searching DVR remotely with same IP, you can not search. ● Increase Motion Detection sensitivity. ● Install camera closer. ● Since it buffers Live images, there might be changes with actual condition. (1~2 sec) ● Refer to recommended Client PC specifications in 4-1 Installing Client Program?

Warranty

This product guarantees free repair based on guarantee regulations only if the malfunction is caused while customers were using it properly.

Warranty Period

Warranty period begins from the day this product is delivered to customer.

Model Name			
Warranty Period	From To (for year)		
User	Address :		
	Company :		
	NAME :	TEL :	
Retailer	Address :		
	Company :		
	NAME :	TEL :	

In case the malfunction is caused by one of following reasons, repair shall be provided as charged service.

- A) If cause for the malfunction is from external condition other than the product
- B) If malfunction is caused because user tried to reassemble the product
- C) If malfunction is caused by natural disasters such as fire, water disaster, thunder and others
- D) If malfunction is caused while transporting or moving the product after purchasing

1. All other refunds other than warranty repair for this product shall be based on actual cost.
2. Refund standard about product repair, exchange or repayment observe Regulations for Compensating Customers' Damage provided by the Economic Planning Board.
3. Repair part providing period is for five years from the day the production for this product stops.

	WE SECURE YOUR LIFE	
	Address	
	Tel	
	Fax	
	URL	

Appendix A. CMS(Client Management Software)

A-1. Install CMS for Windows PC

CMS is a program for communication between DVR and PC to control signal and video.

Insert the enclosed CD, and go to CD-ROM Drive and operate installer file, CMS Installer 32(64).msi, to operate the installer program.

After installation, a folder will be created on the program menu of windows.


CMS is possible to change setting up, playing a live video and searching a file of DVR to connect DVR and PC with LAN.

This program is supporting for Windows XP(32bit), 7(32, 64bit) and 8(32, 64bit).

Client PC's CPU and VGA affect absolutely in work of CMS.

You have to use verified VGA because it affects other parts .

※ Provided CMS Software can occur Windows errors, if you use CMS with any other application since large amounts of data over the network transmitting and receiving. In particular, the Live and playback functions may not work smoothly while you are running the system monitors and internet surveillance like antivirus programs.

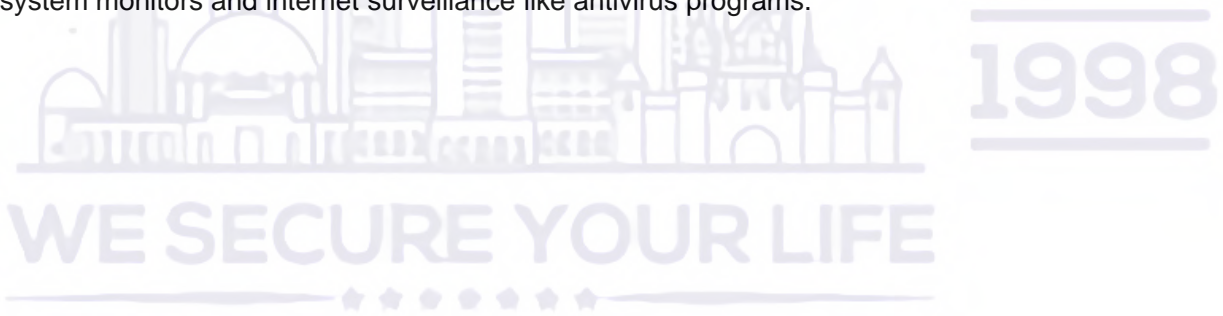

▶ System Minimum Requirements


- CPU : intel core 2 duo 3.0MHz processor or better
- RAM : 1GB or more
- LAN : support network adapters 100Mbps or better

If there are many connected channels more and more in case of Favorite, CPU share will be more occupied.

▶ Available VGA

- Video Cards that support OpenGL 2.0
- Support for DirectX 9.0 or higher
- Support for 1280X720~1920X1080


If you use the lower chipset(S3, Trident and so on) of specification, CMS program will make error or do not work. It can be played only with true color(32 bit). It cannot be played with high color(16 bit) and 256 color.

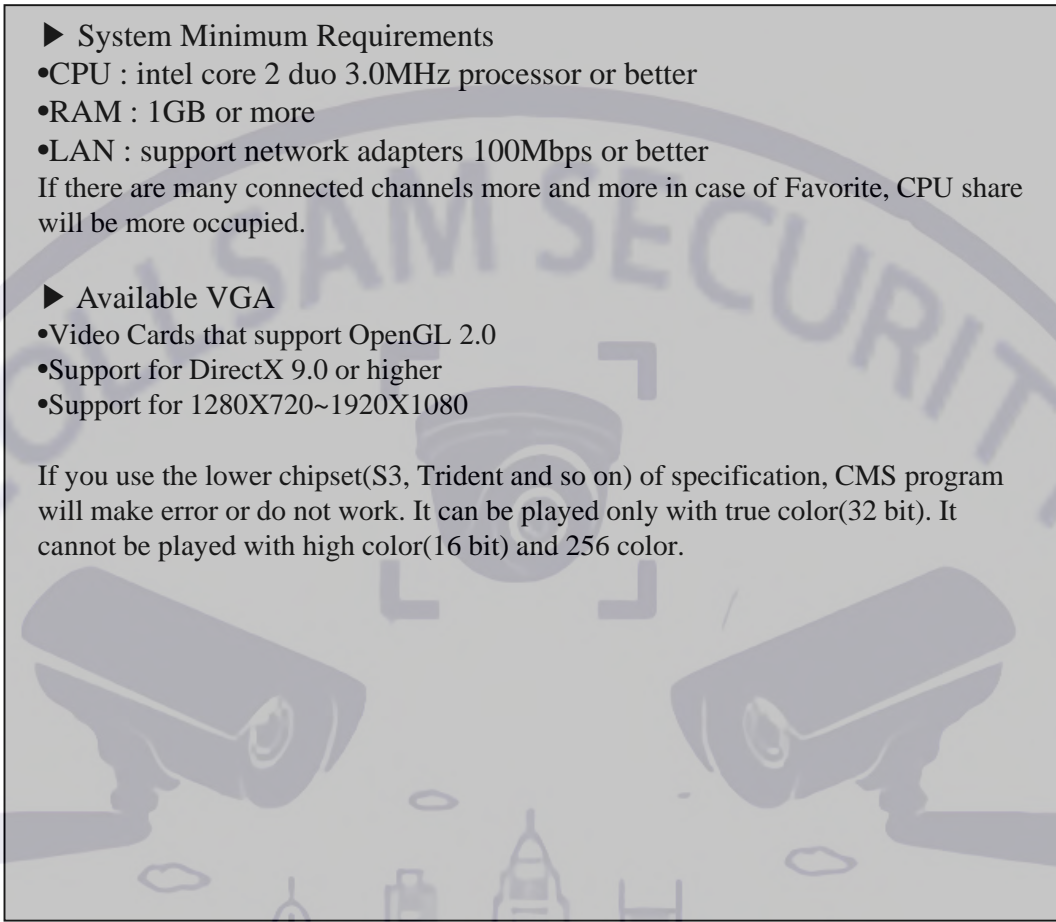


- ① Insert the enclosed CD, and go to CD-ROM Drive and operate installer file, CMS Installer 32(64).msi, to operate the installer program.




- ② Click the Next for installation. If you don't choose a directory to install program, it will be located at C:\ProgramData\CMS.

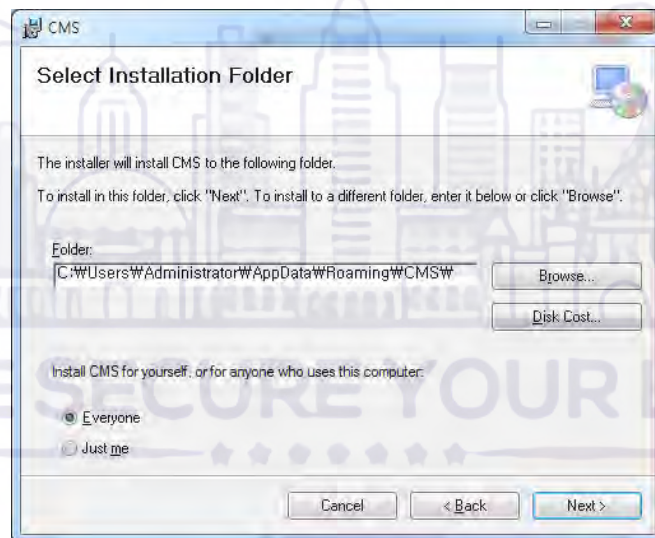


- ③ Click the Next for installation.

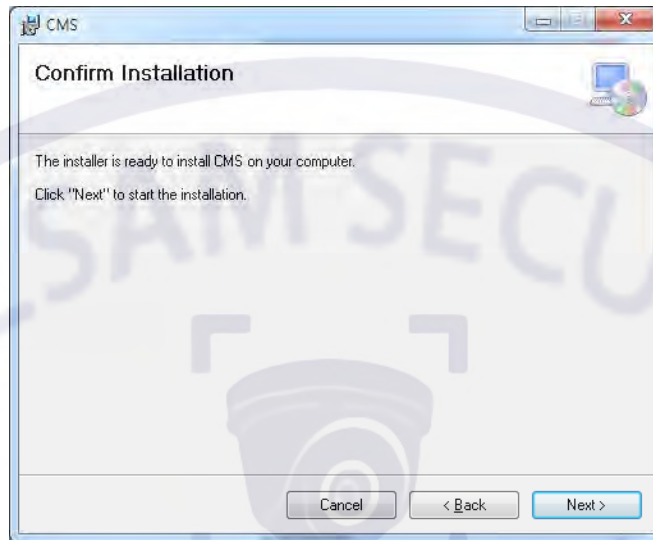


- ④ When CMS installation program is processing, you can see the message that CMS is being installed on the screen.

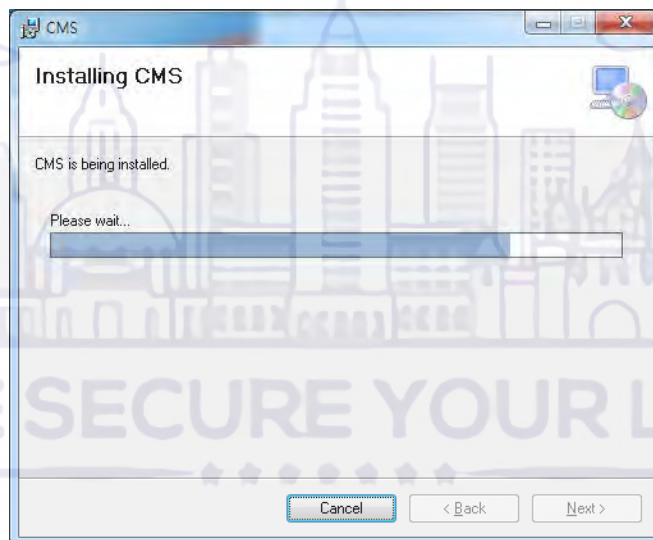

- ⑤ Click the Close after done with all installation tasks.

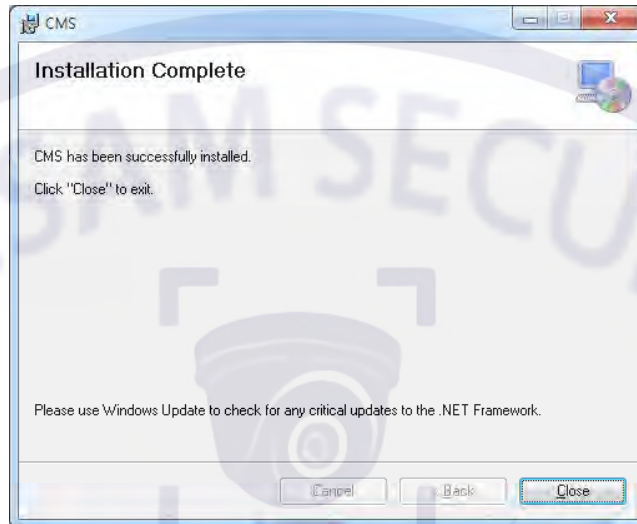

- ⑥ CMS installation is completed.

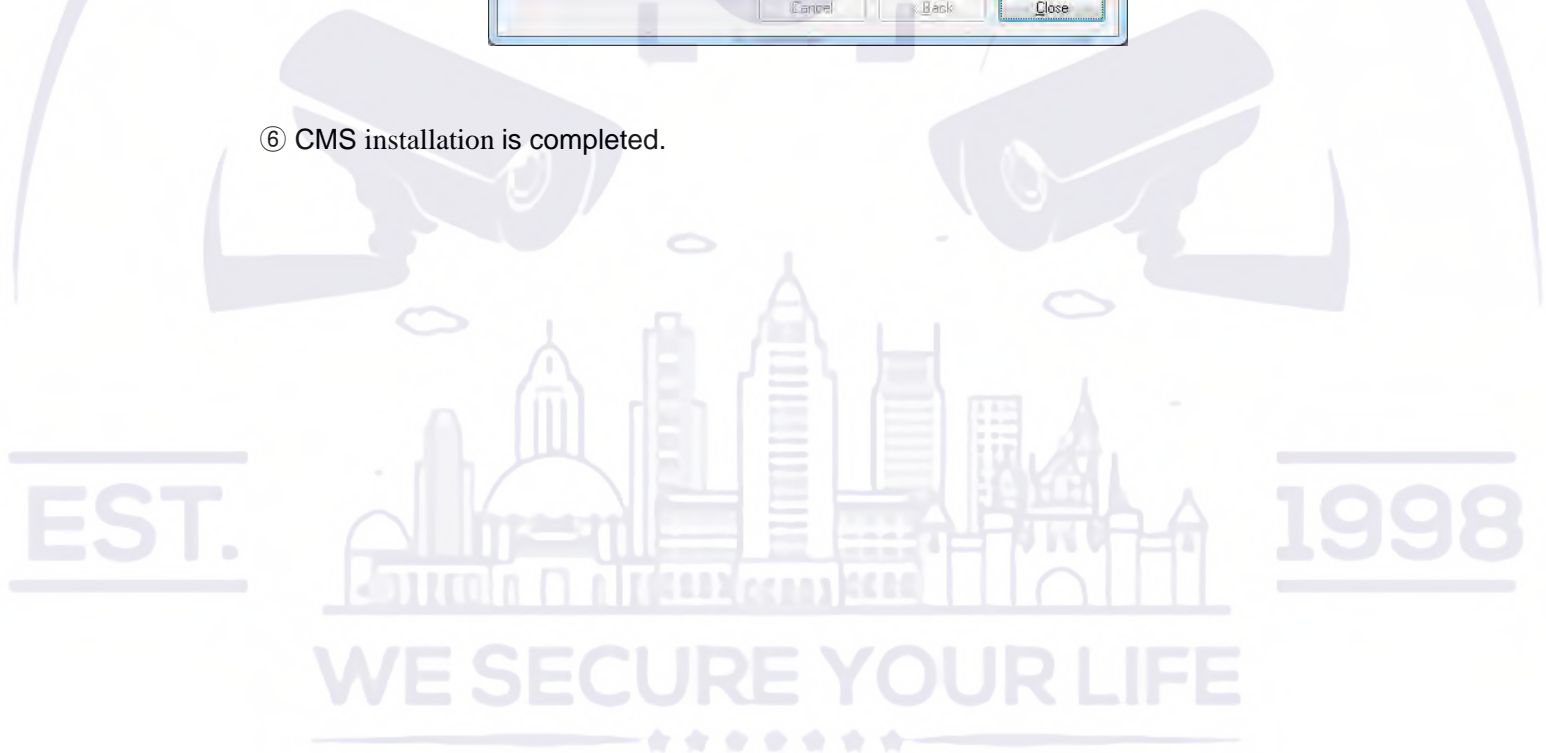

A-2. Mac CMS Installation


This CMS supports Mac OS X 10.6.8 or later.

For the first installation, you have to log in your Mac with an administrator account. If you log in with other account, it would be not installed t

- ① Insert the enclosed CD and double click CMSInstaller.pkg. CMS installer program is operated.




- ② Click Continue for installation.

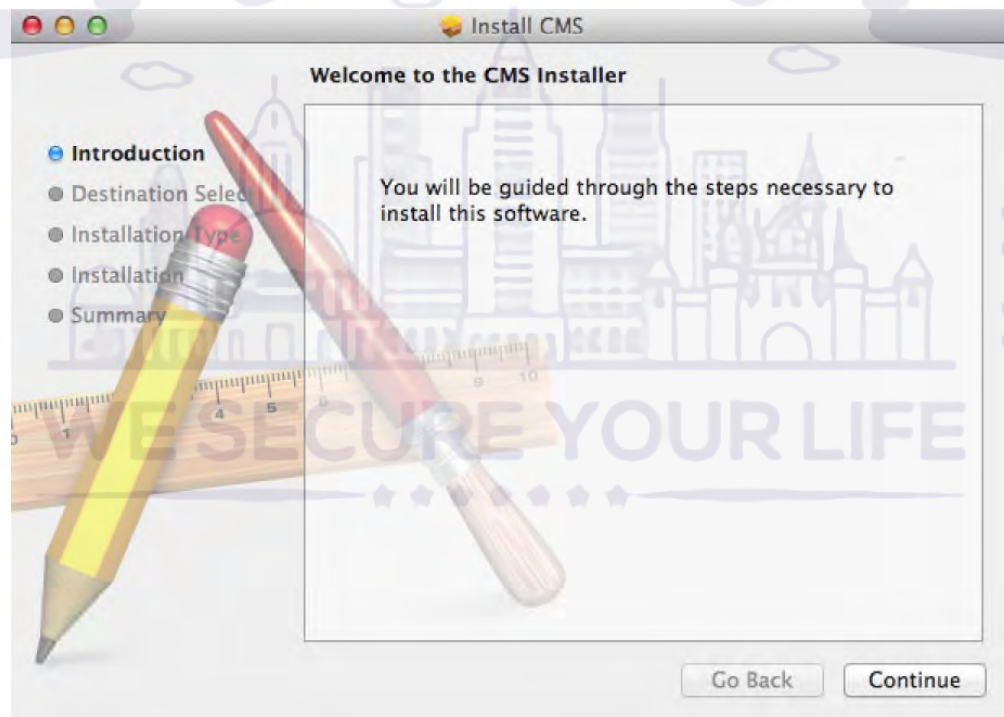


③ Type your password to install CMS program.



④ Configuring the installation.

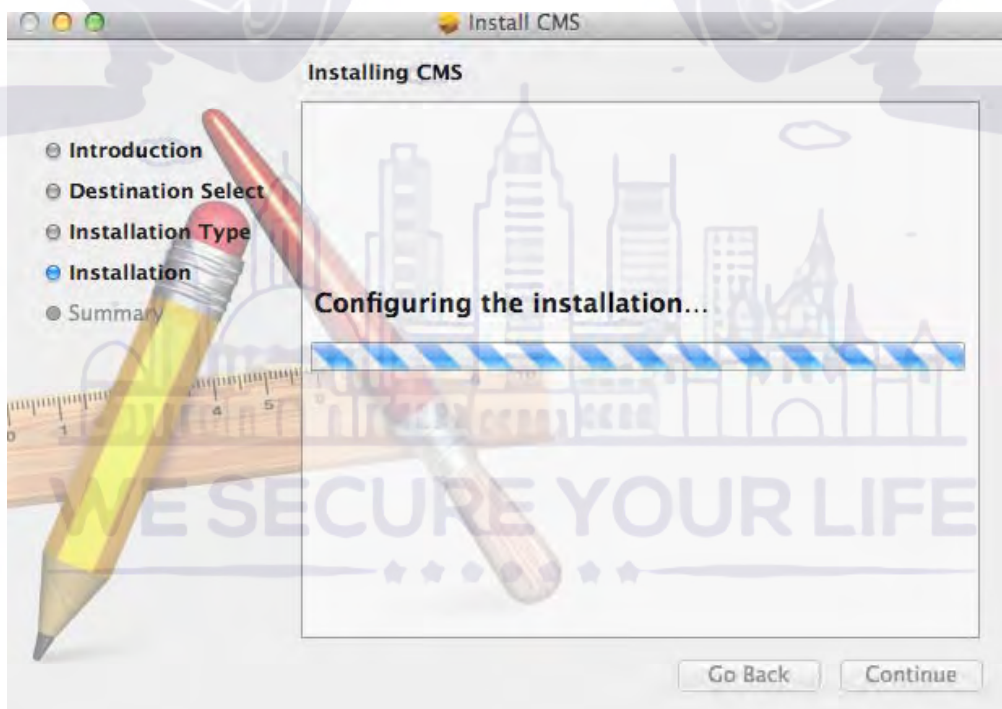

- ⑤ After the installation, click the close button.

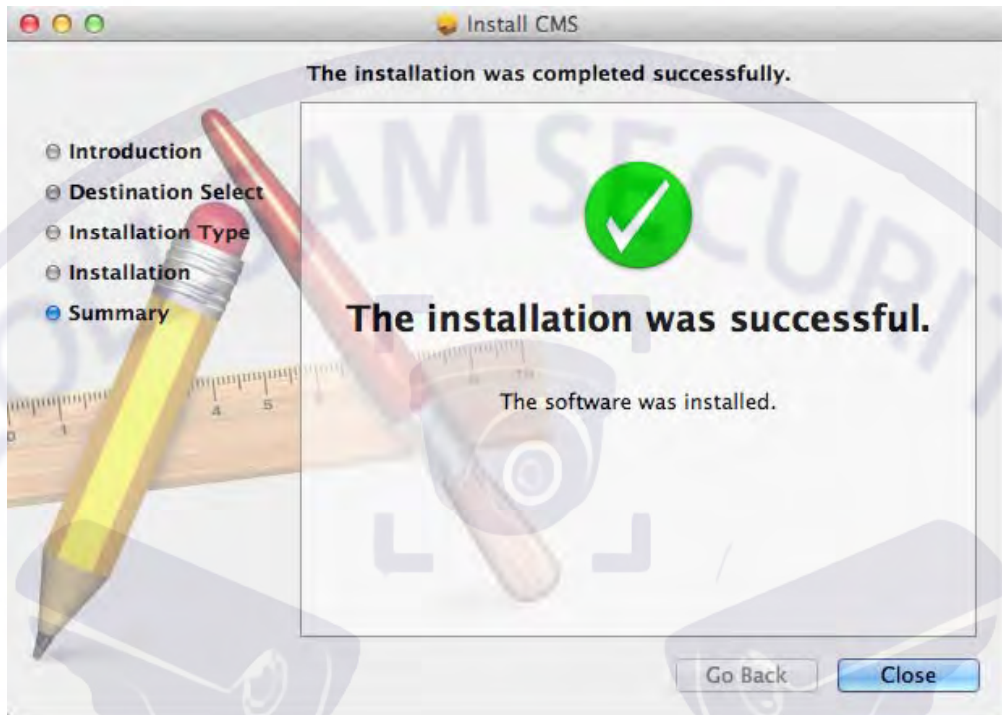

A-3. CMS Web installation (CMS for windows)

CMS web is a client program using web browser. It supports IE8 or higher.

- ① Open internet browser on PC
- ② Type the internet address to connect the DVR you want to connect.




EST.


1998

WE SECURE YOUR LIFE


- ③ When you try to connect it at first, Plug-in message will be pop up. Click the Ok.

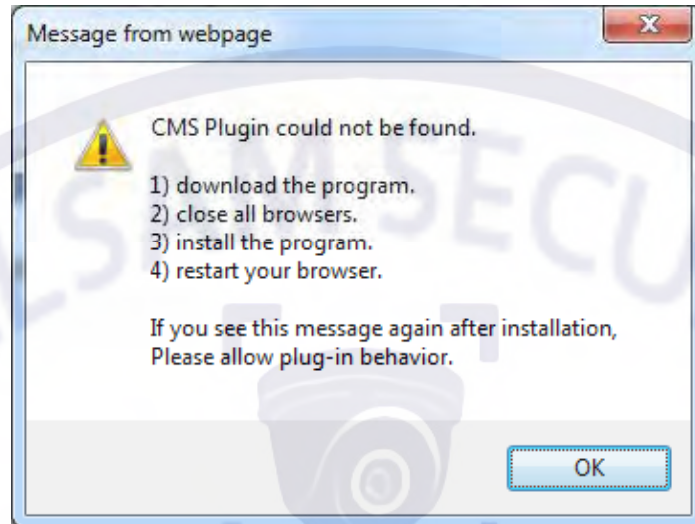

- ④ Click run or save to install the set up file.

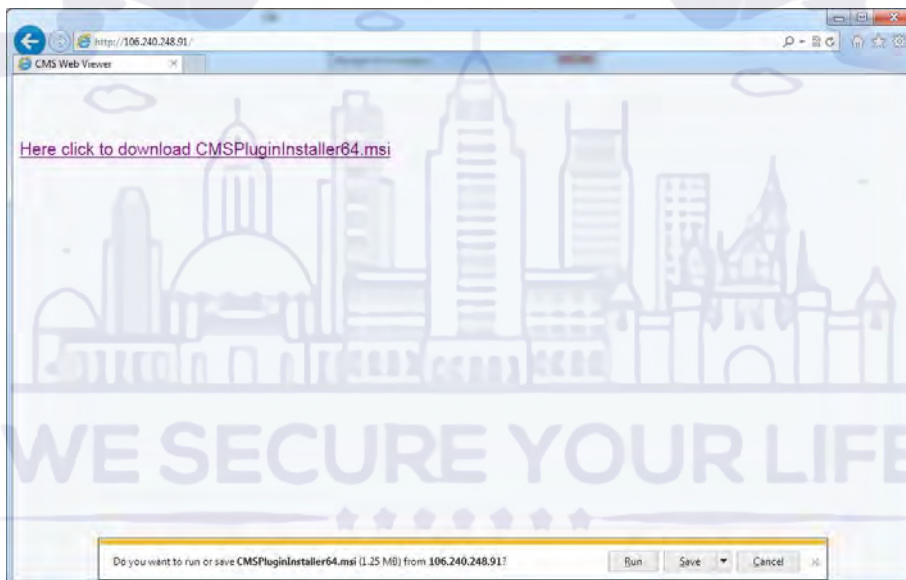

- ⑤ After done with Plug-in installation, close the internet browser and open it again.

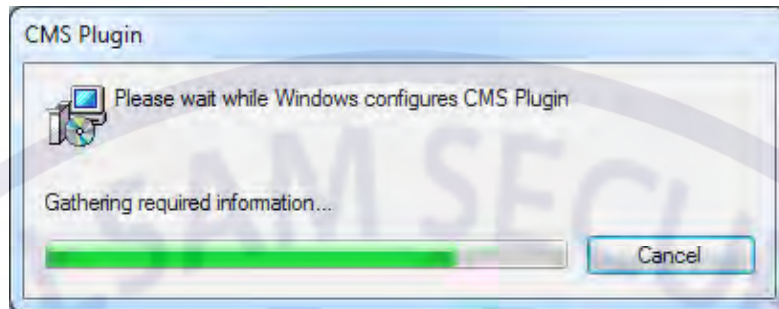


A-4. CMS Web installation (CMS for Mac)

CMS web is a client program using web browser. It supports latest versions of safari and Firefox., but it doesn't support chrome.

- ① Open internet browser on PC
- ② Type the internet address to connect the DVR you want to connect.




- ③ When you try to connect it at first, Plug-in message will be pop up. Click the Ok.

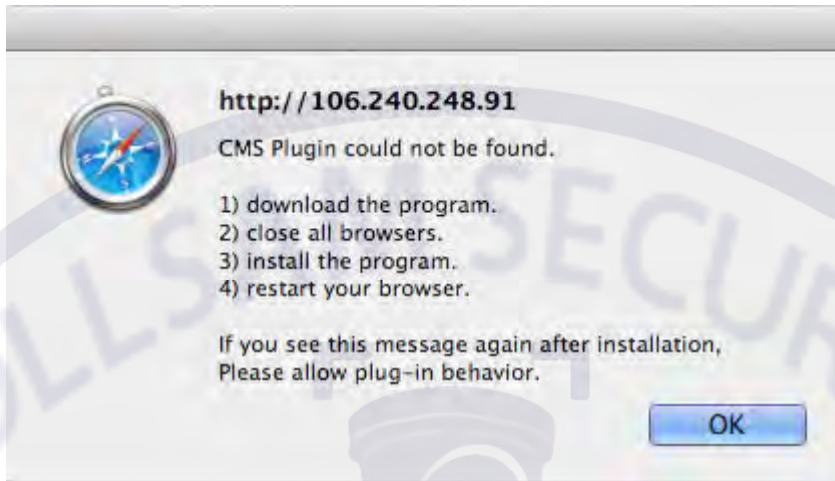


- ④ Click save to install the set up file.



- ⑤ Move to the path the file is downloaded from Finder. Double click the file.

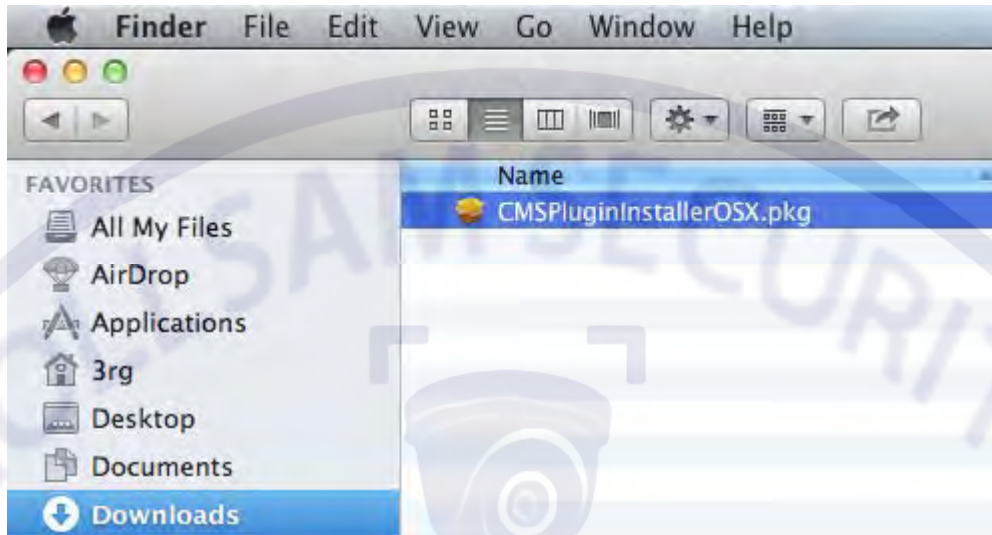


- ⑥ Click Continue for installation.

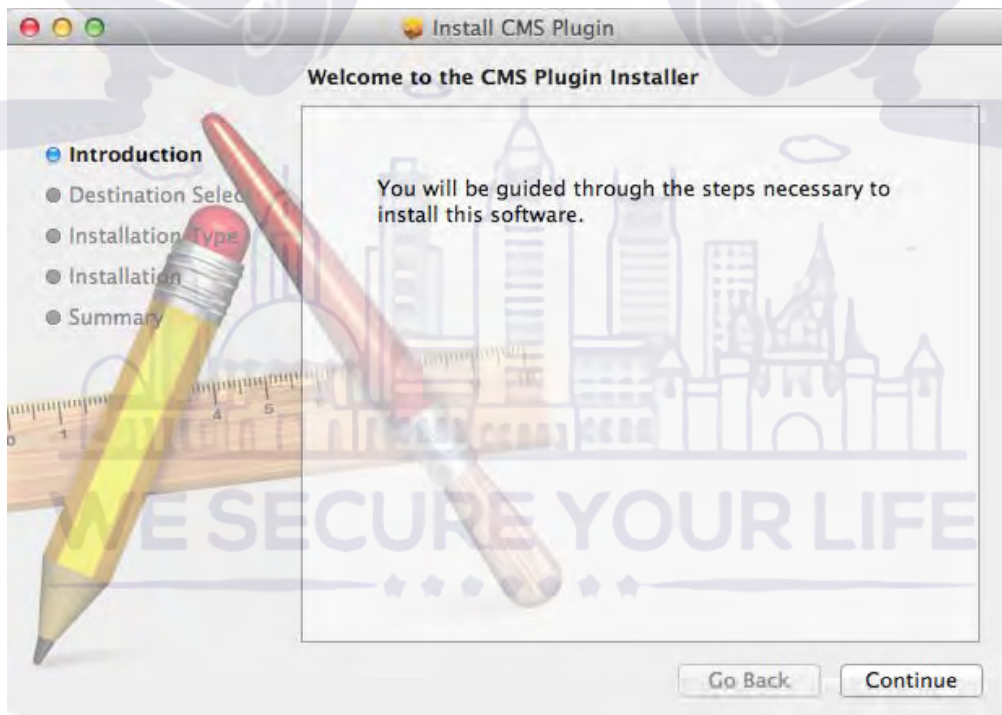


- ⑦ Type your password to install CMS plug in and click Install Software.



- ⑧ Configuring the installation.

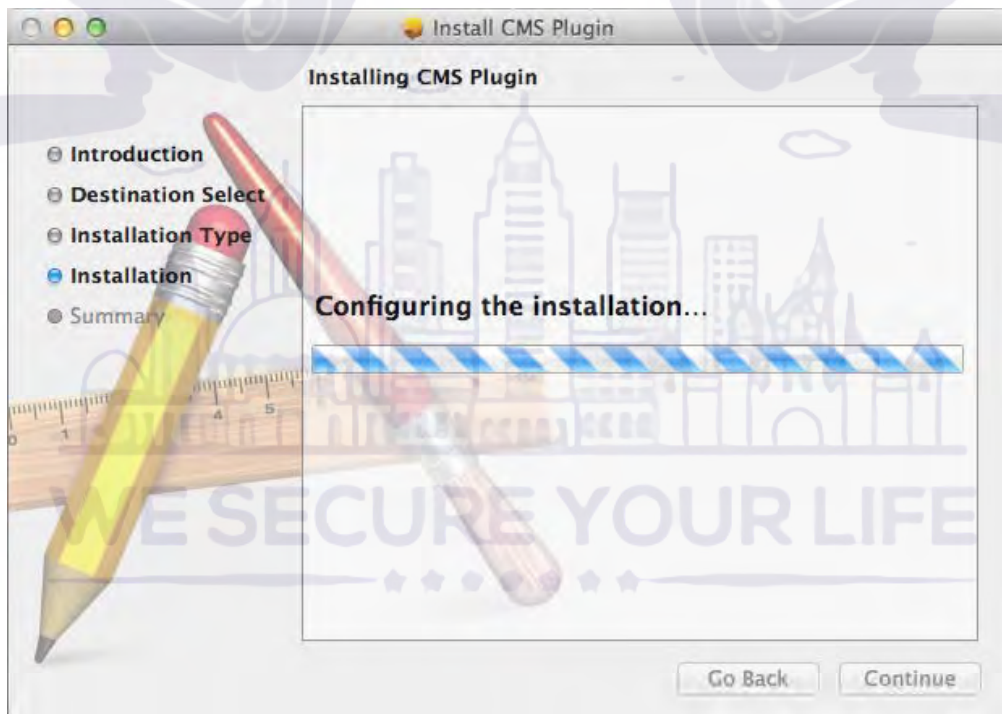

- ⑨ Click Restart to finish installing the software.

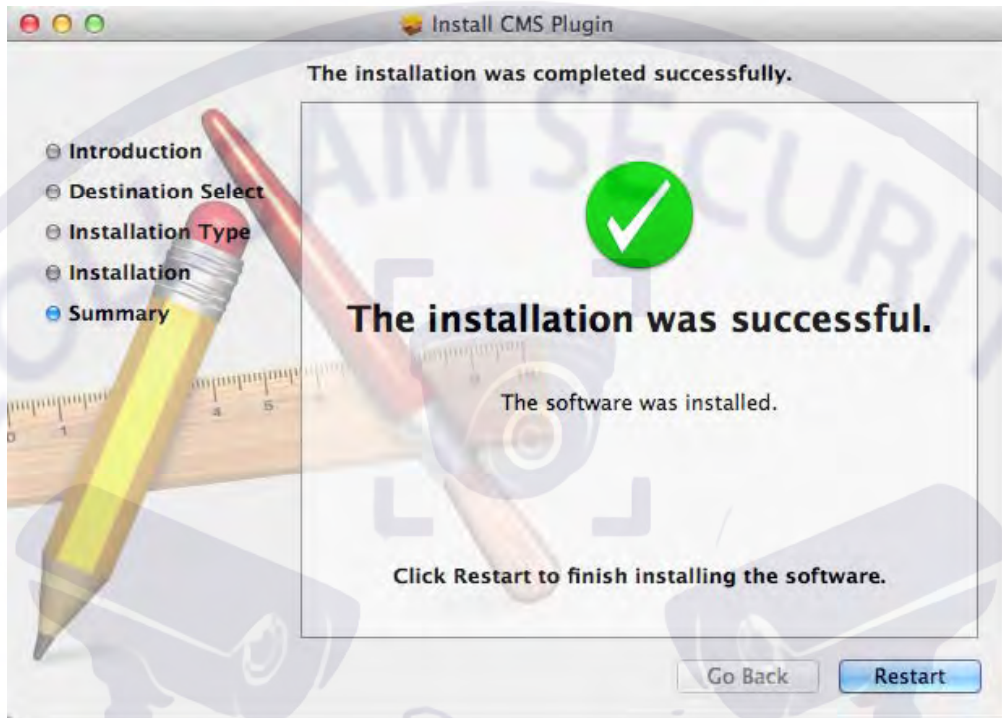

EST.

1998


WE SECURE YOUR LIFE

A-5. How to use CMS

After done with CMS installation tasks, it created a CMS icon on the desktop. In order to run the CMS, double click the icon on the desktop.




Type ID and password to log in.

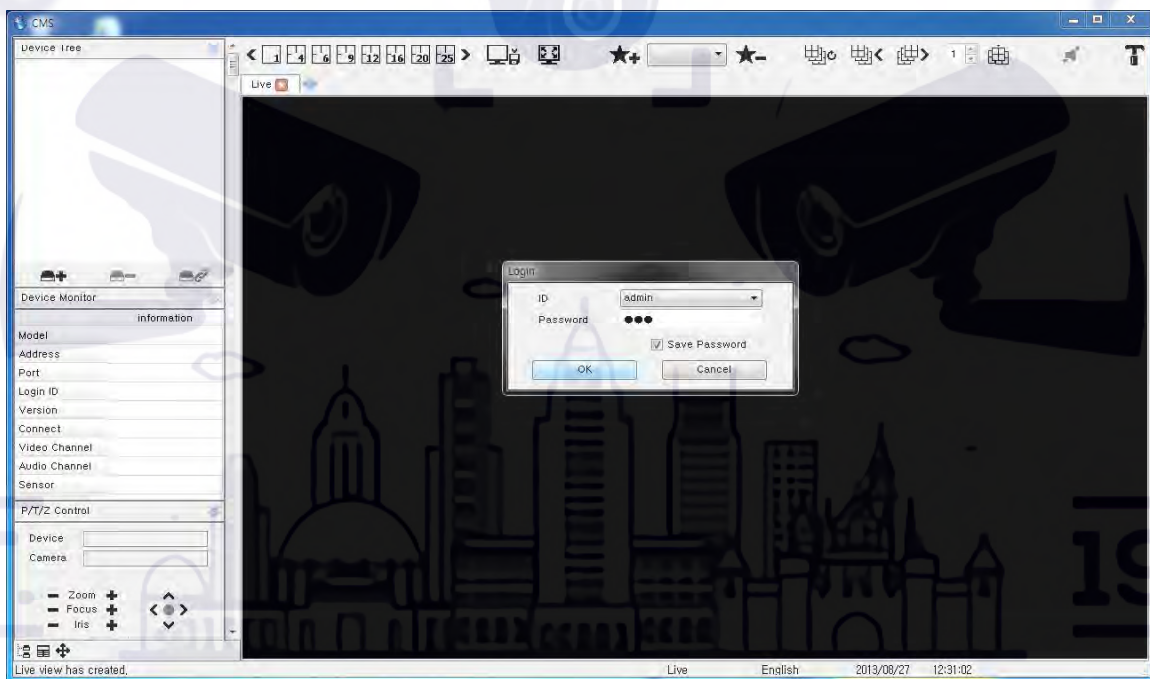


- ❖ There is no limit the number of concurrent connections on CMS in theory. However, if there are too many concurrent connections from on CMS that would be made slowly or not work.


The initial screen of CMS (Live view)

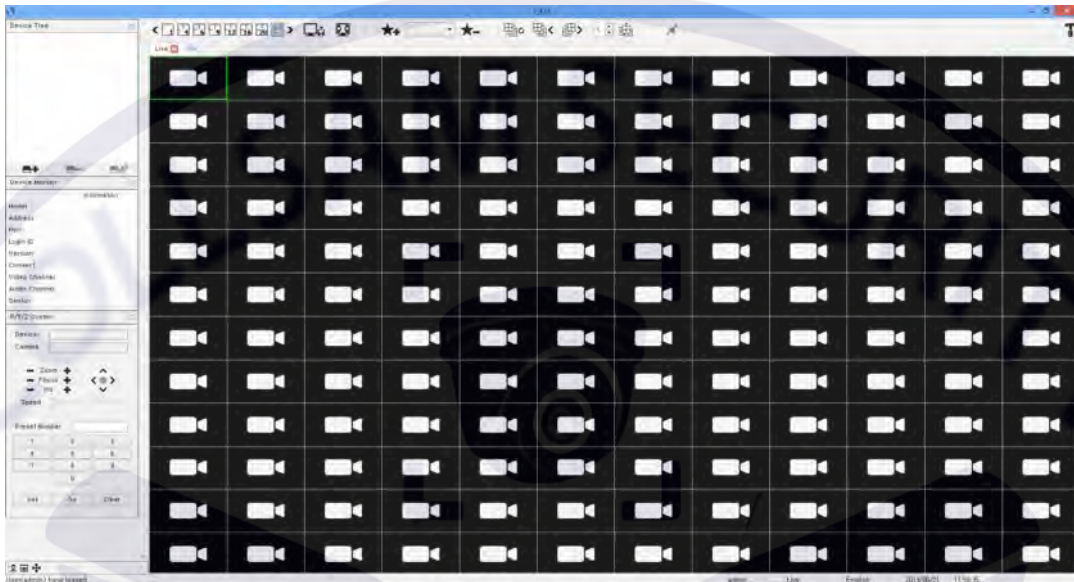

The initial screen of CMS (Search view)

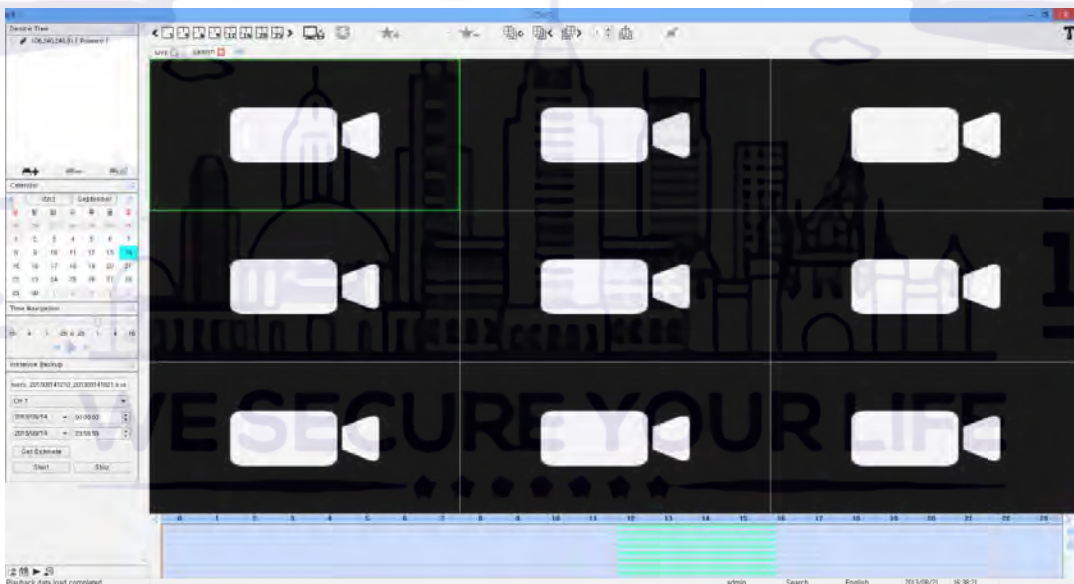


<CMS Composition>

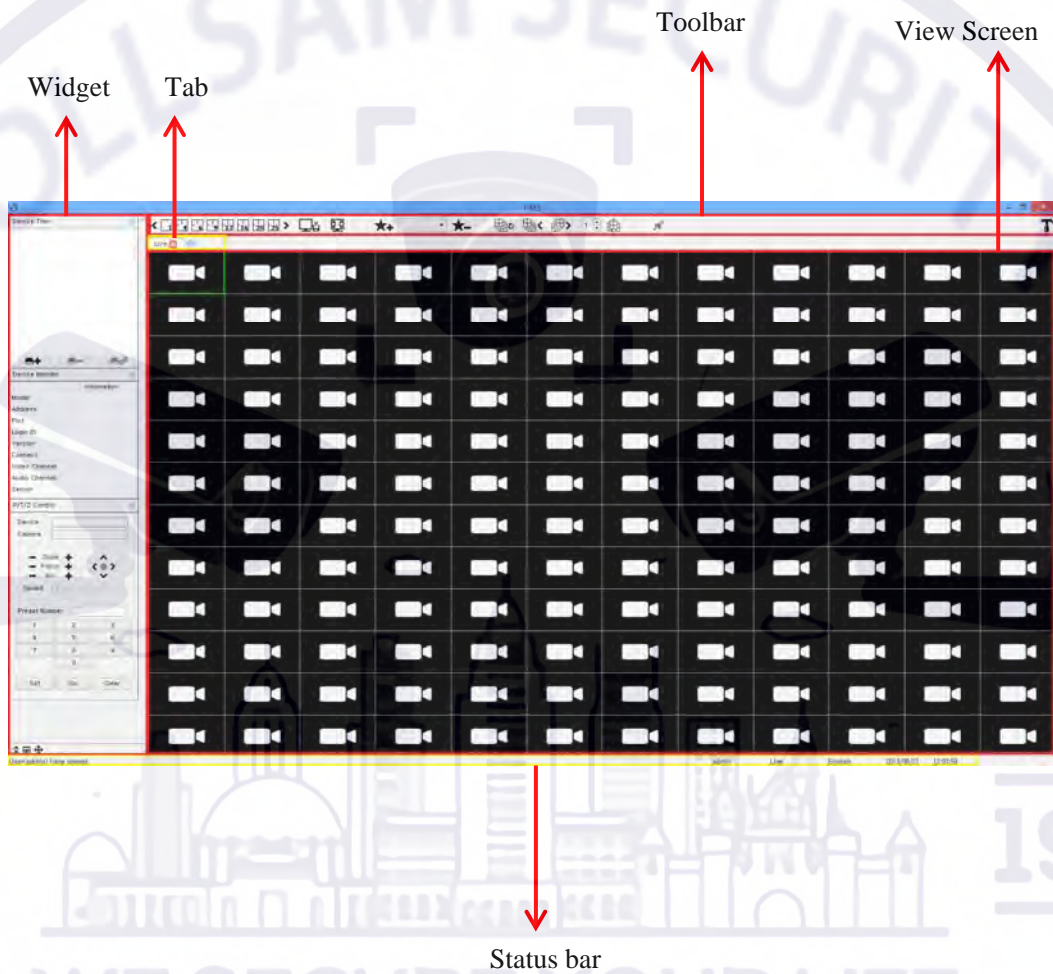


A.5.1 Widgets

You can load many functions of widgets to this area freely, and delete them.


- DVR List Widgets: add and connect to DVR devices.

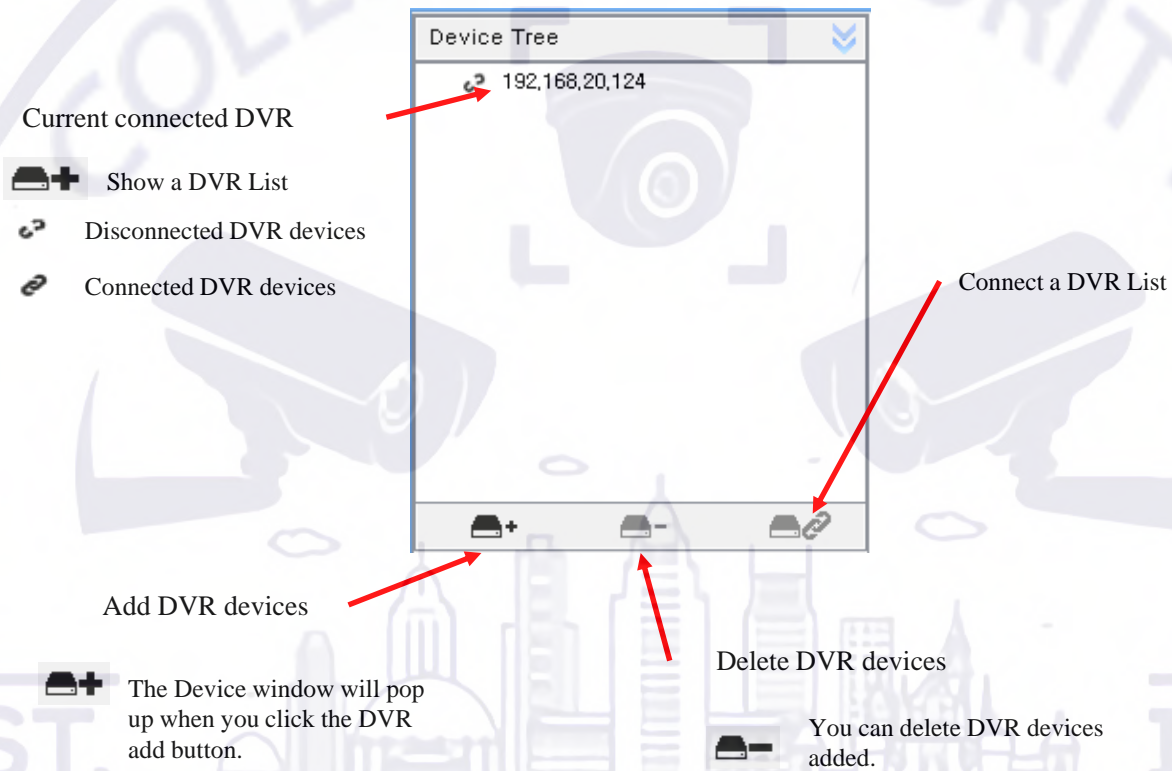

 The Device window will pop up when you click the DVR add button.

A dialog box titled 'Device' with a close button (X) in the top right corner. It contains five input fields: 'Name', 'Address', 'Port', 'ID', and 'Password'. At the bottom are 'OK' and 'Cancel' buttons.

 Delete DVR devices

 You can delete DVR devices added.

A blue warning dialog box with the title 'Warning!' and the text 'Are you sure you want to delete device?'. It has 'Delete' and 'Cancel' buttons at the bottom.

- Device Monitor Widget : Show the information of the added DVR devices.

Device Monitor	
information	
Model	-
Address	192,168,20,124
Port	8000
Login ID	admin
Version	-
Connect	FALSE
Video Channel	-
Audio Channel	-
Sensor	-

- Show the information of the connected DVR devices.
- The information is updated automatically depend on it's status connected or disconnected.


- Calendar Widget : Show the recorded data of date.

Calendar shows the recorded data of date on a DVR Device.


- If there is existed data on the date, it will turn sky blue. If there is no data on the date, you cannot move on it.

- If there is existed the recorded data on the same time and date, it will turn bold green. Another data window will pop up in case you choose bold green date as above figure.

- Pan tilt Control Widget : Control a video of pan tilt camera.

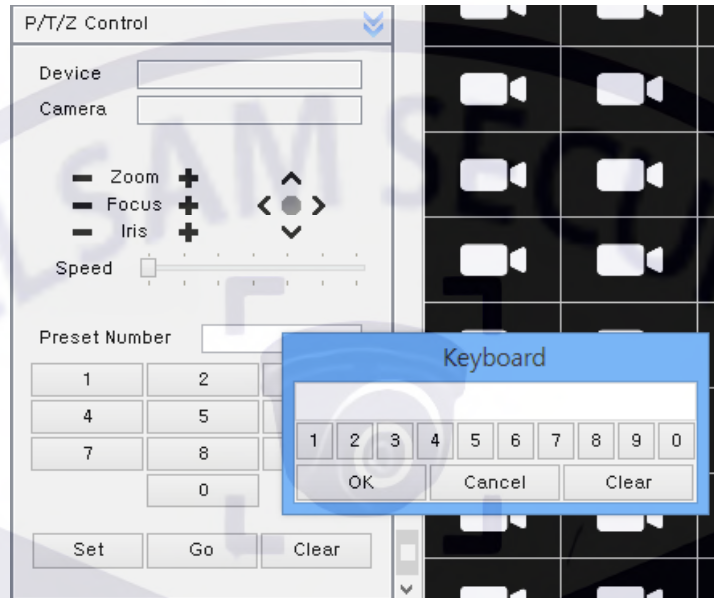

 1. Pan tilt Control



Zoom Control
Focus Control
Iris Control



Panning and Tilting Control

2. Preset

Preset is a function that memorize the temporary position of camera.

Set : Memorize a position of a number that you want to use from 1 to 256 with the Set button.

Go : Move the camera to the position of the number that you want to use with the Go button.

Clear : Clear the position of the number that you do not want to use with the Clear button.


※ How to type Preset Number

1. Use Preset Number at the bottom of keyboard window.
2. Use virtual Keyboard after you double click the Preset Number window.

A.5.2 Tab (Live Tab / Search Tab)

You can create taps for live or search video.

1. How to make a new tab

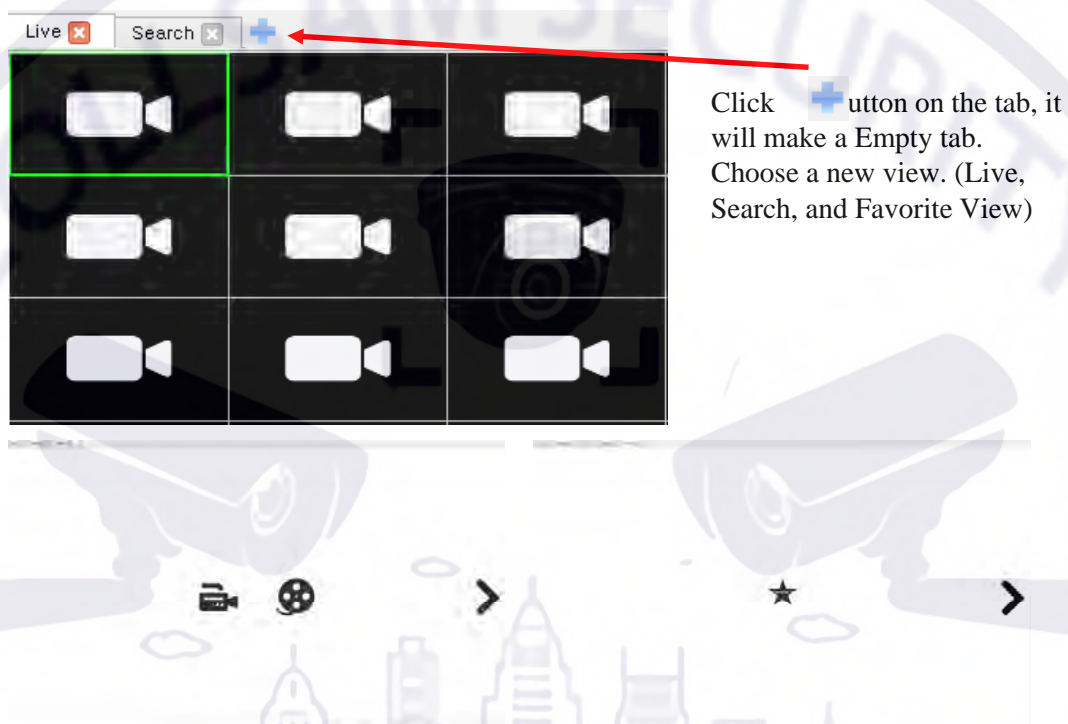

A new Live View is created when you click the icon.



A Search View is created when you click the icon. All the devices registered are showed up on Device Tree Widget. You can also choose the devices that is currently connected.



 

The screen will switch to Favorite View when you click the icon.(On Favorite View, it will switch to Empty tab that creates Live or Search tab.)




A new Live view is created split screen of video and in order of video as specified by user when you click the icon.

2. Play Time Line

You can check and change the time of recorded video on Search tab.

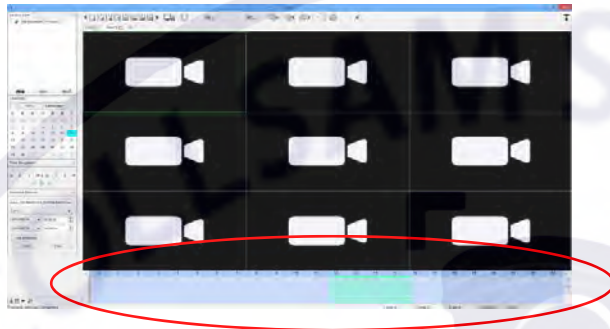

H mode (24 hour)

 


M mode(60 minute)



Change the mode of Time Line

- The time is loaded as shown in the figure when you choose the date of existed data from Calendar. (The green area)
- The time is shown when you put the mouse icon on the time area.
- Time Line Bar(a vertical orange bar) is the position where is playing now and moving depend on status of the recorded data.
- If you move the position of Time Line Bar with the mouse during video playback, it will play at the position.

- Instance Backup Widget : Backup a video.

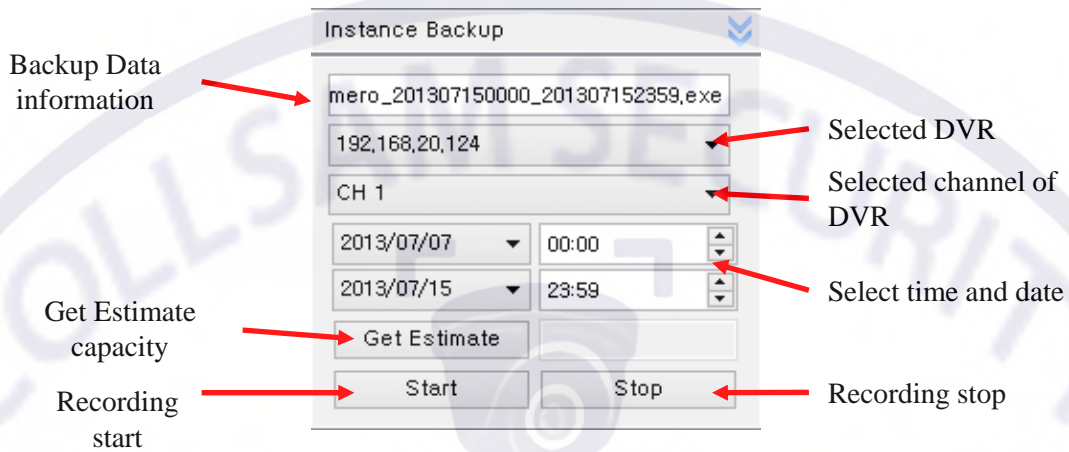

- Instance Backup is the function that save the recorded video on the PC from DVR device.

- If you create Search View, automatically the information of the device will be loaded as shown in the figure.


- You can choose the channel and device to be stored on the PC via combination box.

- If you change the time and date to be stored, automatically the file name will be also changed to the time and date.

- Get Estimate for the selected date and time from the start time until the last day that is stored on the PC estimated capacity is calculated and displayed.

※It is possible to change and save to AVI and EXE as a supporting format in configuration.(AUTO : EXE)

- Time navigation Widget: Control the playback with Time navigation Widget that can play, pause, play speed, and so on.

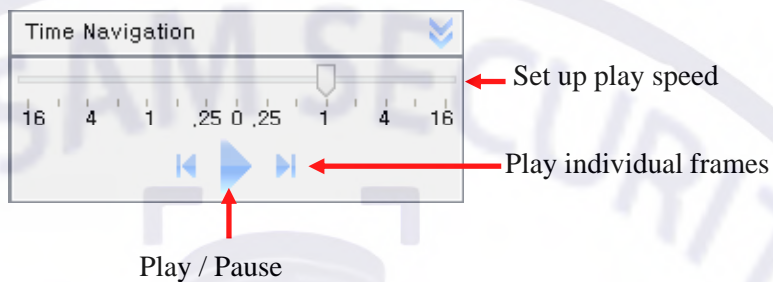



- Set up play speed (-16 ~ + 16).
- Play & Pause the recorded data.
- Play individual frames during a pause.

EST.

1998

WE SECURE YOUR LIFE

 A.5.3 Tool Bar

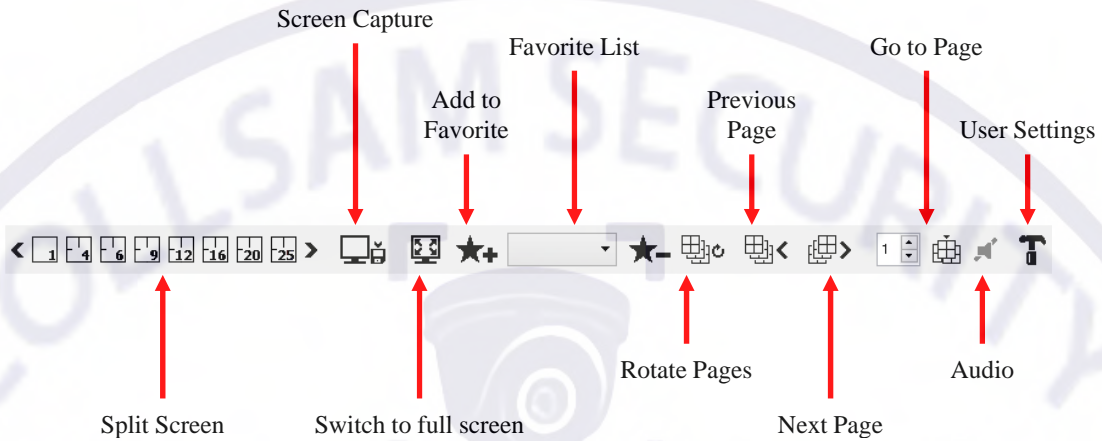

Change Live/Search View of split mode. (from 1 to 144)



Capture a screen of the current View. It is possible to change the store folder in configuration.



Maximize the window to full screen. Press ESC to exit full screen.



- Add / Delete favorite view state of the current device.
- Add a favorite with + button and delete a favorite with - button form combination box.
- The View is changed to the state of view that you chose the added favorite from combination box at the time. But only the DVR device you added is connected.



Rotate pages the current split screen by sequence time, but only the number of current split screen has less than video channels.



Rotate pages the current split screen to click the icons, but only the number of current split screen has less than video channels.



Rotate pages the current split screen to click the number of page, but only the number of current split screen has less than video channels.



Sound : Set sound of the selected channel. Each time you select channel, it will set sound of a channel again.




Configuration. Refer to 4.4.4 for detail




A.5.4 Configuration

 Click the icon and Configuration window will be pop up.

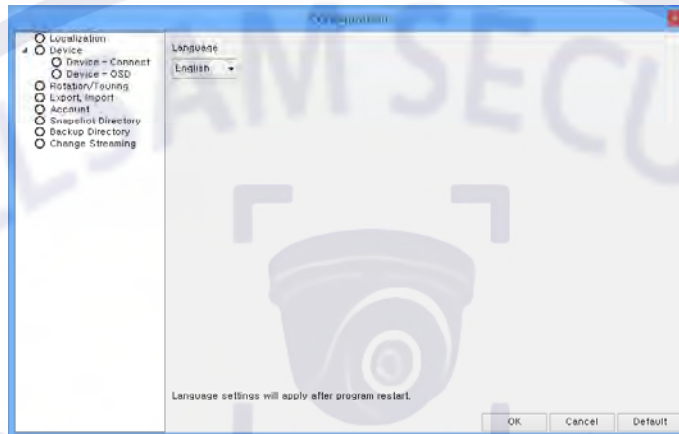


1. Localization

Language settings will apply after CMS program restart if you change to other language.

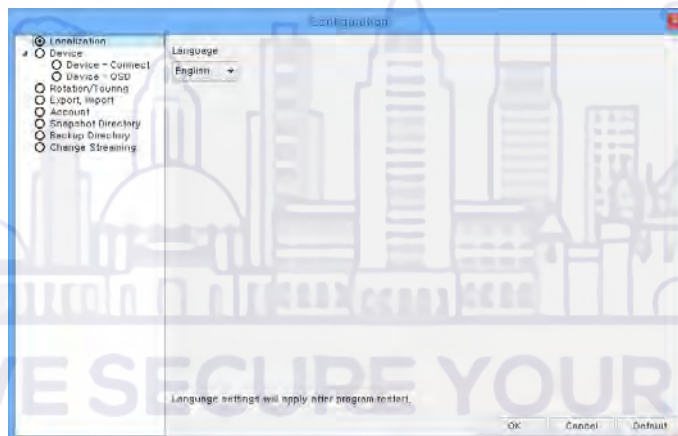


2. Device - Connect

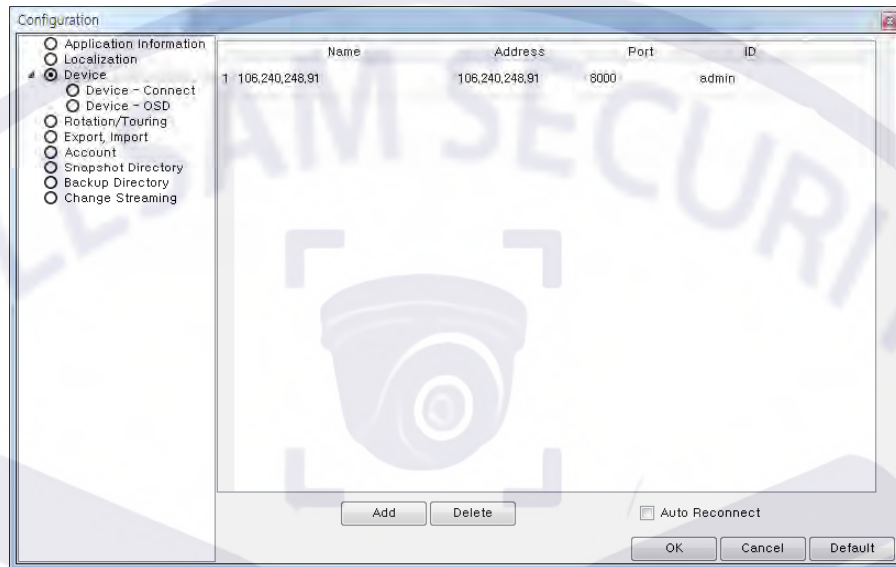

- Device-Connect shows the information of connected devices and is able to add and delete.
- Add devices with Add button as Device Tree Widget.
- If you change setting on Device-Connect, Device Tree Widget is also immediately updated.
- Connect the selected device on CMS if you check Auto Reconnect.

3. Device – OSD

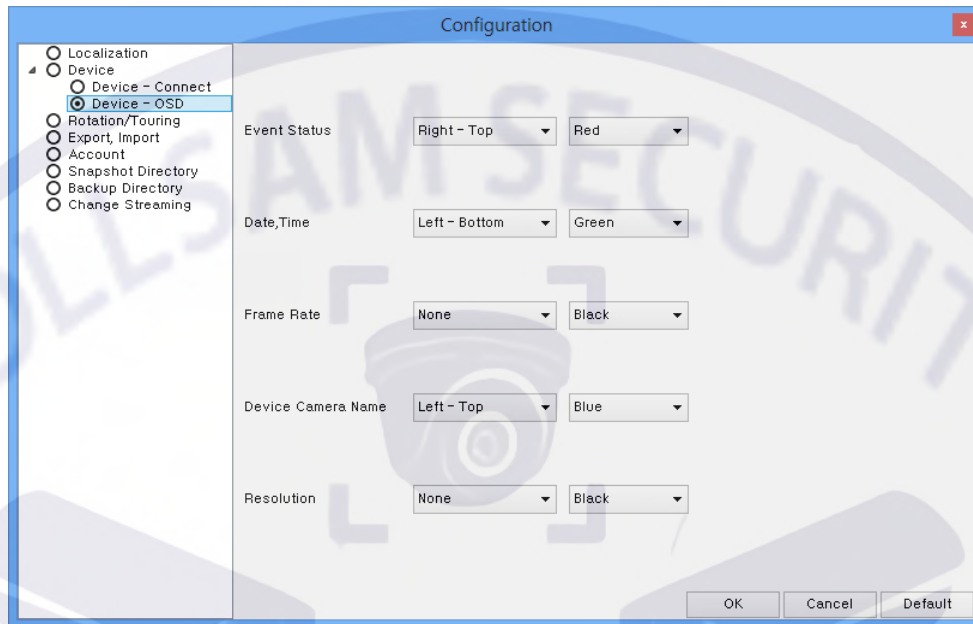


- Device-OSD : Select options and colors used for Event Status, Date/Time, Frame Rate, Device Camera Name, and Resolution.
- If you change setting on Device-OSD, it is immediately updated on screen.

EST.

1998


WE SECURE YOUR LIFE

4. Rotation / Touring

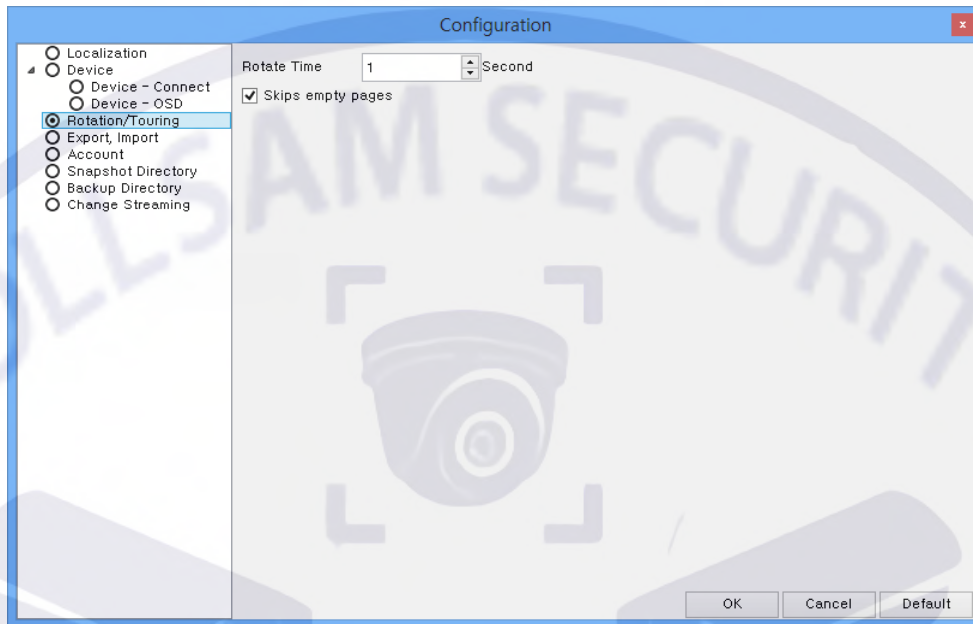


- Rotation/Touring : Set the rotate time of pages.
- It skips empty pages, if you check Skips empty pages.

5. Export. Import

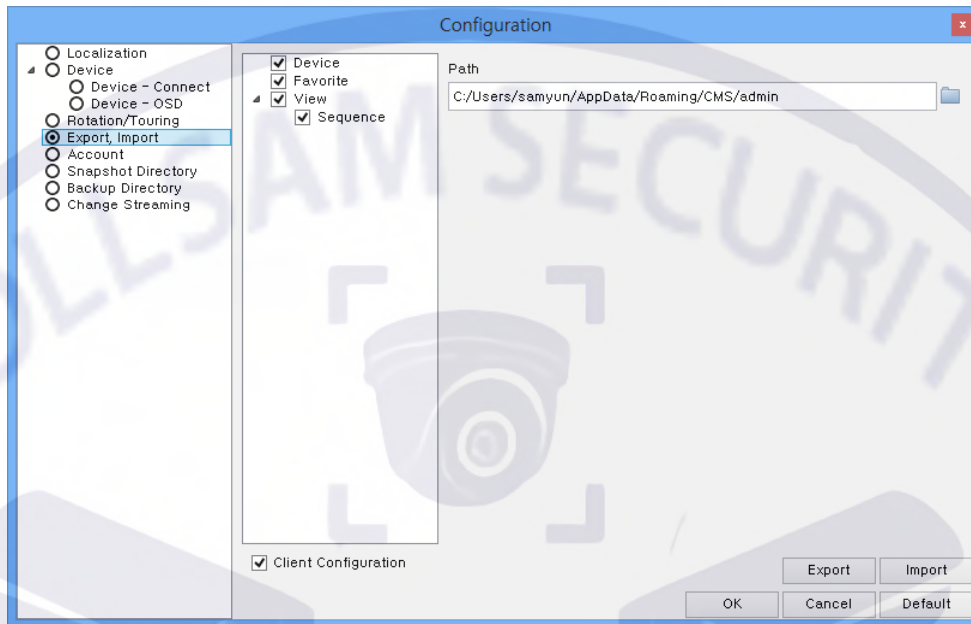


- Export, Import is a function that make other users use the same setting to have Device, Favorite, View, and Client Configuration when other users import the exported setting.
- Export : Export a set file to path.
- Import : Import a exported file. Log in the imported account and It will apply after CMS program restart.

6. Account

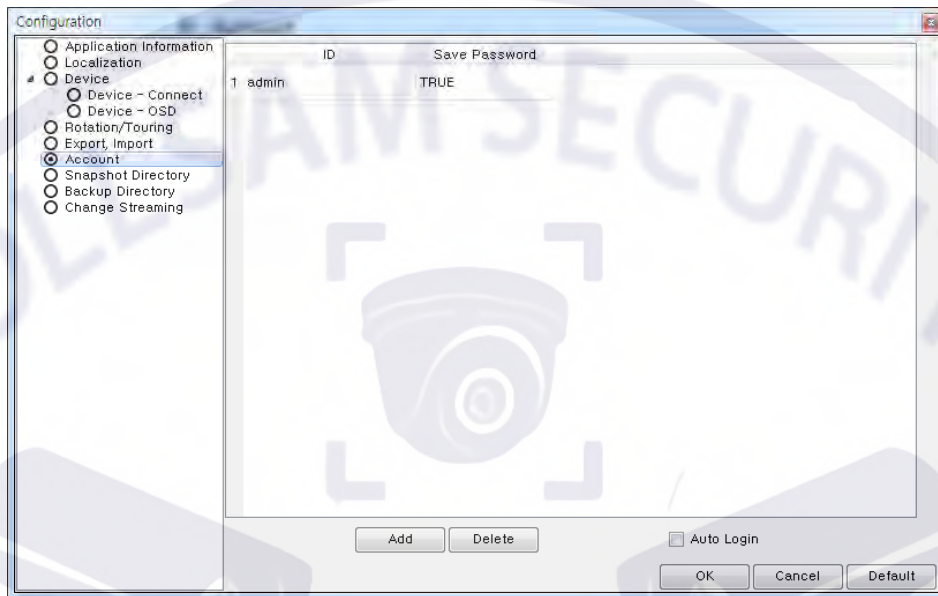

- Account : Add / Delete a user account.
- You can modify added account when you double click it.
- Auto Login : Connect a account that connected account at the last.

7. Snapshot Directory

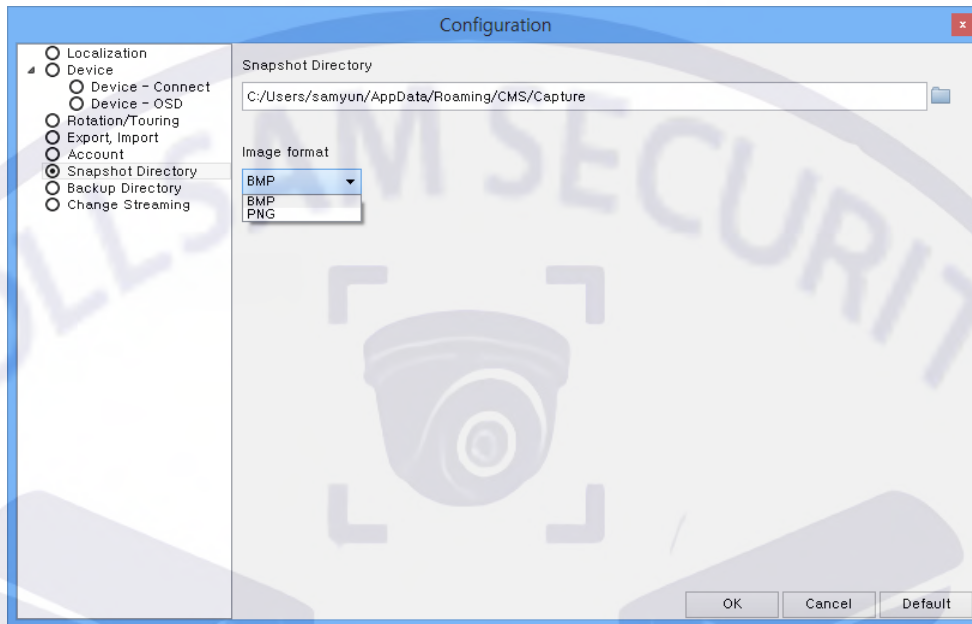


- Snapshot Directory : Set a path to be saved a Screen Capture.
- Image format : Set a image format BMP or PNG

EST.

1998


WE SECURE YOUR LIFE

8. Backup Directory

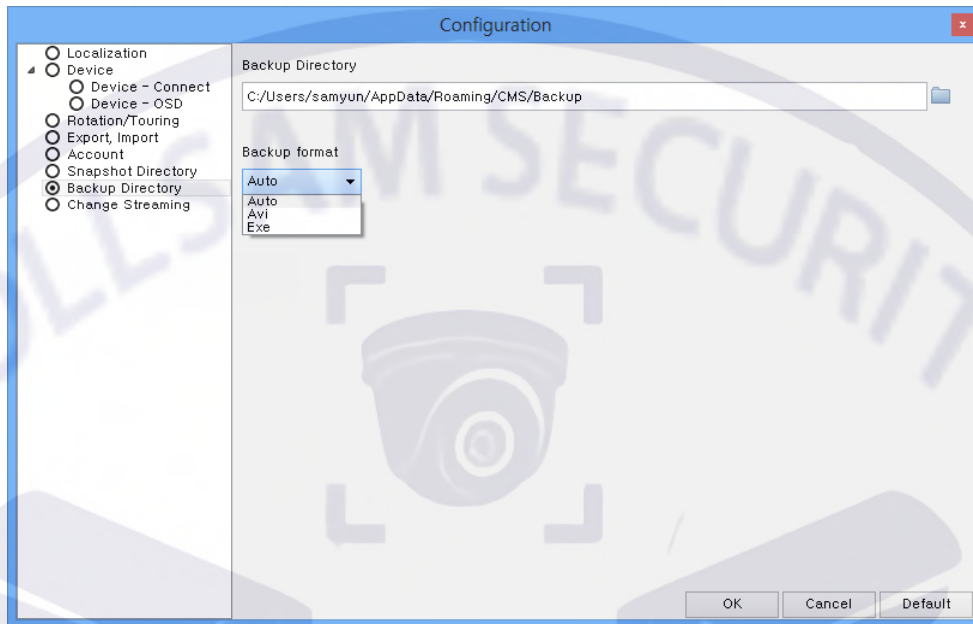

- Backup Directory : Set a path to be saved a backup file.
- Backup format : Set a backup format Avi or Exe. If you choose Auto, it will be Exe.

9. Change Streaming

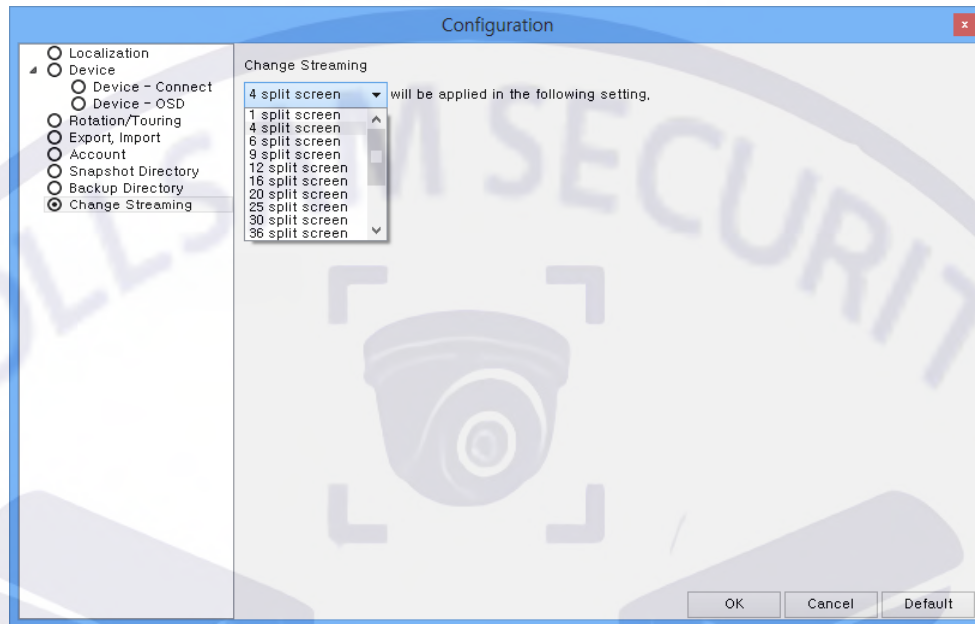


- Change Streaming : Set a change streaming by number of split screen.
- if you set a change streaming to 4 split screen as default, you will see a video with high resolution supporting devices up to 4 split screen. If you set a split screen more than 4 split, you will see a video with low resolution.

A.5.5 Status Bar

User(admin) have logged | admin | Live | English | 2013/08/22 | 10:31:53

- Status Bar : Show a status of CMS, current connected account, kind of view, Language, date, and time from the left.

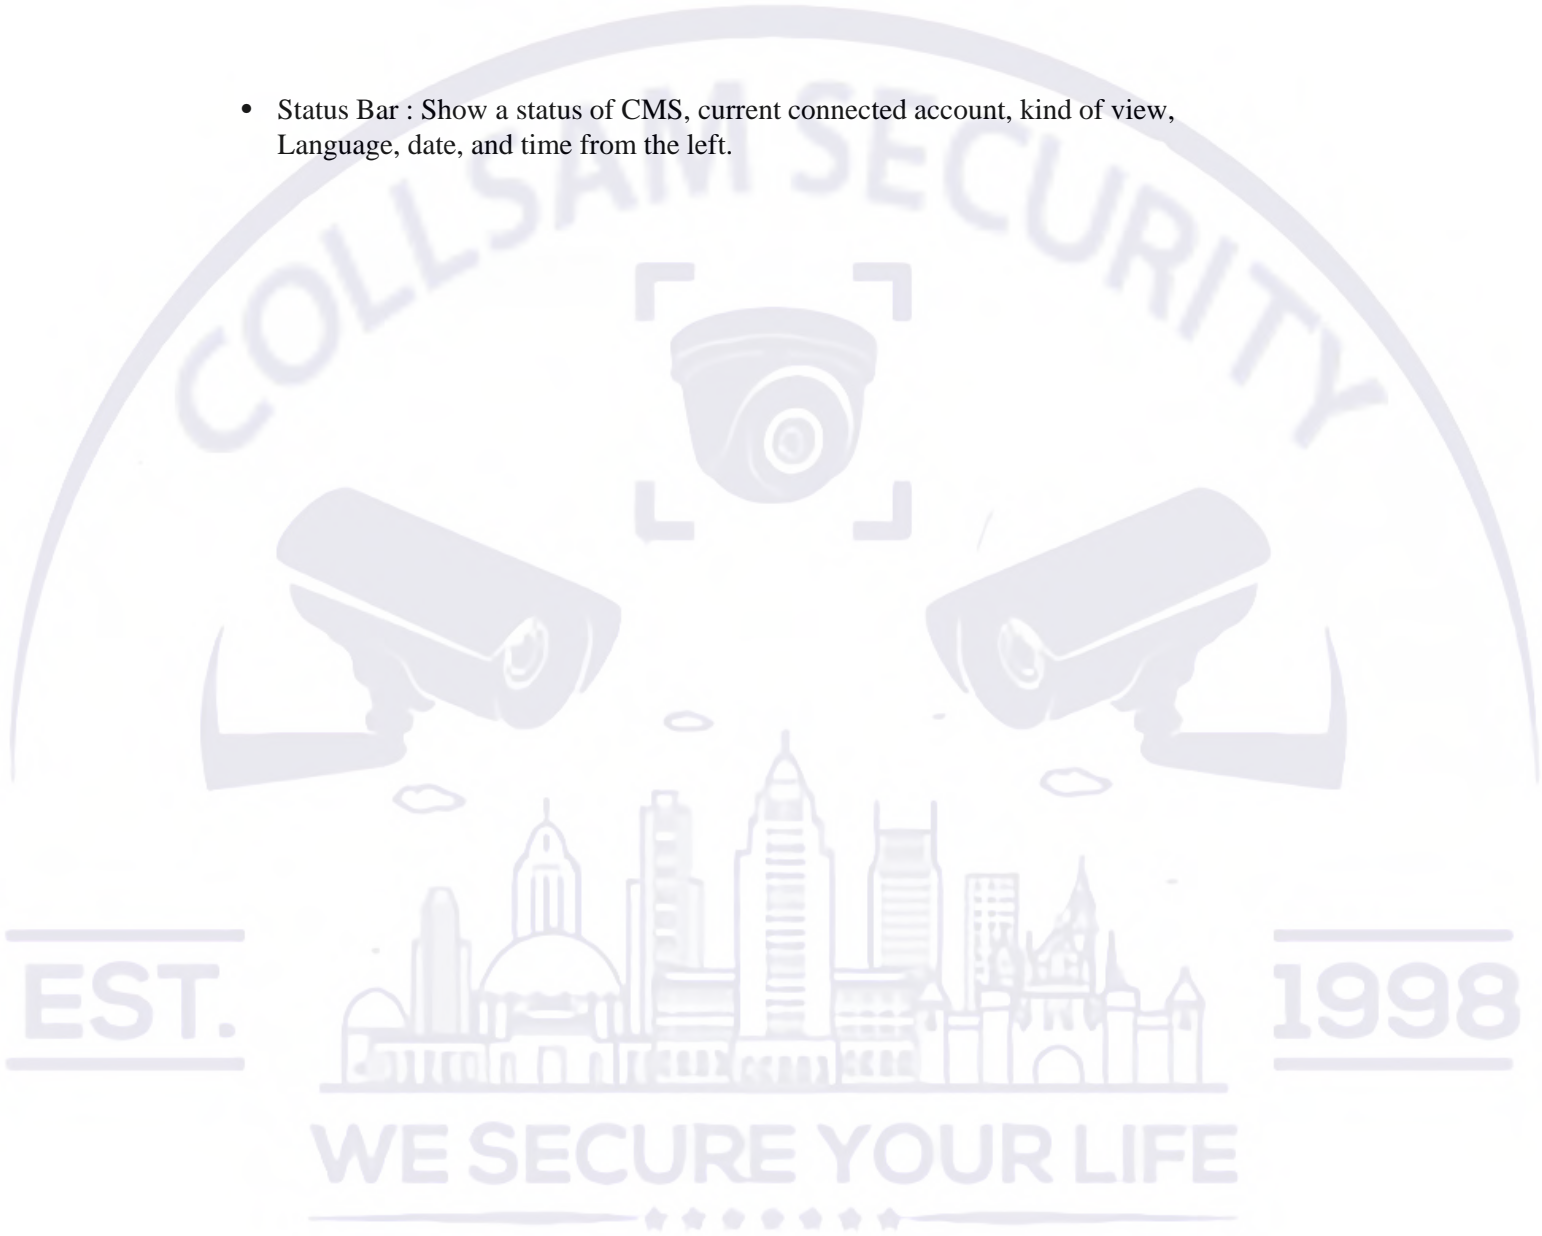

Appendix B Catcheye for Android mobile

The Catch Eye allows for you to monitor DVRs.
It now supports Live mode. Playback mode will be added soon.
It is easy and convenient to use.


The functions of Catch Eye:


- Live View
- 1/4/16 division
- Channel switching
- Server management
- PTZ control
- Digital zooming
- Snapshot
- Search

The functions operated by Touch:


- Single touch : switch channel, Pan/Tilt.
- Multi touch : Digital-Zoom, PTZ Zoom-In/Out

1. Starting

When you launch Catch Eye for the first time, You need to register new DVR servers in the screenshot (as) below. Tap the menu button and select the  to continue.

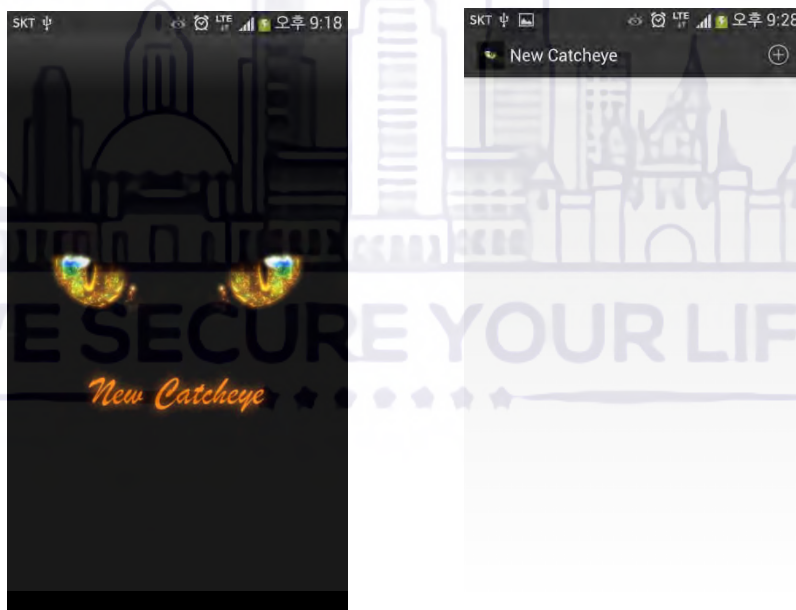

2. Server Management

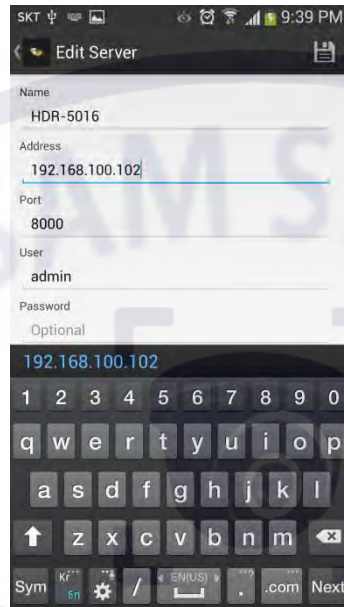


Enter the appropriate data of your DVR server.


- Server Name : Name that you want to associate with the DVR server.
- IP address : IP address or a DDNS name.
- Server Port : Port number(watch port in DVR setup).
- User Name : Username(default is "admin").
- Password : User password.

When you finish, tap the  button on the right upper side.

Tap the DVR information for a few second in order to modify the sever setting.

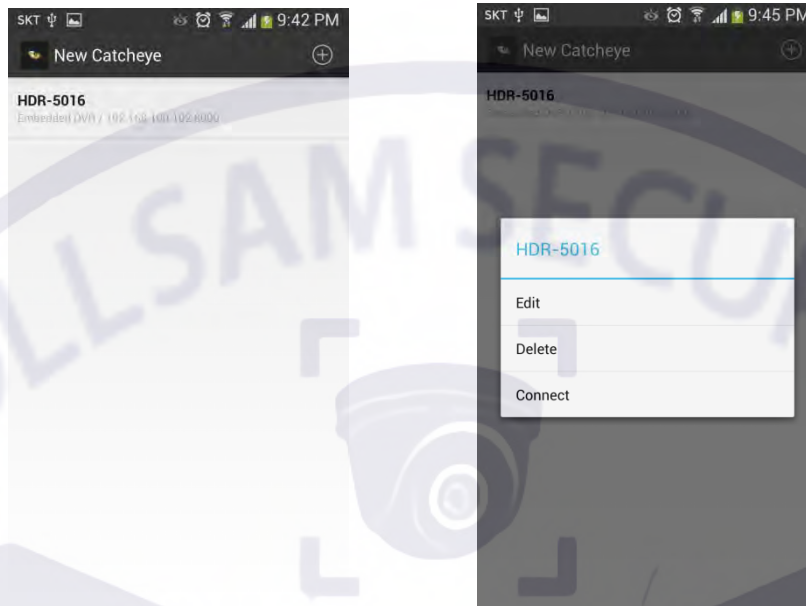

3. Live Viewing

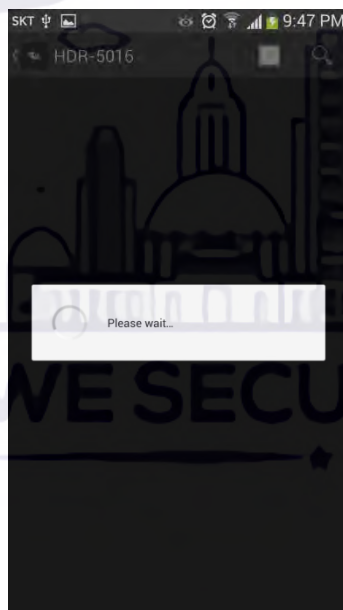


Tap the DVR server information. The app will show “Please wait” as below.


** Wait Until it receives DVR channel data, it will take a few seconds depending on the network environment. 3G will take a longer time than Wi-Fi.

The next screen shows the first channel on DVR live view.



 
4. Multi Channel Viewing

If you tap  buttons, sliding view will appear in live view so that you can change the channel or division that you want. Max channel depends on server's max channel, and division type is 1,4 and 16 division mode.(16 division mode works on products support over 16channels.

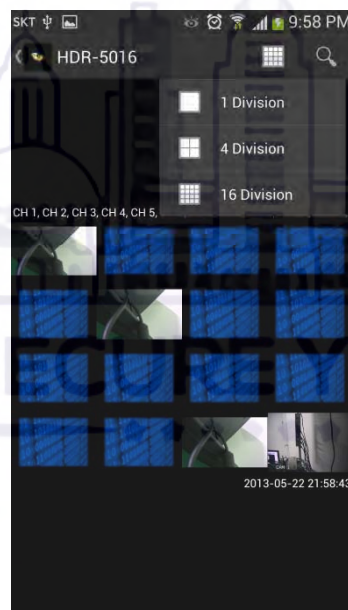

5. Image Saving


If you push the left button of phone, 'Save Image' will be appeared on bottom screen. If you save a snapshot, you can find in the phone's Gallery menu.

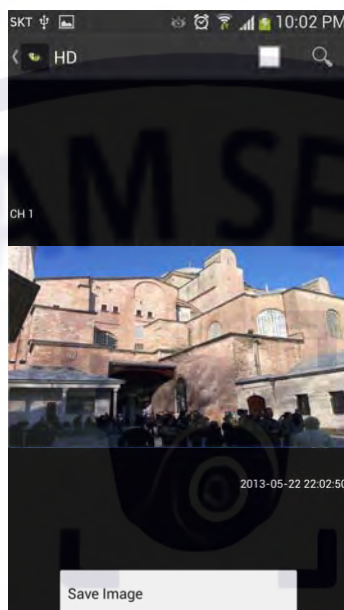

6. PTZ Control Mode

If the PTZ camera is set on the DVR , PTZ button will appear automatically and allow you to control PTZ camera.


Every PTZ function is controlled by touch. You can also control zoom-in, zoom-out, focus-in, focus-out functions by tapping menu buttons.

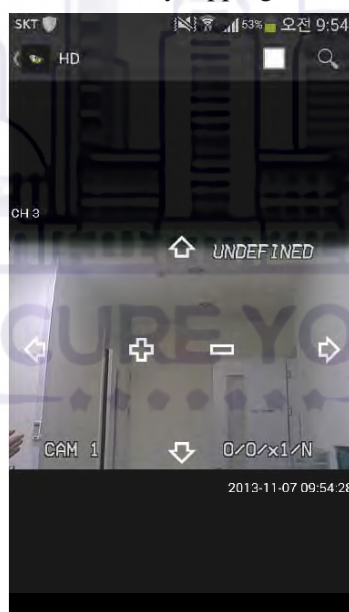

7. Digital-Zoom Mode


Digital zoom in and zoom out will be done by two finger touch and dragging like a smart phone zooming.

8. Search

If you tap the  button, you can search the recorded file.

- Select the wanted date.
- Drag the blue time bar as you wanted time

Also you can see the multi channel playback by choosing the 'Division' selection..

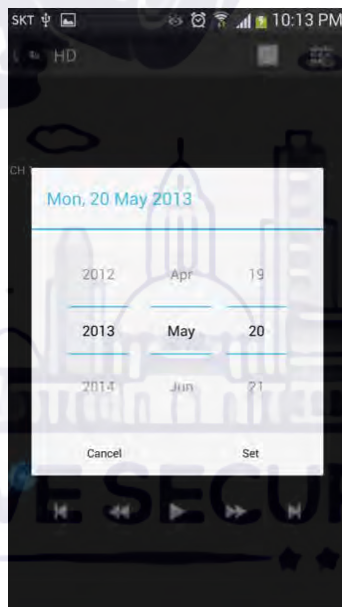

Appendix C Catcheye for iPhone

The Catch Eye allows for you to monitor DVRs.
It now supports Live mode. Playback mode will be added soon.
It is easy and convenient to use.


The functions of Catch Eye:

 
- Live View
- 1/4/16 division
- Channel switching
- Server management
- PTZ control
- Digital zooming
- Snapshot
- Search

The functions operated by Touch:

- Single touch : switch channel, Pan/Tilt.
- Multi touch : Digital-Zoom, PTZ Zoom-In/Out

1. Starting

When you launch the Catch Eye for the first time, You needs to register new DVR servers in the screenshot as below. Tap the  button to continue.



EST. 1998
WE SECURE YOUR LIFE

2. Server Management



Enter the appropriate data of your DVR server.

- Title : Name that you want to associate with the DVR server.
- IP address : IP address or a DDNS name.
- Port : Port number(watch port in DVR setup).
- Username : Username(default is "admin").
- Password : User password.
- Server Type : Embedded DVR, HD DVR, PC DVR

When you finish, tap the "Save" button.

The "Edit" button modifies the information of the selected DVR Server.



3. Live Viewing




Go ahead and tap the DVR server item in Catcheye screen when you register DVR server. The app will show "loading circle icon" as below.


** Until it received DVR channel data, it takes a few seconds(it depends on network environment. 3G will be longer than Wi-Fi)

The next screen shows DVR live view for first channel.




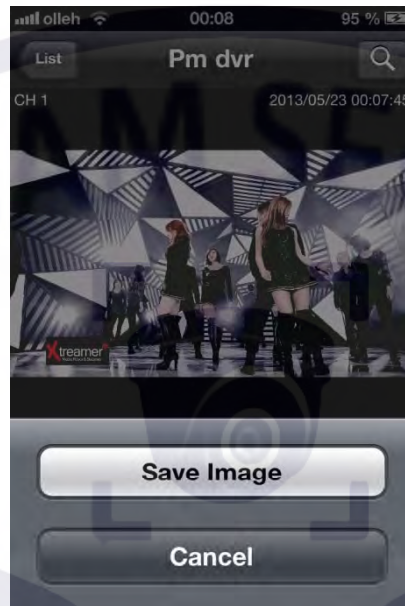
4. Multi Channel Viewing

If you tap  button, you can choose 4, 8 and 16ch viewing in live view and you can change channel and division mode. Max channel depends on server's max channel, and division type is 1 channel, 4 channel and 16 channel mode.

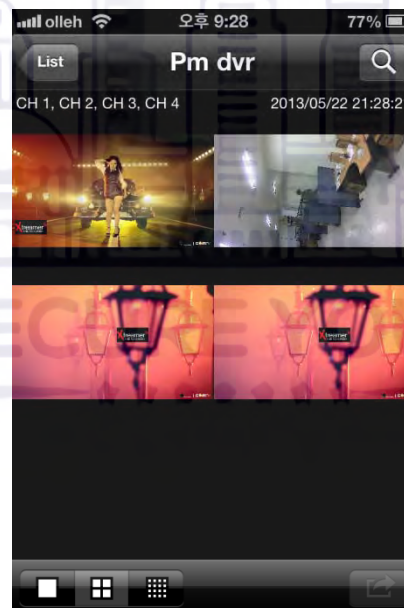

5. Image Saving

You can save the snapshot by tapping  button. If you capture image by tapping "Save Image" button, you can find image file in iPhone's photo album menu.



6. PTZ Control Mode


If the PTZ camera is set on the DVR, PTZ button will appear automatically and allow you to control PTZ camera

Every PTZ function is controlled by touch. You can also control zoom-in, zoom-out, focus-in, focus-out functions by tapping menu buttons.

7. Digital-Zoom Mode

Digital zoom in and zoom out will be done by two finger touch and dragging like a smart phone zooming.

8. Search

If you tap the  button, you can search the recorded file.


- Select the wanted date from the calendar.
- Drag the blue time bar as you wanted time

Also you can see the multi channel playback by choosing the 'Division' selection..




Appendix D How to Connect xbox 1

1. Connect EXTEND FTP cable to Receiver (upto 350ft/100m).
Refer to http://en.wikipedia.org/wiki/Twisted_pair about the FTP cable.
Connect Monitor and Wired/Wireless Mouse to the Receiver

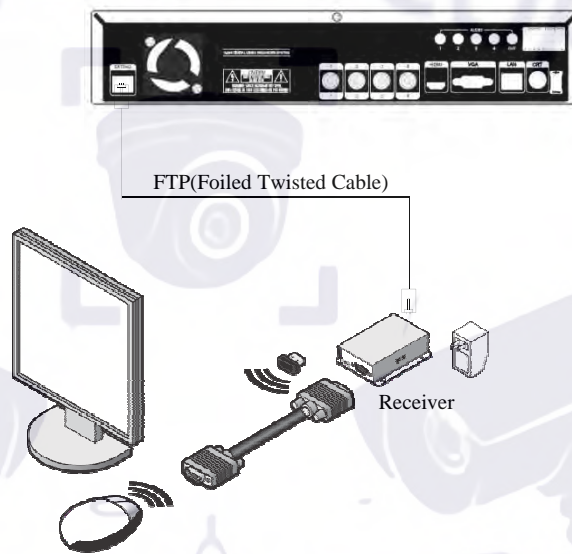

2. Because all the case has different cable length, you should adjust the GAIN and PHASE in Receiver to get a most proper VGA output. You can use the small cross screw driver for adjusting at the edge of Receiver.

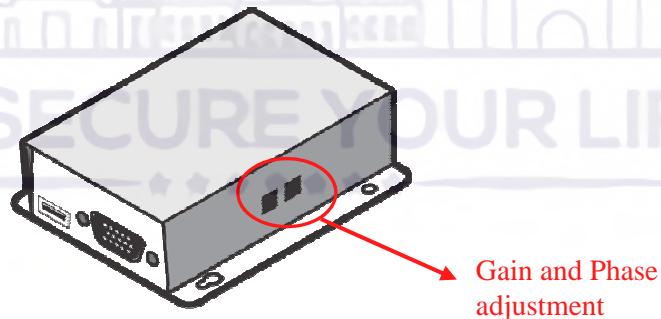

3.This is the whole diagram.

