



Powering CCTV Cameras Locally

Your security camera will require a power supply. Many cameras require a 12V power supply, as connecting the wrong power supply may void your warranty.

Powering CCTV Cameras Remotely

DC power TR-PIGTAIL-TB-F pigtail is used to connect your security cameras to your power distribution system or power adapter. It features a male coaxial power plug on one end to two bare wires on the other. 6 inch (15.24 cm) connector for CCTV camera power.

- DC 2.5 (internal) x 5.5 (external) mm female
- Terminal Block 2 pin
- Positive pole inside, negative pole outside
- 5.0 mm pitch

Distributed By

Collsam Distributions; Inc.

Sales: (951) 282-8707 sales@Collsam.com

Support: (213) 210-5744 support@Collsam.com

Website: www.Collsam.com

